



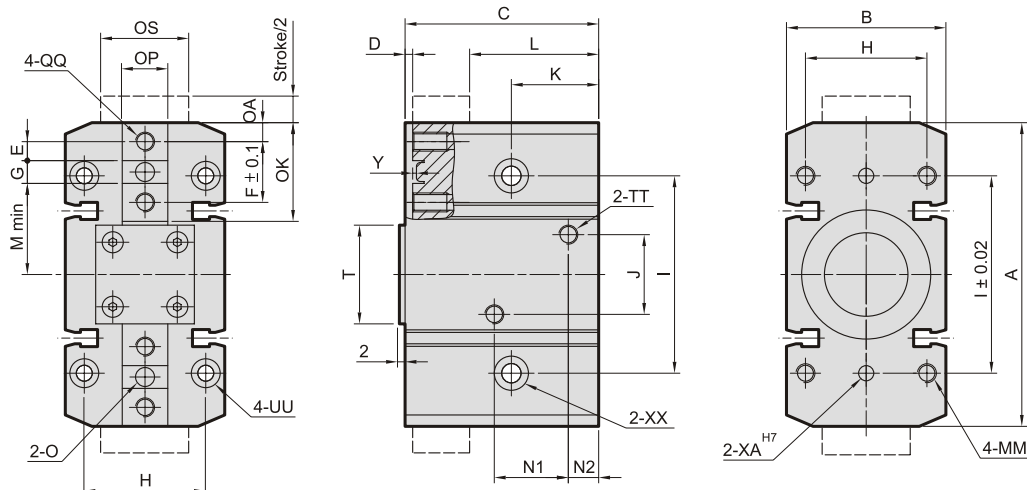

Code Model	A	B	C	D	E	F	G	H	I	J	K	L	M	MM	N1	N2	O	OA	OK	OP	OS	QQ	T	TT
MCHQ-64	64	36	42	2	4	13	5	27	42	16	22	27	19	M5×0.8	7	16.5	φ4	4	20	10	17	M4×0.7×8 dp	20	M5×0.8
MCHQ-80	80	42	51	3	5	16	6	32	52	21	23	34	24	M5×0.8	8	19.5	φ5	5	25	12	23	M5×0.8×10 dp	25	M5×0.8
MCHQ-100	100	50	59	3	6	20	8	38	66	46	20	40	30	M6×1.0	9.5	21.5	φ6	6	32	14	27	M6×1.0×10 dp	28	Rc1/8
MCHQ-125	125	60	68	5	8	24	8	45	82	55	36	44	38	M8×1.25	10.5	22	φ6	8.5	40	16	30	M6×1.0×12 dp	36	Rc1/8
MCHQ-160	160	72	82	3.5	11	32	10	56	100	58	34	55	50	M8×1.25	12	32	φ8	9	50	20	40	M8×1.25×16 dp	46	Rc1/8


Code Model	UU	XA	XX	Y
MCHQ-64	φ 4.2 thru, φ 7.5×26 dp	φ 4	φ 4.5 thru, φ 8×8 dp	2.5
MCHQ-80	φ 4.2 thru, φ 7.5×34 dp	φ 4	φ 5.1 thru, φ 9×24 dp	3
MCHQ-100	φ 5.0 thru, φ 9.1×45 dp	φ 5	φ 8 thru, φ 11×11dp	3
MCHQ-125	φ 6.8 thru, φ 11×41 dp	φ 6	φ 9 thru, φ 15×14 dp	3.5
MCHQ-160	φ 6.8 thru, φ 11×56 dp	φ 6	φ 9 thru, φ 15×15 dp	4

Finger blanks

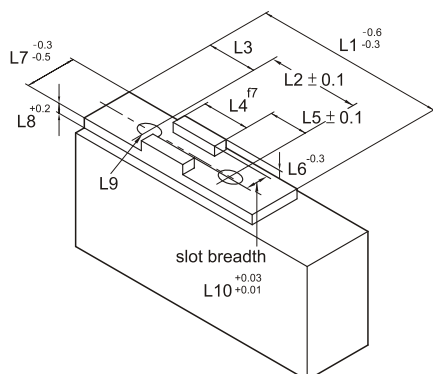

Code Model	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10
MCHQ-64	20	13	4	5	4	2.5	10.2	4.5	φ 4.5	4
MCHQ-80	25	16	5	6	5	3	12.2	5.5	φ 5.5	5
MCHQ-100	32	20	6	8	6	3	14.2	5.5	φ 6.6	6
MCHQ-125	40	24	8.5	8	8	3.5	16.2	5.5	φ 6.6	6
MCHQ-160	50	32	9	10	11	4	20.2	6.5	φ 9	8

Installation of sensor switch

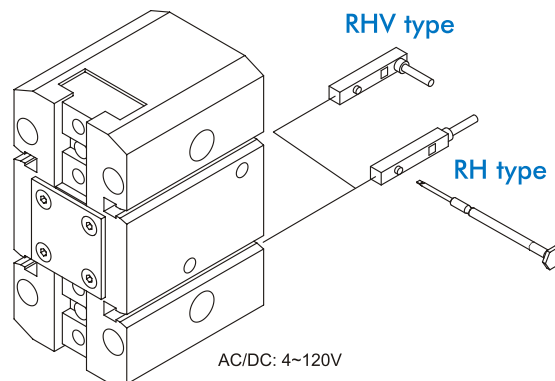

AC/DC: 4~120V