



Vacuum pad for preventing unfavorable suction mark on a work-piece

Vacuum Pad Mark-free Series

- Wide selection of pad sizes, materials and holder types.
 - Pad size: 3sizes. Pad material: 3types. Holder type: 11types.
- Suitable for LCD glass, work-pieces in coating process and semiconductor facility.
 - Flexible resin pad leaves less suction mark on work-pieces.
 - Smoothly release work-pieces by blow-off air.
 - Easy replacement of a resin pad without a spanner or a hex. key.
 - Stroke length of a spring holder is selectable.
 - Conventional long stroke holder (with cover) is integrated into VPC or VPD.
 Stroke: 6, 10, 15 and 20 mm
 - Conventional long stroke holder (without cover) is renewed as VPOC or VPOD.
 Stroke : 20, 30, 40 and50mm
 - Variety of selections in pad holder for "Copper alloy free" and against "low ozone concentration".
 - -S3 spec. : No copper based metal parts. HNBR or FKM is adopted for seal rubber.

Vacuum Pad Mark-free Series


Selection list							
Pad type	Mark-free						
	LCD glass, work-pieces in coating	process and semiconductor facility.					
Recommended work-piece							
Pad size	3 sizes						
Pad material		0, ø30mm VDCS					
r ad material	3 types PEEK, POM, Conductive PEEK						
Holder size	Mini	Standard					
Holder type	4 types	7 types					
Fixed type							
Spring type		Holder without cover is available.					
Direct mount (Fixed type or Spring type)	Holder without cover is available.						

■ Specifications of Flexible Adapter

Fluid medium	Air
Operating vacuum range	0 ∼ -100kPa
Operating temp. range	0 ~ 60°C (No freezing)




■ Construction



※1. ①: Standard type, ②: Copper alloy free (-S3)※2. SUS303 Equivalent corrosivity

■ Model designation of Pad rubber only (Ex.)



②.Pad size

Code	10	20	30		
Size(mm)	ø10	ø20	ø30		
Connection config. code	-M4	-M6			

4.Pad type


Code	Q
Type	Mark-free

⑤.Pad material / Application

Code	K	M	KE
Resin material	PEEK POM		Conductive PEEK
Application	Semiconductor / liquid crystal	niconductor / liquid crystal Various production line	
	production device	Food-related equipment	production device
		Packaging machine	Electric components
Volume resistance	_	_	10⁵~10°Ω·cm
Color	Natural (Ivory)	White	Black

^{*.}Volume resistance value is a representative value from a material manufacturer and is not a guaranteed value.

■ Model designation of Pad & screw set (Ex.)



For 2,4 and 5, refer to "Model designation of Pad rubber only (Ex.)" on page 954.

6.Connection configuration code

Code	-M4	-M6
Pad size (mm)	ø10	ø20, ø30

9.-S3 spec.

Code	No code	-S3
Spec.	Standard	Metal parts : Copper alloy free material
Spec.	Standard	Seal parts : FKM or HNBR


■ Vacuum pad dimensions

Unit: mm



Vacuum pad Model code	Pad O.D. ød	С	Weight (g)
VP10Q5	10	8	0.4
VP20Q5	20	17	2
VP30Q5	30	21	4.6

■ Flexible adapter dimensions



Unit: mm

Flexible adapter Model code	øD	М	А	В	L1	L2	Weight (g)	Applicable pad model code
CFHM4-M59	1.5	M4×0.7	2.9	16.4	0.6	7.2	5.9	VP10Q5
CFHM6-M59	1.8	M6⁄1	4	17.4	0.5	7.1	6.4	VP20, 30Q5


*. 9: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).



■ Table of Connection configuration code, etc. for connection of pad and holder

Pad dia. (mm)	Model code of vacuum pad	Connectio	n type	Connection configuration code	Model code of Pad & screw set	Table of complement parts model code Flexible adapter	
ø10	VP10Q5	Screw type	71:15	-M4	VP10Q5-M49	VP10Q-CFH	
ø20	VP20Q5	(Connection with		(12.25)	-M6	VP20Q5-M69	VP20Q-CFH
ø30	VP30Q5	screw)	J	-IVIO	VP30Q5-M69	VF20Q-0FF	

■ Flexible adapter and Vacuum pad dimensions

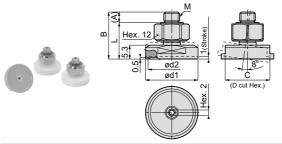



Model code	Pad O.D. ød1	Effective dia. ød2	М				С	Connection config. code
VP10Q5-M49	10	8	M4×0.7	2.9	16.9	14	8	-M4
VP20Q5-M69	20	18	M6×1	4	17.9	13.9	17	-M6
VP30Q5-M69	30	28	M6×1	4	17.9	13.9	27	-IVIO

[%] .5:Replaced with Pad resin material code. Refer to page 954 for details.


[%] . 9: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

Vacuum Pad Mark-free Series



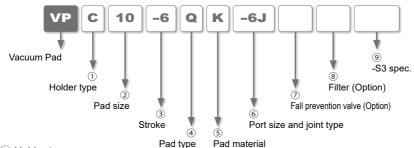

1. Holder type

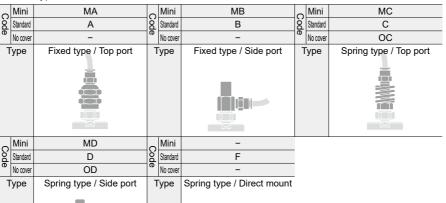

2).Pad size

Code	10	20	30		
Size (mm)	ø10	ø20	ø30		
Effective dia. (mm)	ø8	ø18	ø28		
Connection config. code	-M4	-M6			

③.Stroke (No code entry for Holder code: MA, A, MB, B and F)

С	ode	-4	-6	-10	-15	-20	-30	-40	-50
Stro	ke (mm)	4	6	10	15	20	30	40	50
Pad	VPMC	○(-M4, -M6)							
	VPC		○(-M4, -M6)	○(-M4, -M6)	○(-M4, -M6)	○(-M4, -M6)			
holder	VPOC					○(-M6)	○(-M6)	○(-M6)	○(-M6)
der	VPMD	○(-M4, -M6)							
code	VPD		○(-M4, -M6)	○(-M4, -M6)	○(-M4, -M6)	○(-M4, -M6)			
e	VPOD					○(-M6)	○(-M6)	○(-M6)	○(-M6)

^{*} Code in (): Connection configuration code.



4.Pad type

Code	Q
Type	Mark-free

⑤.Pad material / Application

Code	K	M	KE	
Resin material	PEEK	POM	Conductive PEEK	
Application	Semiconductor / liquid crystal	Various production line	Semiconductor / liquid crystal	
	production device	Food-related equipment	production device	
		Packaging machine	Electric components	
Volume resistance	_	_	10⁵~10°Ω·cm	
Color	Natural (Ivory)	White	Black	

^{*.}Volume resistance value is a representative value from a material manufacturer and is not a guaranteed value.

6.Port size and joint type

Joi	Joint type Push-in fitting (mm)					Barb fitting (mm)			Female	thread	
С	ode	-180J	-2J	-3J	-4J	-6J	-3B	-4B	-6B	-M5	-M6
	Size	ø1.8	ø2	ø3	ø4	ø6	ø3×ø2	ø4×ø2.5	ø6×ø4	M5×0.8	M6×1
Comedia	-M4	0	0	0	0	0	0	0	0	0	0
Comedia code	-M6	0	0	0	0	0	0	0	0	0	0

^{*..}Joint size differs depending on the holder type. Check the joint size by the holder dimensions lists in following pages.

⑦.Fall prevention valve (Option)

Code	ECV			
Option	Fall prevention valve			

®.Filter (Option)

Code	F15	F30		
Pad dia. (mm)	ø10mm~ø30mm	ø20mm~ø30mm		

9.-S3 spec.


Code	No code	-S3		
Spec.	Standard	Copper alloy free material		


^{* 1.}Fall prevention valve and Filter are not available when "-S3" is selected.

Vacuum pad + Fixed type holder Dimensions

VPMA Fixed type / Top port / Push-in fitting / Mini holder

■ RoHS Compliant
■ Copper alloy free available
■ CAD (2D&3D)

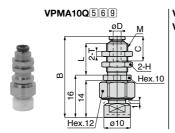

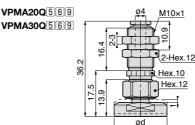

Unit: mm


Model code	Tube O.D. øD	Pad O.D. ød	Thread M	В	L	Tube end C	Hex. H	Т	Connection config. code
VPMA10Q5-3J	3	_	M8×0.75	30.8	12.5	9.4	10	2	-M4
VPMA10Q5-4J9	4	_	M10×1	34.7	16.4	10.9	12	3	-IVI4
VPMA20Q5-4J9	_	20	_	_	_	_	_	_	-M6
VPMA30Q5-4J9	_	30	_	_	_	_	_	_	-IVIO


- ※.5:Replaced with Pad resin material code. Refer to page 958 for details.
- ※ . 9: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with 9 in the table above.
- * .Tightening torque of a pad holder fixing bulkhead nut is as below.
- •Pad dia. ∶ ø10mm and Thread size ∶ M8×0.75 ▶ 2.5~3.5N·m. •Pad dia. ∶ ø10mm and Thread size ∶ M10×1 ▶ 5~7N·m.

•Pad dia. : ø20~30mm ▶ 5~7N·m

VPMA Fixed type / Top port / Barb fitting / Mini holder

RoHS Compliant
 Copper alloy free available
 CAD (2D&3D)

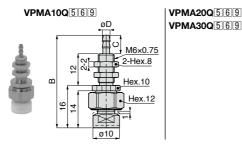

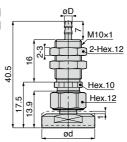


					•
Model code	Tube I.D. øD	Pad O.D. ød	В	С	Connection config.
VPMA10Q5-3B9	2		34	6	-M4
VPMA10Q5-4B9	2.5	_	35	7	-1014
VPMA20Q5-4B9	2.5	20	_	_	
VPMA20Q5-6B9	4	20		_	
VPMA30Q5-4B9	2.5	30	_	_	-M6
VPMA30Q5-6B9	4	30	_	_	


- ※.5:Replaced with Pad resin material code. Refer to page 958 for details.
- ※ .9:Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).
- * Tightening torque of a pad holder fixing bulkhead nut is as below.
 - •Pad dia. ∶ ø10mm ▶2~3N·m. •Pad dia. ∶ ø20~ø30mm ▶5~7N·m



VPA Fixed type / Top port / Push-in fitting / Standard holder

RoHS Compliant Copper alloy free available CAD (2D&3D)






Unit: mm


Model code	Pad O.D. ød	Tube O.D. øD	Thread M	В	L	Tube end C	Hex. H1	Hex. H2	Connection config. code
VPA10Q5-6J9	_	_	_	-	_	_	_	_	-M4
VPA20Q5-3J		3	M12×1	50.6	19.9	10.9	14	12	
VPA20Q5-4J9	20	4	IVI IZ ^ I	50.0	19.9	10.9	14	12	
VPA20Q5-6J9		6	M14×1	41.6	19.5	11.7	17	14	-M6
VPA30Q5-3J		3	M12×1	50.6	19.9	10.9	14	12	-ivio
VPA30Q5-4J9	30	4	IVI IZ ^ I	30.0	19.9	10.9	14	12	
VPA30Q5-6J9		6	M14×1	41.6	19.5	11.7	17	14	

- ※.5:Replaced with Pad resin material code. Refer to page 958 for details.
- ※ ⑨:Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with ⑨ in the table above.
- * .Tightening torque of a pad holder fixing bulkhead nut is as below.
 - •Pad dia. : ø10mm ▶ 12~14N·m. •Pad dia. : ø20~30mm ▶ 18~21N·m

VPA Fixed type / Top port / Barb fitting / Standard holder

RoHS Compliant Copper alloy free available CAD (2D&3D)

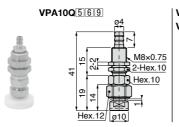

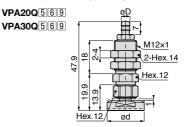

Model code	Pad O.D. ød	Tube I.D. øD	Connection config. code
VPA10Q5-6B9	_	_	-M4
VPA20Q5-4B9	20	2.5	
VPA20Q5-6B9	20	4	-M6
VPA30Q5-4B9	30	2.5	-IVIO
VPA30Q5-6B9	30	4	


- ※.5:Replaced with Pad resin material code. Refer to page 958 for details.
- * 9: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).
- * Tightening torque of a pad holder fixing bulkhead nut is as below.
 - •Pad dia. : ø10mm ▶ 2.5~3.5N·m. •Pad dia. : ø20~30mm ▶ 12~14N·m

VPA Fixed type / Top port / Female thread / Standard holder

RoHS Compliant Copper alloy free available CAD (2D&3D)



VPA20Q5-M69 VPA30Q5-M69



Unit: mm


Model code	Pad O.D. ød	Connection config. code
VPA20Q5-M69	20	-M6
VPA30Q5-M69	30	-ivio

- ※.5:Replaced with Pad resin material code. Refer to page 958 for details.
- ※ ⑨:Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).
- * .Tightening torque of a pad holder fixing bulkhead nut is 12~14N·m.


VPMB Fixed type / Side port / Push-in fitting / Mini holder

RoHS Compliant Copper alloy free available CAD (2D&3D)



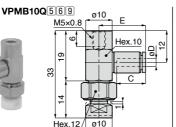



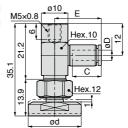


Model code	Pad O.D. ød	Tube O.D. øD	E	Tube end C	Connection config.
VPMB10Q5-180J		1.8	13.7	8.4	
VPMB10Q5-2J		2	13.7	0.4	
VPMB10Q5-3J	_	3	17.5	10.9	-M4
VPMB10Q5-4J9		4	17.5	10.9	
VPMB10Q5-6J9		6	19.4	11.7	
VPMB20Q5-180J		1.8	13.7	8.4	_
VPMB20Q5-2J		2	13.7	0.4	
VPMB20Q5-3J	20	3	17.5	10.9	
VPMB20Q5-4J9		4	17.5	10.9	
VPMB20Q5-6J9		6	19.4	11.7	-M6
VPMB30Q5-180J		1.8	13.7	8.4	-IVIO
VPMB30Q5-2J		2	13.7	0.4	
VPMB30Q5-3J	30	3	17.5	10.9	1
VPMB30Q5-4J9		4	17.5	10.9	
VPMB30Q5-6J9		6	19.4	11.7	

- ※.5:Replaced with Pad resin material code. Refer to page 958 for details.
- * .9: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with 9 in the table above.



VPMB Fixed type / Side port / Barb fitting / Mini holder

RoHS Compliant Copper alloy free available CAD (2D&3D)

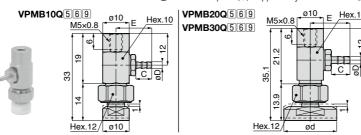


Unit: mm

Model code	Pad O.D. ød	Tube I.D. øD	E	С	Connection config.	
VPMB10Q5-3B9		2	13.4	6		
VPMB10Q5-4B9	_	2.5	44.0	7	-M4	
VPMB10Q5-6B9		4	14.9	/		
VPMB20Q5-3B9		2	13.4	6		
VPMB20Q5-4B9	20	2.5	14.9	7	-M6	
VPMB20Q5-6B9		4	14.9	'		
VPMB30Q5-3B9		2	13.4	6	-IVIO	
VPMB30Q5-4B9	30	2.5	14.9	7		
VPMB30Q5-6B9		4	14.9	'		

- ※.5:Replaced with Pad resin material code. Refer to page 958 for details.
- * 9:Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

VPMB Fixed type / Side port / Female thread / Mini holder

RoHS Compliant Copper alloy free available CAD (2D&3D)

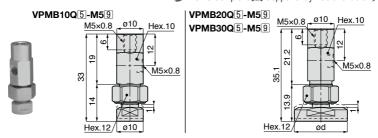


Model code	Pad O.D. ød	Connection config. code
VPMB10Q5-M59	_	-M4
VPMB20Q5-M59	20	-M6
VPMB30Q5-M59	30	-IVIO

- % .5:Replaced with Pad resin material code. Refer to page 958 for details.
- ※ 9:Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

VPB Fixed type / Side port / Push-in fitting / Standard holder

RoHS Compliant Copper alloy free available CAD (2D&3D)

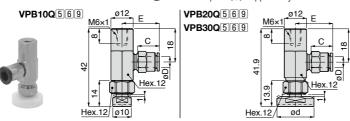


Unit: mm

Model code	Pad O.D. ød	Tube O.D. øD	E	Tube end C	Connection config.	
VPB10Q5-3J		3	18.6	10.9		
VPB10Q5-4J9	_	4	16.0	10.9	-M4	
VPB10Q5-6J9		6	19.9	11.7		
VPB20Q5-3J		3	18.6	10.9		
VPB20Q5-4J9	20	4	10.0	10.9		
VPB20Q5-6J9		6	19.9	11.7	-M6	
VPB30Q5-3J		3	18.6	10.9	-IVIO	
VPB30Q5-4J9	30	4	16.0	10.9		
VPB30Q5-6J9		6	19.9	11.7		

- *.5:Replaced with Pad resin material code. Refer to page 958 for details.
- ※ . 9: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with 9 in the table above.

Fixed type / Side port / Barb fitting / Standard holder

RoHS Compliant X Copper alloy free available A CAD (2D&3D)

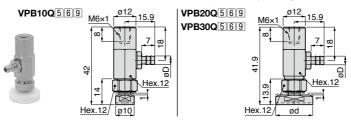

Model code	Pad O.D. ød	Tube I.D. øD	Connection config. code		
VPB10Q5-4B9		2.5	-M4		
VPB10Q5-6B9	_	4	-M4		
VPB20Q5-4B9	20	2.5			
VPB20Q5-6B9	20	4	-M6		
VPB30Q5-4B9		2.5	-IVIO		
VPB30Q5-6B9	30	4			

- ※.5:Replaced with Pad resin material code. Refer to page 958 for details.
- ※ .9:Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

VPB Fixed type / Side port / Female thread / Standard holder

RoHS Compliant Copper alloy free available CAD (2D&3D)

VPB10Q[5]-M6[9]

VPB20Q[5]-M6[9]

VPB30Q[5]-M6[9]

VPB30Q[5]-M6[9]

WPB30Q[5]-M6[9]

Hex.12

Unit: mm

Model code	Pad O.D. ød	Connection config. code
VPB10Q5-M69	_	-M4
VPB20Q5-M69	20	-M6
VPB30Q5-M69	30	-1010

Hex.12

Hex.12


^{※.5:}Replaced with Pad resin material code. Refer to page 958 for details.


^{* . 9:} Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

■ Vacuum pad + Spring type holder Dimensions

VPMC Spring type / Top port / Push-in fitting / Mini holder

RoHS Compliant Copper alloy free available CAD (2D&3D)

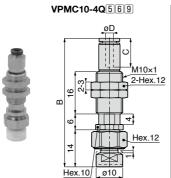

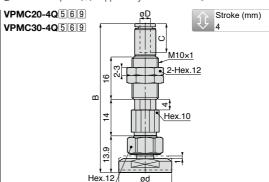

Unit: mm

Model code	Pad O.D. ød	Tube O.D. øD		Tube end C	Spring force (N)	Connection config. code	
VPMC10-4Q5-180J		1.8	44.9	8.4			
VPMC10-4Q5-2J	_	2	44.9	0.4	1~1.3	-M4	
VPMC10-4Q5-3J		3	48.7	10.9			
VPMC10-4Q5-4J9		4	40.7	10.9			
VPMC20-4Q5-180J		1.8	52.8	8.4			
VPMC20-4Q5-2J	20	2	32.0	0.4	1~1.3		
VPMC20-4Q5-3J	20	3	56.6	10.9	1 1.0		
VPMC20-4Q5-4J9		4	50.0	10.9		-M6	
VPMC30-4Q5-180J		1.8	52.8	8.4		-IVIO	
VPMC30-4Q5-2J	30	2	52.6		1~1.3		
VPMC30-4Q5-3J		3	56.6	10.9	1 31.3		
VPMC30-4Q5-4J9		4	50.0	10.9			

^{※.5:}Replaced with Pad resin material code. Refer to page 958 for details.

96


^{※ . 9:} Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with 9 in the table above.


^{※ .}Tightening torque of a pad holder fixing bulkhead nut is 4~6N·m.



VPMC Spring type / Top port / Barb fitting / Mini holder

RoHS Compliant Copper alloy free available CAD (2D&3D)

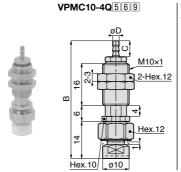

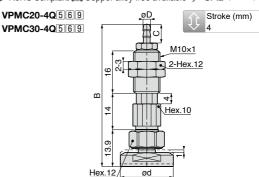

Model code	Pad O.D. ød	Tube I.D. øD	В	С	Spring force (N)	Connection config. code	
VPMC10-4Q5-3B9		2	44.6	6			
VPMC10-4Q5-4B9	_	2.5	46.1	7	1~1.3	-M4	
VPMC10-4Q5-6B9		4	47.7				
VPMC20-4Q5-3B9		2	52.5	6			
VPMC20-4Q5-4B9	20	2.5	54	7	1~1.3		
VPMC20-4Q5-6B9		4	04	/		-M6	
VPMC30-4Q5-3B9		2	52.5	6		-IVIO	
VPMC30-4Q5-4B9	30	2.5	54	7	1~1.3		
VPMC30-4Q5-6B9		4	54	/			


- ※.5:Replaced with Pad resin material code. Refer to page 958 for details.
- * 9:Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).
- *. Tightening torque of a pad holder fixing bulkhead nut is 4~6N·m.

VPC Spring type / Top port / Push-in fitting / Standard holder

Model code			Hex.12 ø1	o		Hex.12 ød				Unit: mm	
VPC10-BQ3-4.19	Model code			В	L1	L2					
PPC10-605-8.49 PPC10-1005-31 A	VPC10-6Q5-3J		3	64.7			10.0				
VPC10-10Q[S-4]	VPC10-6Q5-4J9		4	04.7	32		10.9	6	4.0 ~ 7.1		
VPC10-10Q5-31	VPC10-6Q5-6J9		6	66.1		20	11.7				
PPC10-10Q5-61 YPC10-10Q5-61 YPC10-10Q5-61 YPC10-10Q5-61 YPC10-15Q5-61 YPC10-15Q5-61 YPC10-15Q5-61 YPC10-15Q5-61 YPC10-15Q5-61 YPC10-20Q5-31 YPC10-20Q5-31 YPC10-20Q5-81 YPC10-20Q5-81 YPC10-20Q5-81 YPC20-6Q5-81 YPC20-6Q5-81 YPC20-6Q5-81 YPC20-6Q5-81 YPC20-6Q5-81 YPC20-6Q5-81 YPC20-10Q5-81 YPC20-10Q5-81 YPC20-10Q5-81 YPC20-10Q5-81 YPC20-10Q5-81 YPC20-10Q5-81 YPC20-15Q5-81 YP	VPC10-10Q5-3J		3	60.2		20	10.0				
VPC10-15Q S-3J	VPC10-10Q5-4J		4	09.2	36.5		10.9	10	2.0 ~ 5.2		
VPC10-15Q15-4J	VPC10-10Q5-6J	_	6	70.6			11.7			Ma	
VPC10-15Q15-6J VPC10-2QQ15-3J VPC10-2QQ15-6J VPC10-2QQ15-6J VPC10-2QQ15-6J VPC10-2QQ15-6J VPC20-6Q15-3J VPC20-6Q15-3J VPC20-6Q15-6J VPC20-6Q15-6J VPC20-6Q15-6J VPC20-10Q15-3J VPC20-10Q15-6J VPC20-15Q15-6J VPC20-15Q	VPC10-15Q5-3J		3	70.2			10.0			-1014	
VPC10-20QIS-3J	VPC10-15Q5-4J		4	10.2	41.5	25	10.5	15	2.0 ~ 5.9		
VPC10-20Q\$[-6] VPC20-6Q\$[-5]-3J VPC20-6Q\$[-5]-3J VPC20-6Q\$[-5]-3J VPC20-6Q\$[-5]-3J VPC20-6Q\$[-5]-3J VPC20-10Q\$[-5]-3J VPC20-10Q\$[-	VPC10-15Q5-6J		6	80.6			11.7				
VPC10-20Q_S-6J VPC20-6Q[S-3J VPC20-6Q[S-4J]			3	95.2			10.9				
NPC20-60[S]-3J	VPC10-20Q5-4J		4	00.2	48.5	34	10.0	20	1.1 ~ 4.8		
VPC20-60[S-4J]			6	96.6							
VPC20-6Q[5]-4J VPC20-10Q[5]-4J VPC20-10Q[5]-4J VPC20-10Q[5]-4J VPC20-10Q[5]-4J VPC20-10Q[5]-4J VPC20-10Q[5]-6J VPC20-10Q[5]-6J VPC20-10Q[5]-6J VPC20-10Q[5]-6J VPC20-10Q[5]-6J VPC20-10Q[5]-6J VPC20-10Q[5]-6J VPC20-10Q[5]-6J VPC20-20Q[5]-6J VPC20-20Q[5]-6J VPC20-20Q[5]-6J VPC20-20Q[5]-6J VPC20-20Q[5]-6J VPC20-20Q[5]-6J VPC20-20Q[5]-6J VPC20-10Q[5]-6J VPC20-10Q[5]				64.6			10.9				
NPC20-10Q[5]-3.3					31.9			6	7.0 ~ 12.6		
VPC20-10Q[s]-3J VPC20-10Q[s]-6J VPC20-15Q[s]-6J VPC20-15Q[s]-6J VPC20-15Q[s]-6J VPC20-15Q[s]-6J VPC20-15Q[s]-6J VPC20-15Q[s]-6J VPC20-15Q[s]-6J VPC20-20Q[s]-6J VPC20-20Q[s]-6J VPC20-20Q[s]-6J VPC20-20Q[s]-6J VPC20-20Q[s]-6J VPC20-20Q[s]-6J VPC30-6Q[s]-6J VPC30-6Q[s]-6J VPC30-6Q[s]-6J VPC30-6Q[s]-6J VPC30-10Q[s]-6J VPC30-10Q[s]-6				66		20	11.7				
VPC20-10Q[s]-6J VPC20-15Q[s]-3J VPC20-15Q[s]-4J VPC20-15Q[s]-4J VPC20-15Q[s]-4J VPC20-15Q[s]-4J VPC20-15Q[s]-4J VPC20-15Q[s]-4J VPC20-15Q[s]-6J VPC20-20Q[s]-6J VPC20-20Q[s]-6J VPC20-20Q[s]-6J VPC20-20Q[s]-6J VPC20-20Q[s]-6J VPC30-6Q[s]-6J VPC30-6Q[s]-6J VPC30-6Q[s]-6J VPC30-6Q[s]-6J VPC30-6Q[s]-6J VPC30-10Q[s]-6J				70.6	37.9		10.9				
VPC20-15Q[S-3]								10	3.3 ~ 10.0		
VPC20-15Q 5-4J VPC20-15Q 5-6J VPC20-20Q 5-3J VPC20-20Q 5-4J VPC20-20Q 5-4J VPC20-20Q 5-4J VPC30-6Q 5-4J VPC30-16Q 5-4J VPC30-15Q 5-4J VPC30-15Q 5-4J VPC30-15Q 5-4J VPC30-15Q 5-4J VPC30-15Q 5-4J VPC30-16Q 5-4J VPC30-15Q 5-4J VPC30-16Q 5-4J VPC30-20Q 5-4J VPC30		20		72			11.7				
NPC20-15Q[5]-6.1				80.6			10.9	15	3.3 ~ 10.4		
NPC20-20Q[S]-3.3					42.9	25					
VPC20-20QS-4J 4 96.6 49.9 34 10.9 20 2.0 ~ 8.7 VPC20-20QS-6.0 6 98 11.7 -M6 VPC30-6QS-3J 3 64.6 31.9 10.9 6 7.0 ~ 12.6 VPC30-6QS-6J9 6 66 66 98 11.7 10.9 6 7.0 ~ 12.6 VPC30-10QS-3J 4 70.6 37.9 10.9 10 3.3 ~ 10.0 VPC30-10QS-6J 4 80.6 72 11.7 11.7 11.7 VPC30-15QS-4J 4 80.6 42.9 25 10.9 15 3.3 ~ 10.4 VPC30-20QS-3J VPC30-20QS-3J 4 96.6 49.9 34 10.9 20 2.0 ~ 8.7			-	82			11.7				
VPC20-2QQ[5]-6J 6 98 11.7 -M6 VPC30-6Q[5]-3J 3 64.6 31.9 10.9 6 7.0 ~ 12.6 VPC30-6Q[5]-6J[9] 4 66 66 98 11.7 10.9 6 7.0 ~ 12.6 VPC30-10Q[5]-6J[9] 6 66 66 98 11.7 10.9 10				96.6			10.9				
VPC30-6Q[5]-4J 9					49.9	34		20	2.0 ~ 8.7		
VPC30-6Q[5]-6J[9] 4 64.6 31.9 10.9 6 7.0 ~ 12.6 VPC30-10Q[5]-6J[9] 6 66 66 31.9 10.9				98			11.7			-M6	
VPC30-6Q[\$]-6J[9]				64.6			10.9	•	7.0 40.0		
VPC30-1QQ[5-3] VPC30-1QQ[5-4] VPC30-1QQ[5-4] VPC30-1QQ[5-8] VPC30-1QQ[5-8] VPC30-1QQ[5-8] VPC30-1QQ[5-8] VPC30-1QQ[5-8] VPC30-2QQ[5-3] VPC30-2QQ[5-3] VPC30-2QQ[5-3] VPC30-2QQ[5-4] VPC3				66	31.9		44.7	ь	7.0 ~ 12.6		
VPC30-10Q[s]-4J 4 70.6 37.9 10.9 10 3.3 ~ 10.0 VPC30-10Q[s]-6J 6 72 11.7 11.7 11.7 10.9 </td <td></td> <td></td> <td></td> <td>00</td> <td></td> <td>20</td> <td>11.7</td> <td></td> <td></td> <td></td>				00		20	11.7				
VPC30-10Q[5]-6.3 30 6 72 11.7 11.7 VPC30-15Q[5]-3.3 4 80.6 42.9 25 10.9 15 3.3 ~ 10.4 VPC30-15Q[5]-6J 6 82 11.7<				70.6	27.0		10.9	10	22100		
VPC30-15Q[\$\bar{S}\$-3J\$ 3 80.6 42.9 25 10.9 15 3.3 ~ 10.4 VPC30-15Q[\$\bar{S}\$-6J\$ 6 82 11.7 11.7 11.7 10.9				72	37.9		11 7	10	3.3 ~ 10.0		
VPC30-15Q[5-6J] 4 80.6 42.9 25 10.9 15 3.3 ~ 10.4 VPC30-15Q[5-6J] 6 82 11.7 11.7 VPC30-2QQ[5-3J] 3 96.6 49.9 34 10.9 20 2.0 ~ 8.7		30		12			11.7				
VPC30-20Q[5-3J] 6 82 11.7 VPC30-20Q[5-3J] 3 96.6 49.9 34 10.9 20 2.0 ~ 8.7				80.6	42 0	25	10.9	15	33~10/		
VPC30-20Q[5]-3J 3 96.6 49.9 34 10.9 20 2.0 ~ 8.7				82	42.5	23	11 7	10	0.0 - 10.4		
VPC30-20Q5-4J 4 96.6 49.9 34 10.9 20 2.0 ~ 8.7				02			11.7				
				96.6	49.9	34	10.9	20	20~87		
				98	10.0	•	11.7				



VPC Spring type / Top port / Barb fitting / Standard holder

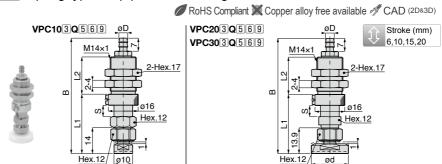

								Offic - Ithiri
Model code	Pad O.D. ød	Tube I.D. øD	В	L1	L2	Stroke S	Spring force (N)	Connection config. code
VPC10-6Q5-4B9		2.5				_		- U
VPC10-6Q5-6B9		4	62.1	32		6	4.0 ~ 7.1	
VPC10-10Q5-4B		2.5	20.0	20.5	20	40	00.50	
VPC10-10Q5-6B		4	66.6	36.5		10	2.0 ~ 5.2	
VPC10-15Q5-4B	_	2.5	70.0		25	45	00.50	-M4
VPC10-10Q5-6B		4	76.6	41.5	25	15	2.0 ~ 5.9	
VPC10-20Q5-4B		2.5	00.0	40.5	34	00	44 40	
VPC10-20Q5-6B		4	92.6	48.5	34	20	1.1 ~ 4.8	
VPC20-6Q5-4B9		2.5	62	04.0		6	7.0 ~ 12.6	
VPC20-6Q5-6B9	00	4	02	31.9	20	0	7.0 ~ 12.0	
VPC20-10Q5-4B		2.5	68	37.9	20	10	3.3 ~ 10.0	
VPC20-10Q5-6B		4	00	37.9		10	3.3 ~ 10.0	
VPC20-15Q5-4B	20	2.5	78	42.9	0.5	15	3.3 ~ 10.4	
VPC20-15Q5-6B		4	/ 0	42.9	25			
VPC20-20Q5-4B		2.5	94	49.9	34	20	2.0 ~ 8.7	
VPC20-20Q5-6B		4	94	49.9	34	20	2.0 ~ 0.7	-M6
VPC30-6Q5-4B9		2.5	62	31.9		6	7.0 ~ 12.6	-IVIO
VPC30-6Q5-6B9		4	02	31.9	20		7.0 12.0	
VPC30-10Q5-4B		2.5	68	37.9	20	10	3.3 ~ 10.0	
VPC30-10Q5-6B	30	4	00	37.9		10	3.3 10.0	
VPC30-15Q5-4B	30	2.5	78	42.9	25	15	3.3 ~ 10.4	
VPC30-15Q5-6B		4	70	42.3	23	13	5.5 - 10.4	
VPC30-20Q5-4B		2.5	94	49.9	34	20	2.0 ~ 8.7	
VPC30-20Q5-6B		4	34	45.5	34		2.0 0.7	

^{※.5:}Replaced with Pad resin material code. Refer to page 958 for details.


[※] ⑨:Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with ⑨ in the table above.


^{※ .}Tightening torque of a pad holder fixing bulkhead nut is 4.5~6N⋅m.

VPC Spring type / Top port / Female thread / Standard holder

RoHS Compliant Copper alloy free available CAD (2D&3D)



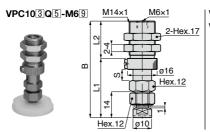

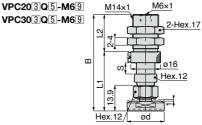


Model code	Pad O.D.	р	B 1 2	Stroke	Spring force	Connection		
iviodei code		D		LZ		(N)	config. code	
VPC10-6Q5-M69		52	32	20	6	4.0 ~ 7.1		
VPC10-10Q5-M6	_	56.5	36.5	20	10	2.0 ~ 5.2	-M4	
VPC10-15Q5-M6		66.5	41.5	25	15	2.0 ~ 5.9	-IVI4	
VPC10-20Q5-M6		82.5	48.5	34	20	1.1 ~ 4.8		
VPC20-6Q5-M69		51.9	31.9	20	6	7.0 ~ 12.6		
VPC20-10Q5-M6	20	57.9	37.9	20	10	3.3 ~ 10.0		
VPC20-15Q5-M6	20	67.9	42.9	25	15	3.3 ~ 10.4		
VPC20-20Q5-M6		83.9	49.9	34	20	2.0 ~ 8.7	-M6	
VPC30-6Q5-M69		51.9	31.9	20	6	7.0 ~ 12.6	-IVIO	
VPC30-10Q5-M6	30	57.9	37.9	20	10	3.3 ~ 10.0		
VPC30-15Q5-M6		67.9	42.9	25	15	3.3 ~ 10.4		
VPC30-20Q5-M6		83.9	49.9	34	20	2.0 ~ 8.7		

- ※.5:Replaced with Pad resin material code. Refer to page 958 for details.
- ※ .Tightening torque of a pad holder fixing bulkhead nut is 4.5∼6N·m.



VPOC Spring type / Top port / Push-in fitting / No cover holder

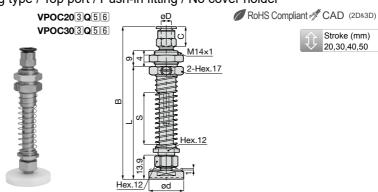


					<u>_</u>			
								Unit: mm
Model code	Pad O.D.	Tube O.D.	В		Tube end		Spring force	Connection
Model code		øD			С			config. code
VPOC20-20Q5-3J		3	73.6		10.9			
VPOC20-20Q5-4J		4	73.0	51.9	10.9	20	1.5~4.9	
VPOC20-20Q5-6J		6	75		11.7			
VPOC20-30Q5-3J		3	86.6		10.9			
VPOC20-30Q5-4J		4	00.0	64.9	10.9	30	1.1~4.8	
VPOC20-30Q5-6J	20	6	88		11.7			
VPOC20-40Q5-3J	20	3	99.6		10.9			
VPOC20-40Q5-4J		4	33.0	77.9	10.5	40	1.0~4.5	
VPOC20-40Q5-6J		6	101		11.7			
VPOC20-50Q5-3J		3	112.6		10.9			
VPOC20-50Q5-4J		4	112.0	90.9		50	0.9~4.5	
VPOC20-50Q5-6J		6	114		11.7			-M6
VPOC30-20Q5-3J		3	73.6		10.9			-IVIO
VPOC30-20Q5-4J		4	75.0	51.9	10.5	20	1.5~4.9	
VPOC30-20Q5-6J		6	75		11.7			
VPOC30-30Q5-3J		3	86.6		10.9			
VPOC30-30Q5-4J		4	00.0	64.9	10.5	30	1.1~4.8	
VPOC30-30Q5-6J	30	6	88		11.7			
VPOC30-40Q5-3J	00	3	99.6		10.9			
VPOC30-40Q5-4J		4	33.0	77.9	10.5	40	1.0~4.5	
VPOC30-40Q5-6J			11.7					
VPOC30-50Q5-3J	3 112.6		10.9					
VPOC30-50Q5-4J		4	112.0	90.9	10.0	50	0.9~4.5	
VPOC30-50Q5-6J		6	114		11.7			

 $[\]ensuremath{\%}$.5:Replaced with Pad resin material code. Refer to page 958 for details.

^{*} Tightening torque of a pad holder fixing bulkhead nut is 4.5~6N·m.

VPOC Spring type / Top port / Barb fitting / No cover holder

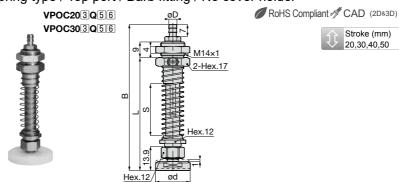


							OTHE : ITHIT
Model code	Pad O.D.	Tube I.D.	В	L	Stroke	Spring force	Connection
Woder code		øD				(N)	config. code
VPOC20-20Q5-4B		2.5	71	51.9	20	1.5~4.9	
VPOC20-20Q5-6B		4	/ '	01.0	20	1.0 4.0	
VPOC20-30Q5-4B		2.5	84	64.9	30	1.1~4.8	
VPOC20-30Q5-6B	20	4	04	04.9	30	1.1 - 4.0	
VPOC20-40Q5-4B	20	2.5	97	77.9 90.9	40	1.0~4.5	
VPOC20-40Q5-6B		4	31			1.0 4.0	
VPOC20-50Q5-4B		2.5	110		50	0.9~4.5	
VPOC20-50Q5-6B		4	110			0.0 4.0	-M6
VPOC30-20Q5-4B		2.5	71	51.9	20	1.5~4.9	-IVIO
VPOC30-20Q5-6B		4	/ 1		20		
VPOC30-30Q5-4B		2.5	84	64.9	30	1.1~4.8	
VPOC30-30Q5-6B	30	4	04	04.9	30	1.1~4.8	
VPOC30-40Q5-4B	30	2.5	07	77.9	40	1.0~4.5	
VPOC30-40Q5-6B		4	97	77.9	40	1.0 4.5	
VPOC30-50Q5-4B		2.5	110	90.9	50	0.9~4.5	
VPOC30-50Q5-6B		4	110	50.9	30	0.9 94.5	

 $[\]ensuremath{\text{\%}}$.5]:Replaced with Pad resin material code. Refer to page 958 for details.

^{※ .}Tightening torque of a pad holder fixing bulkhead nut is 4.5~6N⋅m.



VPOC Spring type / Top port / Female thread / No cover holder

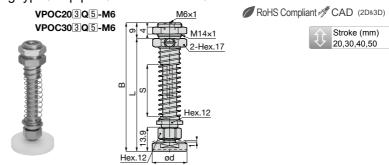


Model code	Pad O.D. ød			Stroke S	Spring force (N)	Connection config. code
VPOC20-20Q5-M6		60.9	51.9	20	1.5~4.9	
VPOC20-30Q5-M6	20	73.9	64.9	30	1.1~4.8	
VPOC20-40Q5-M6		86.9	77.9	40	1.0~4.5	
VPOC20-50Q5-M6		99.9	90.9	50	0.9~4.5	-M6
VPOC30-20Q5-M6		60.9	51.9	20	1.5~4.9	-IVIO
VPOC30-30Q5-M6	30	73.9	64.9	30	1.1~4.8	
VPOC30-40Q5-M6	30	86.9	77.9	40	1.0~4.5	
VPOC30-50Q5-M6		99.9	90.9	50	0.9~4.5	


^{※.5:}Replaced with Pad resin material code. Refer to page 958 for details.

^{※ .}Tightening torque of a pad holder fixing bulkhead nut is 4.5~6N⋅m.

VPMD Spring type / Side port / Push-in fitting / Mini holder

RoHS Compliant Copper alloy free available CAD (2D&3D)

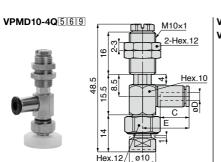

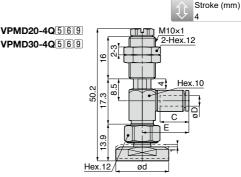

Model code	Pad O.D. ød	Tube O.D. øD	Е	Tube end C	Spring force (N)	Connection config. code
VPMD10-4Q5-180J		1.8	13.7	8.4		
VPMD10-4Q5-2J		2	13.7	0.4		
VPMD10-4Q5-3J	_	3	17.5	10.9	1~1.3	-M4
VPMD10-4Q5-4J9		4	17.5	10.9		
VPMD10-4Q5-6J9		6	19.4	11.7		
VPMD20-4Q5-180J		1.8	13.7	8.4		
VPMD20-4Q5-2J		2	13.7	0.4		
VPMD20-4Q5-3J	20	3	17.5	10.9	1~1.3	
VPMD20-4Q5-4J9		4	17.5	10.9		
VPMD20-4Q5-6J9		6	19.4	11.7		-M6
VPMD30-4Q5-180J		1.8	13.7	8.4		-IVIO
VPMD30-4Q5-2J		2	13.7	0.4		
VPMD30-4Q5-3J	30	3	17.5	10.9	1~1.3	
VPMD30-4Q5-4J9		4	17.5	10.9		
VPMD30-4Q5-6J9		6	19.4	11.7		

^{※.5:}Replaced with Pad resin material code. Refer to page 958 for details.


^{※ .} ⑨:Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with ⑨ in the table above.

^{※ .}Tightening torque of a pad holder fixing bulkhead nut is 4~6N⋅m.



VPMD Spring type / Side port / Barb fitting / Mini holder

RoHS Compliant Copper alloy free available CAD (2D&3D)

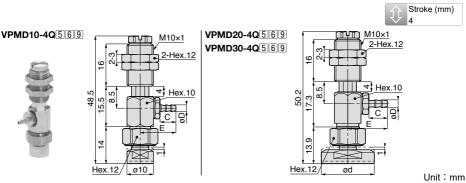


Model code	Pad O.D. ød	Tube I.D. øD	Е	С	Spring force (N)	Connection config. code	
VPMD10-4Q5-3B9		2	13.4	6			
VPMD10-4Q5-4B9	_	2.5	14.9	7	1~1.3	-M4	
VPMD10-4Q5-6B9		4	14.9	/			
VPMD20-4Q5-3B9		2	13.4	6			
VPMD20-4Q5-4B9	20	2.5	440	7	1~1.3		
VPMD20-4Q5-6B9		4	14.9	/		-M6	
VPMD30-4Q5-3B9		2	13.4	6		-IVIO	
VPMD30-4Q5-4B9	30	2.5	14.9	7	1~1.3		
VPMD30-4Q5-6B9		4	14.9				

- ※.5:Replaced with Pad resin material code. Refer to page 958 for details.
- * 9: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).
- ※ .Tightening torque of a pad holder fixing bulkhead nut is 4~6N·m.

VPMD Spring type / Side port / Female thread / Mini holder

RoHS Compliant Copper alloy free available CAD (2D&3D)

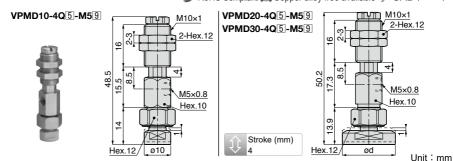


Model code	Pad O.D. ød	Spring force (N)	Connection config. code
VPMD10-4Q5-M59	_	1~1.3	-M4
VPMD20-4Q5-M59	20	1~1.3	-M6
VPMD30-4Q5-M59	30	1~1.3	-IVIO

- ※.5:Replaced with Pad resin material code. Refer to page 958 for details.
- * 9:Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).
- * .Tightening torque of a pad holder fixing bulkhead nut is 4~6N·m.

VPD Spring type / Side port / Push-in fitting / Standard holder

■ RoHS Compliant
■ Copper alloy free available
■ CAD (2D&3D)

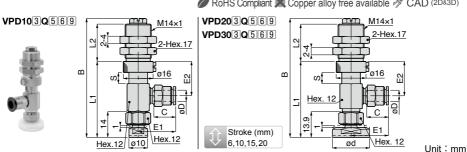

Model code	Pad O.D. ød	Tube O.D. øD	В	L1	L2	E1	E2	Tube end C	Stroke S	Spring force (N)	Connection config. code
VPD10-6Q5-3J		3				18.6		10.9			
VPD10-6Q5-4J9		4	64.1	41		10.0	18.5	10.5	6	4.0 ~ 7.1	
VPD10-6Q5-6J9		6			20	19.9		11.7			
VPD10-10Q5-3J		3			20	18.6		10.9			
VPD10-10Q5-4J		4	69.1	46			25		10	2.0 ~ 5.2	
VPD10-10Q5-6J	_	6				19.9		11.7			-M4
VPD10-15Q5-3J		3				18.6		10.9			
VPD10-15Q5-4J		4	79.1	51	25		30		15	2.0 ~ 5.9	
VPD10-15Q5-6J		6				19.9		11.7			
VPD10-20Q5-3J		3				18.6		10.9			
VPD10-20Q5-4J		4	95.1	58	34		37		20	1.1 ~ 4.8	
VPD10-20Q5-6J		6				19.9		11.7			
VPD20-6Q5-3J		3				18.6		10.9			
VPD20-6Q5-4J9		4	64	40.9			18.5		6	7.0 ~ 12.6	
VPD20-6Q5-6J9		6			20	19.9		11.7			
VPD20-10Q5-3J		3				18.6		10.9			
VPD20-10Q5-4J		4	70	46.9			24.5		10	3.3 ~ 10.0	
VPD20-10Q5-6J	20	6				19.9		11.7			
VPD20-15Q5-3J		3				18.6		10.9			
VPD20-15Q5-4J		4	80	51.9	25		29.5		15	3.3 ~ 10.4	
VPD20-15Q5-6J		6				19.9		11.7			
VPD20-20Q5-3J		3	00	50.0		18.6	00.5	10.9	00	00 07	
VPD20-20Q5-4J		6	96	58.9	34	10.0	36.5	11.7	20	2.0 ~ 8.7	
VPD20-20Q5-6J VPD30-6Q5-3J		3				19.9		11.7			-M6
VPD30-6Q5-4J9		4	64	40.9		18.6	18.5	10.9	6	7.0 ~ 12.6	
VPD30-6Q5-6J9		6	04	40.5		19.9	10.5	11.7	0	7.0 12.0	
VPD30-10Q5-3J		3			20	10.0					
VPD30-10Q5-4J		4	70	46.9		18.6	24.5	10.9	10	3.3 ~ 10.0	
VPD30-10Q5-6J		6				19.9		11.7			
VPD30-15Q5-3J	30	3									
VPD30-15Q5-4J		4	80	51.9	25	18.6	29.5	10.9	15	3.3 ~ 10.4	
VPD30-15Q5-6J		6				19.9		11.7			
VPD30-20Q5-3J		3									
VPD30-20Q5-4J		4	96	58.9	34	18.6	36.5	10.9	20	2.0 ~ 8.7	
VPD30-20Q5-6J		6				19.9		11.7			




VPD Spring type / Side port / Barb fitting / Standard holder

■ RoHS Compliant
■ Copper alloy free available
● CAD (2D&3D)








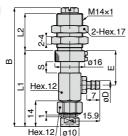

VPD203Q569 VPD303Q569

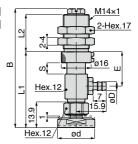

Model code	Pad O.D.	Tube I.D.	В	L1	L2	Е	Stroke	Spring force	Connection
Model Code		øD			LZ				config. code
VPD10-6Q5-4B9		2.5	64.1	41		18.5	6	4.0 ~ 7.1	
VPD10-6Q5-6B9		4	04.1	41	00	10.5	6	4.0 ~ 7.1	
VPD10-10Q5-4B		2.5	69.1	46	20	25	10	2.0 ~ 5.2	
VPD10-10Q5-6B		4	09.1	40		25	10	2.0 ~ 5.2	-M4
VPD10-15Q5-4B	_	2.5	79.1	51	25	30	15	2.0 ~ 5.9	-IVI4
VPD10-15Q5-6B		4	79.1	51	25	30	15	2.0 ~ 5.9	
VPD10-20Q5-4B		2.5	95.1	58	34	37	20	1.1 ~ 4.8	
VPD10-20Q5-6B		4	95.1	36	34	31	20	1.1~4.0	
VPD20-6Q5-4B9		2.5	64	40.9		18.5	6	7.0 ~ 12.6	
VPD20-6Q5-6B9		4	04	40.9	00	10.5	6	7.0 ~ 12.6	
VPD20-10Q5-4B		2.5	70	46.9	20	24.5	10	3.3 ~ 10.0	
VPD20-10Q5-6B	20	4	70	40.9		24.5	10	3.3 ~ 10.0	
VPD20-15Q5-4B	20	2.5	80	51.9	25	29.5	15	3.3 ~ 10.4	
VPD20-15Q5-6B		4	00	51.9	25	29.5	15	3.3 ~ 10.4	
VPD20-20Q5-4B		2.5	96	58.9	34	36.5	20	2.0 ~ 8.7	
VPD20-20Q5-6B		4	90	36.9	34	30.5	20	2.0 ~ 6.7	-M6
VPD30-6Q5-4B9		2.5	64	40.9		18.5	6	7.0 ~ 12.6	-IVIO
VPD30-6Q5-6B9		4	04	40.9	20	16.5	0	7.0 ~ 12.6	
VPD30-10Q5-4B		2.5	70	46.9	20	24.5	10	3.3 ~ 10.0	
VPD30-10Q5-6B	30	4	70	46.9		24.5	10	3.3 ~ 10.0	
VPD30-15Q5-4B	30	2.5	80	51.9	25	20.5	15	3.3 ~ 10.4	
VPD30-15Q5-6B		4	60	51.9	25	29.5	15	3.3 ~ 10.4	
VPD30-20Q5-4B		2.5	96	58.9	34	36.5	20	2.0 ~ 8.7	
VPD30-20Q5-6B		4	96	56.9	34	30.5	20	2.0 ~ 8.7	


^{※.5:}Replaced with Pad resin material code. Refer to page 958 for details.

^{※ .} ⑨: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with ⑨ in the table above.

^{※.}Tightening torque of a pad holder fixing bulkhead nut is 4.5~6N⋅m.

VPD Spring type / Side port / Female thread / Standard holder

■ RoHS Compliant
■ Copper alloy free available
■ CAD (2D&3D)

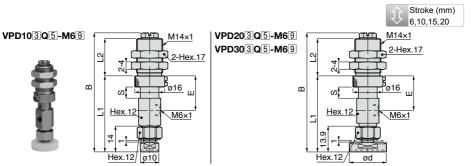

Model code	Pad O.D. ød	В	L1	L2	Е	Stroke S	Spring force (N)	Connection config. code
VPD10-6Q5-M69		64.1	41	20	18.5	6	4.0 ~ 7.1	
VPD10-10Q5-M6		69.1	46	20	25	10	2.0 ~ 5.2	-M4
VPD10-15Q5-M6	_	79.1	51	25	30	15	2.0 ~ 5.9	-1014
VPD10-20Q5-M6		95.1	58	34	37	20	1.1 ~ 4.8	
VPD20-6Q5-M69		64	40.9	20	18.5	6	7.0 ~ 12.6	
VPD20-10Q5-M6	20	70	46.9	20	24.5	10	3.3 ~ 10.0	
VPD20-15Q5-M6	20	80	51.9	25	29.5	15	3.3 ~ 10.4	
VPD20-20Q5-M6		96	58.9	34	36.5	20	2.0 ~ 8.7	-M6
VPD30-6Q5-M69		64	40.9	20	18.5	6	7.0 ~ 12.6	-IVIO
VPD30-10Q5-M6	30	70	46.9	20	24.5	10	3.3 ~ 10.0	
VPD30-15Q5-M6	30	80	51.9	25	29.5	15	3.3 ~ 10.4	
VPD30-20Q5-M6		96	58.9	34	36.5	20	2.0 ~ 8.7	


- ※.5:Replaced with Pad resin material code. Refer to page 958 for details.
- ※ . 9: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with 9 in the table above.
- ※ .Tightening torque of a pad holder fixing bulkhead nut is 4.5~6N⋅m.



VPOD Spring type / Side port / Push-in fitting / No cover holder



VPOD203Q56 VPOD303Q56

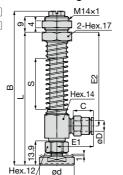


RoHS Compliant M CAD (2D&3D)

Stroke (mm) 20,30,40,50

										Unit: mm
Model code	Pad O.D. ød	Tube O.D. øD	В	L	E1	E2	Tube end C	Stroke S	Spring force (N)	Connection config. code
VPOD20-20Q5-3J		3			19.6		10.9			
VPOD20-20Q5-4J		4	75.5	63.4	19.0	41	10.9	20	1.5~4.9	
VPOD20-20Q5-6J		6			20.9		11.7			
VPOD20-30Q5-3J		3			19.6		10.9			
VPOD20-30Q5-4J		4	88.5	76.4	19.0	54	10.9	30	1.1~4.8	
VPOD20-30Q5-6J	20	6			20.9		11.7			
VPOD20-40Q5-3J	20	3			19.6		10.9			
VPOD20-40Q5-4J		4	101.5	89.4	10.0	67	10.0	40	1.0~4.5	
VPOD20-40Q5-6J		6			20.9		11.7			
VPOD20-50Q5-3J		3			19.6		10.9			
VPOD20-50Q5-4J		4	114.5	102.4	10.0	80	10.0	50	0.9~4.5	
VPOD20-50Q5-6J		6			20.9		11.7			-M6
VPOD30-20Q5-3J		3			19.6		10.9			1410
VPOD30-20Q5-4J		4	75.5	63.4		41		20	1.5~4.9	
VPOD30-20Q5-6J		6			20.9		11.7			
VPOD30-30Q5-3J		3			19.6		10.9			
VPOD30-30Q5-4J		4	88.5	76.4		54		30	1.1~4.8	
VPOD30-30Q5-6J	30	6			20.9		11.7			
VPOD30-40Q5-3J		3			19.6		10.9			
VPOD30-40Q5-4J		4	101.5	89.4		67		40	1.0~4.5	
VPOD30-40Q5-6J		6			20.9		11.7			
VPOD30-50Q5-3J		3			19.6		10.9			
VPOD30-50Q5-4J		4	114.5	102.4		80		50	0.9~4.5	
VPOD30-50Q5-6J		6			20.9		11.7			

^{※.5:}Replaced with Pad resin material code. Refer to page 958 for details.

^{※.}Tightening torque of a pad holder fixing bulkhead nut is 4.5~6N⋅m.

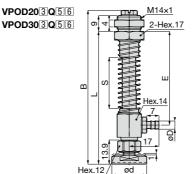

RoHS Compliant A CAD (2D&3D)

Stroke (mm) 20,30,40,50

								Offic + Hilli
Model code	Pad O.D.	Tube I.D.	В	L	Е	Stroke	Spring force	Connection
Woder code		øD					(N)	config. code
VPOD20-20Q5-4B		2.5	75.5	63.4	41	20	1.5~4.9	
VPOD20-20Q5-6B		4	75.5	05.4	7.	20	1.5 4.5	
VPOD20-30Q5-4B		2.5	88.5	76.4	54	30	1.1~4.8	
VPOD20-30Q5-6B	20	4	00.5	70.4	34	30	1.1 4.0	
VPOD20-40Q5-4B	20	2.5	101.5	89.4	67	40	1.0~4.5	
VPOD20-40Q5-6B		4	101.5	09.4	07	40	1.0 - 4.5	
VPOD20-50Q5-4B		2.5	114.5	102.4	80	50	0.9~4.5	
VPOD20-50Q5-6B		4	114.5	102.4	00	30	0.9 - 4.5	140
VPOD30-20Q5-4B		2.5	75.5	63.4	41	20	1.5~4.9	-M6
VPOD30-20Q5-6B		4	75.5	03.4	41	20	1.5 - 4.9	
VPOD30-30Q5-4B		2.5	88.5	76.4	54	30	1.1~4.8	
VPOD30-30Q5-6B	20	4	00.5	70.4	34	30	1.1 - 4.0	
VPOD30-40Q5-4B	30	2.5	101.5	89.4	67	40	1.0~4.5	
VPOD30-40Q5-6B		4	101.5	09.4	07	40	1.0.04.5	
VPOD30-50Q5-4B		2.5	114.5	102.4	80	50	0.9~4.5	
VPOD30-50Q5-6B		4	114.5	102.4	00	30	0.0 - 4.0	

 $[\]ensuremath{\text{\%}}$.5]:Replaced with Pad resin material code. Refer to page 958 for details.

^{※.}Tightening torque of a pad holder fixing bulkhead nut is 4.5~6N·m.

VPOD Spring type / Side port / Female thread / No cover holder

Canadaga

VPOD20③Q5-M6
VPOD30③Q5-M6

WM14x1
2-Hex.17

Hex.12

RoHS Compliant M CAD (2D&3D)

Stroke (mm) 20,30,40,50


Model code	Pad O.D. ød	В	L	Е	Stroke S	Spring force (N)	Connection config. code
VPOD20-20Q5-M6		75.5	63.4	41	20	1.5~4.9	
VPOD20-30Q5-M6	20	88.5	76.4	54	30	1.1~4.8	
VPOD20-40Q5-M6	20	101.5	89.4	67	40	1.0~4.5	
VPOD20-50Q5-M6		114.5	102.4	80	50	0.9~4.5	-M6
VPOD30-20Q5-M6		75.5	63.4	41	20	1.5~4.9	-IVIO
VPOD30-30Q5-M6	30	88.5	76.4	54	30	1.1~4.8	
VPOD30-40Q5-M6	30	101.5	89.4	67	40	1.0~4.5	
VPOD30-50Q5-M6		114.5	102.4	80	50	0.9~4.5	

 $[\]ensuremath{\,\times\,}$. $\ensuremath{\,\bar{\boxtimes}}$:Replaced with Pad resin material code. Refer to page 958 for details.

^{※.}Tightening torque of a pad holder fixing bulkhead nut is 4.5~6N⋅m.

VPF Spring type / Direct mount / Metric thread / Standard holder

■ RoHS Compliant
■ Copper alloy free available
■ CAD (2D&3D)

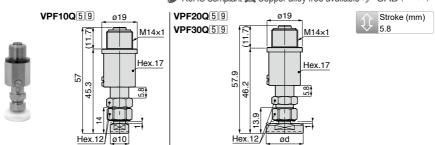

Unit: mm

Model code	Pad O.D. ød	Spring force (N)	Connection config. code
VPF10Q59	_	7.9 ~ 15.0	-M4
VPF20Q59	20	7.9 ~ 15.0	-M6
VPF30Q59	30	7.9 ~ 15.0	-IVIO


% .5:Replaced with Pad resin material code. Refer to page 958 for details.

*. Tightening torque of a pad holder fixing bulkhead nut is 4.5~6N·m.

^{*. 9:}Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).



■ Construction (Vacuum Pad Holder and Vacuum Pad Mark-free Series)

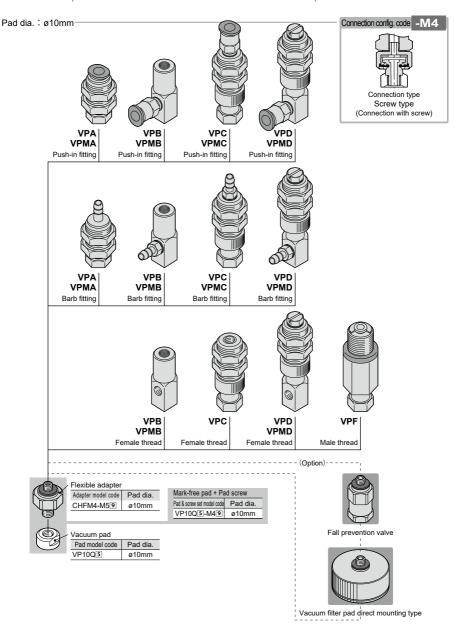


- **The Fitting model code for option "-S3" is different from that of standard products. Contact us for details.
- * Model code of Vacuum Pad Holder alone is following. Contact us for price.
- Model designation (Example)

3 6

1


1 : Holder type, 3: Stroke(For spring type holder only. VPF holder is excluded.), VP C -M4 -6 -4B -S3 6: Port size · type, 9:-S3 spec.

Pad dia.: ø20, ø30mm

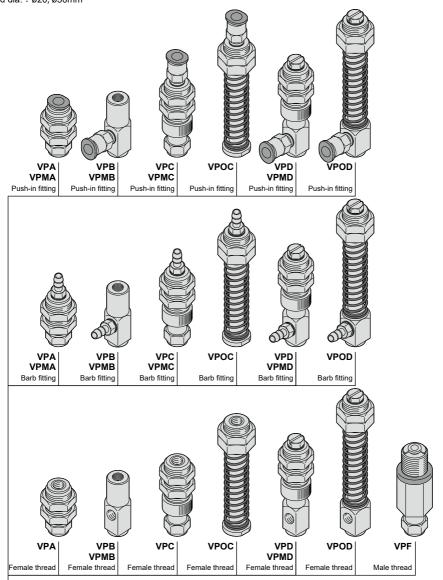



Connection config. code -M6

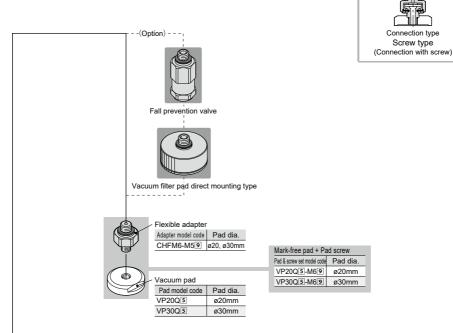

- $\label{thm:condition} \parbox{2.5cm}{\parbox{2.5cm}{\times}} The Fitting model code for option "-S3" is different from that of standard products. Contact us for details.$
- $\ensuremath{\mbox{\%}}$ Model code of Vacuum Pad Holder alone is following. Contact us for price.
- Model designation (Example)

VP <u>C</u> -M6 <u>-6</u> <u>-6B</u> <u>-S3</u>

1 : Holder type, 3 : Stroke(For spring type holder only. VPF holder is excluded.), 6 : Port size · type, 9 :- S3 spec.

Vacuum Pad

Common Safety Instructions for Vacuum Pads

Before selecting or using PISCO products, read the following instructions. Read the detailed instructions for individual series.

⚠ Warning

- 1. Take safety measures in advance where a dropping work-piece can cause danger.
- 2. Make sure to install a vacuum pad holder securely. Looseness may cause trouble.
- 3.Pay special attention to the work conveyance by screwed vacuum pads, accompanied by rotary movement. There is a possibility of troubles due to the looseness of screws from the rotary movement.
- 4.There is a possibility of troubles due to the leakage of vacuum system, clogging, vacuum pad abrasion, crack, deterioration, the galling of slider part in the holder and the looseness in joints. Carry out maintenance inspection periodically.
- 5.When a work-piece is conveyed by a vacuum pad, consider the acceleration, impacts and wind pressure. Otherwise, the work-piece may drop during conveyance.

↑ Caution

- 1.Thoroughly read and understand the theoretical suction force in this catalog before selecting diameter, Qty and suction place of vacuum pads. Select vacuum pads with enough margin in suction force.
- 2.The product incorporating NBR as seal rubber material has a risk of malfunction caused by ozone crack. Ozone exists in high concentrations in static elimination air, clean-room, and near the high-voltage motors, etc. As a countermeasure, material change from NBR to HNBR or FKM is necessary. Consult with Pisco for more information.
- 3. Select the material of vacuum pad in accordance with use environment and ease of use, referring to "Selecting Method".
- 4. Select the suitable pad shape (type) in accordance with a work-piece and its shape, referring to "Characteristics of Pad Material".
- 5. Select spring-holder type when work-pieces have different heights or are weak against an external force. Select the suitable holder type, referring to spring force and spring length in the catalog.
- 6.Since spring-holder type has a sliding action, minimize the transverse load. Otherwise, the life time of the holder can be reduced or malfunction of the holder can occur.
- 7.In replacing vacuum pads, check the structure of holders and pads in the catalog and tighten the hexagonal-column of the holder with a proper tool, referring to the following tightening torque.

■ Table. tightening torque

Vacuum pad holder	Standard	Mini		
Pad screw size (mm)	Tightening torque (N·m)			
M4×0.7	0.5 ~ 1.0	0.9 ~ 1.1		
M6×1	2 ~ 2.7			
M10×1.5	5 ~ 7	_		
M20×2	9 ~ 10	-		

8.In replacing the adapters of Soft / Soft Bellows Series, check the structure of holders, pad and adapters and tighten the hexagonal-column of the holder with a proper tool, referring to the following tightening torque.

■ Table. tightening torque

Pad screw size (mm)	Tightening torque (N⋅m)	
M4×0.7	0.7 ~ 0.8	
M6×1	1.5 ~ 2.0	




9.In installing vacuum pad holders of general and small type with bulkhead, check the structure and tighten the hexagonal-column of the holder with a proper tool, referring to the following tightening torque.

Vacuum pad holder	Standard			Mini		
Vacuum pad holder type	VPA	VPC, VPD, VPF, VPHC, VPHD, VPHDW	VPE	VPMA	VPMC, VPMD	VPME
Bulkhead nut size (mm)		Tightening torque (N·m)				
M3×0.5	_		0.7	_	_	0.7
M4×0.5	_		_	1 ~ 1.2	_	_
M4×0.7	1 ~ 1.2	_	_	_	_	_
M5×0.5	1.5 ~ 2		_	1.5 ~ 2	_	_
M5×0.8	_	_	1 ~ 1.5	_	_	1 ~ 1.5
M6×0.75	2~3	_	_	2 -	- 3	_
M8×0.75	2.5 ~ 3.5	1.8 ~ 2.4	_	2.5 ~ 3.5		_
M8×1	_	1.8 ~ 2.4	_	_	_	_
M10×1	5~7	4.5 ~ 6	_	5 ~ 7	4 ~ 6	_
M12×1	12 ~ 14	8 ~ 10	_	_	_	_
M14×1	18 ~ 21	4.5 ~ 6	_	_	_	_
M16×1	18 ~ 21(%)	2~3	_	_	_	_
M20×1	19 ~ 21	_	_	_	_	_
M22×1	19 ~ 21(%)	16 ~ 20	_	_	_	_
M24×2	40 ~ 50	_	_	_	_	_
M30×2	_	42 ~ 54	-	_	_	_

- *Values for Vacuum pad holder for Packaging bag series.
- 10.In replacing vacuum pad rubbers of Standard Series ø80, ø100mm, ø150mm, ø200mm and Bellows Series ø80mm, ø100mm, check the structure of holders and pads and tighten the hexagonal-column of the holder with a proper tool, referring to the following tightening torque.
 - Table. tightening torque

	Pad screw size (mm)	Tightening torque (N⋅m)
	M4×0.7	0.5~0.7
-	M5×0.8	0.5 ~ 0.7

- 11. Check the structure of vacuum pad in the catalog before replacing a filter element.
- 12.Refer to "Common Safety Instructions for Fittings" for handing fitting joint parts.
- 13.In installing spring-holder type, do not hold the shaft A with a spanner. In replacing vacuum pad, hold the hexagonal-column of the shaft with a spanner. If the keyway B is deformed, there is a possibility of malfunction.
- 14. Excessive tightening of a fixing nut may deform the bulkhead part and result in malfunction of the keyway.
- 15.As the nature of rubber, powdery component like additives may come out on the surface of a vacuum pad as time elapses.



Vacuum Pad Selection Guide

Selection Guide 1 ➤ Select the diameter of vacuum pad from the formula ① and chart of the theoretical suction force ②

The theoretical suction force is determined from pad area and vacuum level. Calculated value is for reference only, so carry out the evaluation under an actual operating condition. The theoretical suction force is calculated under a static condition. Obtain an enough margin, considering the weight of a workpiece and acceleration of lifting, pause and rotary movement. Enough room is needed in deciding a number of pads and arrangement position.




 $W = \frac{C \times P}{101} \times 10.13 \times f$

W: Suction force(N)

C: Pad area(cm²)


P: Vacuum level -kPa


f : Safety factor Horizontal lifting (refer to the right fig.) ▶ 1/4 Vertical lifting (refer to the right fig.) ▶ 1/8




Horizontal lifting


- *1.Refer to the following chart for Sponge Series.(Internal diameter is used for calculation)
- *2.Refer to the following chart for Flat Series.(Pad grooves are used for calculation)
- *3.As for Bellows, Multi-Bellows, Soft, Soft Bellows and Ultrathin Series, their theoretical suction force may exceed the strength of pad itself, depending on the vacuum level. Carry out the evaluation under an actual operating condition.
- ② Chart of the theoretical suction force <Add safety factor to values from the chart>

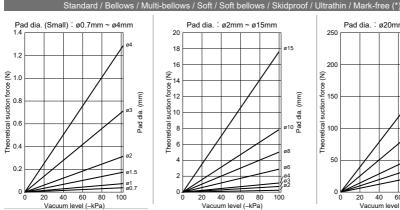

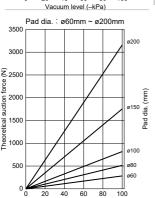


Vacuum level (-kPa)

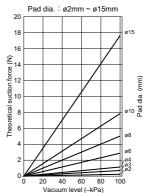


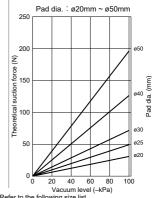


- *Some sizes are not available for some pad series. Refer to the following size list.
- : indicates that pad size is available

	F	Pad type	Standard	Bellows	Multi-bellows	Soft	Soft bellows	Skidproof	Ultra thin	Mark-free
		ø0.7~ø3	•	_	_	_	_	_	_	_
		ø4	•	_	_	•	_	_	_	_
		ø6	•	•	_	•	•	_	_	_
		ø8	•	•	_	•	•	_	•	_
		ø10	•	•	•	•	•	•	•	•
da. (IIIII)		ø15	•	•	_	•	•	_	•	_
	Pad	ø20	•	•	•	•	•	•	•	•
r g	dia.	ø25	•	•	_	_	_	_	_	_
	÷.	ø30	•	•	•	•	_	•	_	•
	(mm)	ø40	•	•	•	•	_	•	_	_
		ø50	•	•	•	_	_	•	_	_
		ø60	•	•	_	_	_	_	_	_
		ø80	•	•	_	_	_	_	_	_
		ø100	•	•	_	_	_	_	_	_
		ø150	•	_	_	_	_	_	_	_
		ø200		_		_				

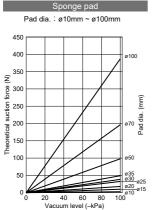

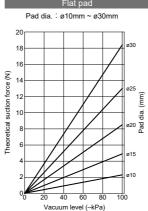


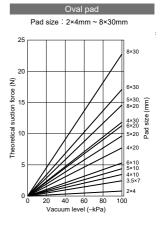

Vacuum Pad

Selection Guide 2 ➤ Select a vacuum pad type according to a work-piece.

Please select suitable pads for your application from the following.

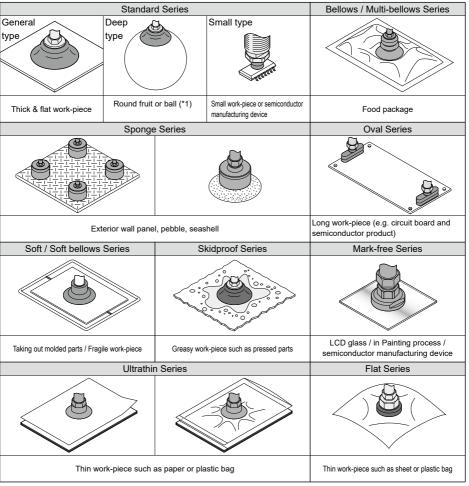

*1. The table below is a reference for the vacuum pad deep type and the size of round work-piece.

•									
Spherical dia. : S (mm)	ø20	ø30	ø40	ø50	ø80	ø100	ø120	ø160	ø200
Pad size : d (mm)	ø15	ø20	ø25	ø30	ø40	ø50	ø60	ø80	ø100

*2.Refer to the previous page for pad dia. selection except deep type. Refer to the next page for the characteristics of pad materials.





Selection Guide 2 Select a vacuum pad material from an application...

معدما	calact	tha	enitable	material	from	the table.	
riease	Select	uie	Sultable	materiai	1110111	the table.	

PIE	Please select the		ble ma	terial fr	om the	table.									
Ite	m	Pad material	Nitrile rubber	NBR Suited for the food sanitation act. (Japan)	HNBR	Silicone rubber	Conductive Silicone rubber	Urethane rubber	Fluoro rubber	Fluorosilicone rubber	EPDM	Conductive Butadiene rubber (Low resistance type)	Conductive NBR (low resistance)	Chloroprene rubber (For Sponge type)	Silicone rubber (For Sponge Type)
		Material code	N, NH (*1)	G	HN	S	SE	U	F	FS	EP	E	NE	-	s
			Card	board	Cardboard	Semico	nductors	Cardboard	Chemical	Taking out	Application	General	Semi-	Uneven	Uneven
			Plyv	vood	Plywood	Takir	ng out	Plywood	environment	molded	that	pars of	conductors	work-piece	work-piece
			Metal	plate	Metal plate	molde	d parts	Metal plate	High temp.	parts	requires	semicon-			Food-
			Food-	related	Food-related	Thin wo	rk-piece		work-		light- resistant or	ductors			related
			Other	general	Other general	Food-	related		pieces		ozoneproof				
Ap	plication		wo	ork	work						In use				
					In use under						under the				
					a low ozone						moisture				
					concentration						containing atmosphere				
					environment						аштоортого				
Pa	d color		Black	Gray	Black	Translucent	Black	Blue	Gray	Salmon	Black	Black	Black	Black	Salmon
		Standard	50°~80°	60°~70°	50°~70°	50°	60°	55°~70°	60°~70°	-	50°~70°	70°	60°~70°	-	-
		Bellows	50°	-	50°	50°	60°	55°	60°	-	50°	-	60°	-	-
		Multi-bellows	50°	50°	50°	50°	-	55°	50°	-	50°	-	60°	-	-
	Surface	Oval	40°~50°	-	50°	40°~50°	50°~60°	55° (*2)	50° (*2)	-	50°	70°	70°	-	-
	hardness	Soft	40°	-	-	40°	60°	-	-	40°	-	-	50°	-	-
	(Shore A)	Soft bellows	40°	-	50°	40°	-	55°	-	-	50°	-	60°	-	-
Ph		Skidproof	50°	-	-	50°	-	55°	60°	-	-	-	60°	-	-
/sic		Ultrathin	40°	-	-	40°	-	55°	50°	40°	-	-	60°	-	-
<u>a</u> F		Flat	60°	-	-	40°	40°	50°	50°	-	-	-	60°	-	-
Physical Properties	Highest ope	_ • •		D°C	140°C		0°C	60°C	230°C	180°C	150°C	100°C	110°C	80°C	180°C
Ĕ.	Lowest oper	_ • •	-30		-30°C)°C	-20°C	-10°C	-50°C	-40°C	-50°C	-30°C	-45°C	-40°C
es	Weathera			7	0)	0	0	0	0	0	\triangle	0	0
	Ozone-pro			<	0)	0	0	0	0	×	×	0	0
	Acid-resis			7	\triangle)	×	0	0	0	\triangle	\triangle	\triangle	0
	Alkaline-re				0	_)	×	×	0	0	0	0	0	0
	Oil	(Gasoline oil)			0		Δ	0	0	Δ	×	×	0	×	Δ
	resistance	(Benzene/toluene)		7	×		^	Δ	0	Δ	×	×	Δ	Δ	Δ
	Volume re	sistance	-	-	-	-	Max. 10⁵Ω·cm	-	-	-	-	Max. 200Ω-cm	Max. 200Ω-cm	-	-

Legend \bigcirc

 $\bigcirc:\mathsf{Best}$

○ : Suitable

 \triangle : Good \times : NG

*1.Material code "NH" is only available for Skidproof Series.

Note 1) .The above "Physical Properties" shows the data of general synthetic rubbers.

Note 2). The highest / lowest operating temp. is for momentary usage. Carry out durability evaluation in case of continuous usage under the highest / lowest operating temp.

^{*2.}It does not apply to pad size: 4×30mm.

Vacuum Pad

Please select the suitable vacuum pad resin material from the table.

			Pad material	PEEK	POM	Conductive PEEK
		Material	Mark free series	К	M	KE
Item]		Resin attachment for Bellows	-QK	014	-QKE
		code	series	-QK	-QM	-QKE
				Manufacturing machine for	General production line	Manufacturing machine for
Арр	lication			liquid crystal / semiconductor	Food-related machine	liquid crystal / semiconductor
	ad color				Packaging machine	Electronic components
Pad	color			Natural (ivory) White		Black
H	'ad color Highest operating to		g temp.	250°C	95°C	250°C
ΨĮ	_owest ope	erating	g temp.	-50°C	-60°C	-50°C
Physical	Neatherab	ility		0	×	0
	Acid-resista	ance		0	×	0
P /	Alkaline-res	sistan	ce	0	Δ	0
Properties	Self-lubricit	y		0	0	0
ies /	Abrasion-re	esista	nce	0	0	0
١	/olume res	istan	ce	-	-	10⁵~106Ω·cm

Legend 2

 $\bigcirc:\mathsf{Best}$

○ : Suitable△ : Good

X:NG

Note 1). The above "Physical Properties" shows the data of pad resin material only. The holder of Mark-free Series is not included.

Note 2). The above "Physical Properties" shows the data of resin attachment only. The pad rubber is not included.

Note 3). The above "Physical Properties" shows a general properties of resin materials and not a guaranteed value. Carry out the necessary evaluation under an actual operating condition.

Note 4). The highest / lowest operating temp. is for momentary usage. Carry out durability evaluation in case of continuous usage under the highest / lowest operating temp.

Note 5). Volume resistance is a representative value from the material manufacture, and not a guaranteed value.

To prevent dust from getting into the pad holder. Install a vacuum filter pad direct mounting type between a vacuum pad and a holder. Vacuum generator Pad holder Vacuum air from which dust was removed by a vacuum filter pad direct mounting type Vacuum air containing dust Vacuum pad Work-piece


To prevent dust from getting into the pad holder. Installing a fall prevention valve between a vacuum pad and a holder prevents the troubles like system break down, minimizing the vacuum drop of the whole system automatically by reducing suction flow of the part where the workpiece falls from the vacuum pad (within the range not causing any problem), or no work-piece is to be sucked. A Vacuum source Pad holder Fall prevention valve Vacuum pad Work-piece



Reference Guide for Vacuum Pad


Impact on pad

Avoid an impact or a large force on a vacuum pad, when it is pressed against a work-piece. It may cause deformation, crack or abrasion at an early stage of use. Adjust the pad position so that the lip of pad touches lightly on a workpiece. Especially a small type of vacuum pad should be positioned precisely.



Large and wide flat plate work-piece

When lifting large size of glass board or circuit board, work-piece may bend by the lifting acceleration or the self-weight. Select a proper size of pad and positioning, considering an enough margin of suction force.




Soft work-piece

When soft work-pieces such as plastic bags, papers or thin boards are sucked, work-pieces can be deformed or shrunk by vacuum suction (Figure-1). Select smaller vacuum pads and reduce the vacuum pressure. Smaller vacuum pads are suitable for plastic bags and papers. When plastic paper bags are opened by using vacuum pads, shift the center of two vacuum pads slightly in order to open them easily as Figure-2 shows.




Inclined work-piece

Select Free Holder for an inclined work-piece.

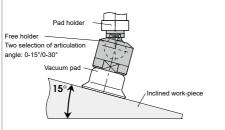


Porous or perforated work-piece

Since the suction of a porous work-piece causes a drop of suction force, select the proper specifications of vacuum system and secure a larger effective crosssection area of the piping. Selecting a small type of vacuum pad is one of solutions to reduce the air leakage.




Lifting work-piece, sucking the both side of it

Since all vacuum pad holders are designed for horizontal lifting, consider the strength of holders and pads.

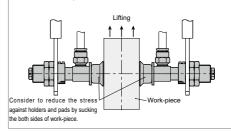


Work-piece with different heights

Select Long Stroke holders for work-pieces having different heights, or piled-up work-pieces. Its stroke can absorb the difference in height.

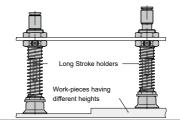

Conveyance with rotary movement

When vacuum pad is fixed with a screw and has a rotary movement, the pad may drop due to the loosened screw. Pay special attention when the vacuum location of work-piece is off the center of work-piece gravity.



■ Pad dia. list by pad type and material

Pa	d material				N	: Nitrile rubb	er			
F	Pad type	General type	Standard Deep type	Small type	Bellows	Multi- Bellows	Soft	Soft bellows	Ultrathin	Flat
	ø0.7	Octional type	Беср турс	oman type		DCIIOW3		DOILOWS		
	ø1	•								
	ø1.5									
	ø2	•								
	ø3									
	ø4			•						
	ø6				•					
	ø8				•				•	
Pad	ø10								•	•
рр	ø15				-				•	
<u>a</u> .	ø20					•				
dia. (mm)	ø25	•	•		•					•
2	ø30				•	•	•			•
	ø40	•	•		•	•	•			
	ø50	•	•		•	•				
	ø60	•	•		•					
	ø80	•	•		•					
	ø100	•	•		•					
	ø150	•								
	ø200	•								

: Available

Pa	d material					s:	Silicone ru	bber				
P	ad type	General type	Standard Deep type	Small type	Bellows	Multi- Bellows	Soft	Soft bellows	Flat	Skidproof	Ultrathin	Sponge
	ø0.7	Contorui typo	Боор туро	•		DOMONO		DONOVIO				
Ì	ø1	•		•								
Ì	ø1.5			•								
Ì	ø2	•		•								
Ì	ø3	•		•								
	ø4	•		•			•					
Ì	ø6	•			•		•	•				
Ì	ø8	•			•		•	•			•	
_[ø10	•			•	•	•	•	•	•	•	•
Pad dia. (mm)	ø15	•	•		•		•	•	•		•	•
싍	ø20	•	•		•	•	•	•	•	•	•	•
. E	ø25	•	•		•				•			•
m [ø30	•	•		•	•	•		•	•		•
$\overline{}$	ø35											•
	ø40	•	•		•	•	•			•		
	ø50	•	•		•	•				•		•
	ø60	•	•		•							
	ø70											•
	ø80	•	•		•							
	ø100	•	•		•							•
	ø150	•										
	ø200	•										



486



Pa	d material				U:	Urethane rub	ber			
	and to ma		Standard		Bellows	Multi-	Soft bellows	Chidagaaf	Ultrathin	Flat
-	Pad type	General type	Deep type	Small type	bellows	Bellows	Soil bellows	Skidproof	Oltrathin	Fial
	ø0.7			•						
	ø1	•		•						
	ø1.5			•						
	ø2	•		•						
	ø3	•		•						
	ø4	•		•						
	ø6	•			•		•			
_	ø8	•			•		•		•	
Pad	ø10	•			•	•	•	•	•	•
읈	ø15	•	•		•		•		•	•
dia. (mm)	ø20	•	•		•	•	•	•	•	•
m	ø25	•	•		•					•
	ø30	•	•		•	•		•		•
	ø40	•	•		•	•		•		
	ø50	•	•		•	•		•		
	ø60	•	•		•					
	ø80	•	•		•					
	ø100	•	•		•					
	ø150	•								
	ø200	•								

: Available

Pa	d material				F: Fluor	ro rubber				G: NBRS	Suited for the fo	od sanitation	act. (Japan)
) and to ma		Standard		Delleure	Multi-	Chidneses	I lituathia	Flat		Standard		Multi-
-	ad type	General type	Deep type	Small type	Bellows	Bellows	Skidproof	Ultrathin	Flat	General type	Deep type	Small type	Bellows
	ø0.7			•								•	
	ø1	•		•						•		•	
	ø1.5			•								•	
	ø2	•		•						•		•	
	ø3	•		•						•		•	
	ø4	•		•						•		•	
	ø6	•			•					•			
_	ø8	•			•			•		•			
Pad dia. (mm)	ø10	•			•	•	•	•	•	•			•
d:	ø15	•	•		•			•	•	•	•		
(ø20	•	•		•	•	•	•	•	•	•		•
ᇳ	ø25	•	•		•				•	•	•		
	ø30	•	•		•	•	•		•	•	•		•
	ø40	•	•		•	•	•			•	•		•
	ø50	•	•		•	•	•			•	•		•
	ø60	•	•		•								
	ø80	•	•		•								
	ø100	•	•		•								
	ø150	•											
	ø200	•											

487

Pa	ıd material		SE : Cond	ductive Silico	ne rubber			ve Butadiene esistance type)	S : Chloroprene rubber	NH: Oilproof NBR
	Pad type	Stan		Bellows	Soft	Flat	Stan	dard	Sponge	Skidproof
	uu typo	General type	Small type	200110			General type	Small type	opongo	
	ø0.7		•					•		
	ø1	•	•				•	•		
	ø1.5		•					•		
	ø2	•	•				•	•		
	ø3	•	•				•	•		
	ø4	•	•		•		•	•		
	ø6	•		•	•		•			
	ø8	•		•	•		•			
_	ø10	•		•	•	•	•		•	•
ac	ø15	•		•	•	•	•		•	
Pad dia. (mm)	ø20	•		•	•	•	•		•	•
э. —	ø25	•		•		•	•		•	
퓕	ø30	•		•	•	•	•		•	•
٥	ø35								•	
	ø40	•		•	•		•			•
	ø50	•		•			•		•	•
	ø60	•		•						
	ø70								•	
	ø80	•		•						
	ø100	•		•					•	
	ø150	•								
	ø200	•								

: Available

Pad material				NE : C	onductive NE	BR (low re	sistance)			
Pad type		Standard		Bellows	Multi-	Soft	Soft bellows	Skidproof	Ultrathin	Flat
rau type	General type	Deep type	Small type	type	Bellows	3011	3011 DellOWS	Skiupiooi	Oluauliii	гіаі
ø0.7			•							
ø1	•		•							
ø1.5			•							
ø2			•							
ø3			•							
ø4	•		•			•				
ø6	•			•		•	•			
ø8				•		•	•		•	
ള് ø10	•			•	•	•	•	•	•	•
ø10 ø15 ø20 ø25	•	•		•		•	•		•	•
ø20	•	•		•		•	•	•	•	•
∯ ø25	•	•		•						•
ø30	•	•		•	•	•		•		•
ø40		•		•	•	•		•		
ø50	•	•		•	•			•		
ø60		•		•						
ø80	•			•						
ø100	•	•		•						
ø150	•									
ø200	•									




Pa	d material			HN : I	HNBR					EP : I	EPDM			FS : Fluoros	silicone rubber
-	and to ma		Standard	t	Bellows	Multi-	Soft		Standard	t	Bellows	Multi-	Soft	Soft	Ultrathin
,	Pad type	General type	Deep type	Small type	Bellows	Bellows	bellows	General type	Deep type	Small type	type	Bellows	bellows	Son	Ultrathin
	ø0.7			•						•					
	ø1	•		•				•		•					
	ø1.5			•						•					
	ø2	•		•				•		•					
	ø3	•		•				•		•					
	ø4	•						•		•					
	ø6	•			•		•	•			•		•	•	
_	ø8	•			•		•	•			•		•	•	
Pad dia. (mm)	ø10	•				•	•	•			•	•	•		
d:	ø15	•	•		•		•	•	•		•		•	•	
	ø20	•	•		•	•	•	•	•		•	•	•	•	
Ħ	ø25	•	•					•	•		•				
$\overline{}$	ø30	•	•		•	•		•	•		•	•		•	
	ø40	•	•		•	•		•	•		•	•		•	
	ø50	•	•		•	•		•	•		•	•			
	ø60	•	•		•			•	•		•				
	ø80	•	•		•			•	•		•				
	ø100	•	•		•			•	•		•				
	ø150	•						•							
	ø200	•						•							

•: Available


	●. Available									
Pad material		N Nitrile rubber	S Silicone rubber	U Urethane rubber	F Fluoro rubber	SE Conductive Silicone rubber	Conductive Butadiene rubber (Low resistance type)	NE Conductive NBR (Low resistance type)	HN HNBR	EP EPDM
Pad type		Oval								
	2×4	•	•	•	•	•		•	•	•
	3.5×7	•	•	•	•	•		•	•	•
Pad dia. (mm)	4×10	•	•	•	•	•	•	•	•	•
	4×20	•	•	•	•	•	•	•	•	•
	4×30	•	•			•	•	•	•	•
	5×10	•	•	•	•	•	•	•	•	•
	5×20	•	•	•	•	•	•	•	•	•
	5×30	•	•	•	•	•	•	•	•	•
	6×10	•	•	•	•	•	•	•	•	•
	6×20	•	•	•	•	•	•	•	•	•
	6×30	•	•	•	•	•	•	•	•	•
	8×20	•	•	•	•	•	•	•	•	•
	8×30	•	•	•	•	•	•	•	•	•

: Available

Pad material		K : PEEK	M: POM	KE : Conductive PEEK	Q2K: PEEK	Q2M: POM	Q2KE : Conductive PEEK
Pad type		Mark free			Resin attachment for Bellows series		
Pg	ø10	•	•	•	•	•	•
ā	ø15				•	•	•
<u>a</u> .	ø20	•	•	•	•	•	•
Œ	ø25				•	•	•
3	ø30	•	•	•	•	•	•

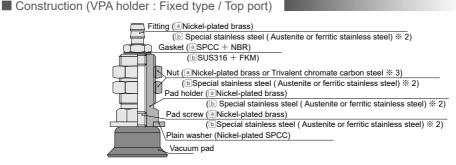

■ Construction (VPC holder : Spring type / Top port)

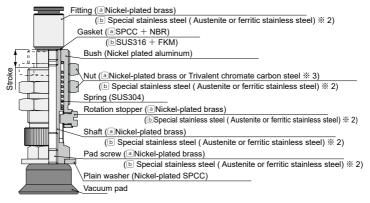

- *1. a: Standard spec. b: "-S3" spec.
- ※2. SUS303 equivalent corrosivity
- *3. Nut material differs depending on the bulkhead thread size. See below table for details.

Bulkhead thread size	Nut material			
(mm)	Nickel-plated brass	Trivalent chromate carbon steel		
M5×0.5	0	_		
M6×0.75	0	_		
M8×0.75	0	_		
M10×1	0	_		
M12×1	_	0		
M14×1	_	0		
M16×1	_	0		
M20×1	_	0		
M22×1	_	0		
M24×2	0	-		
M30×2	0	_		

▲ Safety Instructions

This safety instructions aims to prevent personal injury and damage to properties by requiring proper use of PISCO products.

Be certain to follow ISO 4414 and JIS B 8370.

ISO 4414: Pneumatic fluid power...General rules and safety requirements for system and their components.

JIS B 8370 : General rules and safety requirements for systems and their components.

This safety instructions is classified into "Danger", "Warning" and "Caution" depending on the degree of danger or damages caused by improper use of PISCO products.

Danger

Hazardous conditions. It can cause death or serious personal iniurv.



Warning Hazardous conditions depending on usages. Improper use of PISCO products can cause death or serious personal injury.



Products can cause personal injury or damages to properties. Hazardous conditions depending on usages. Improper use of PISCO

↑ Danger

- 1.Do not use PISCO products for the following applications.
 - ① Equipment used for maintaining / handling human life and body.
 - Equipment used for moving / transporting human.
 - 3. Equipment specifically used for safety purposes.

⚠ Warning

- 1. Selection of pneumatic products
 - ①.A user who is a pneumatic system designer or has sufficient experience and technical expertise should select pneumatic equipments.
 - 2). Due to wide variety of operating conditions and applications for PISCO products, carry out the analysis and evaluation on PISCO products. The pneumatic system designer is solely responsible for assuring that the user's requirements are met and that the application presents no health or safety hazards. All designers are required to fully understand the specifications of PISCO products and constitute all systems based on the latest catalog or information, considering any malfunctions.
- 2.Usage environment

Do not use PISCO products under the following conditions.

- ①.Beyond the specifications or conditions stated in the catalog, or the instructions.
- ②.Use at outdoors
- Excessive vibrations and impacts.
- ④.Exposure / adhere to corrosive gas, flammable gas, chemicals, seawater, water and vapor.



3. Handling of product

- ① .Handle the pneumatic equipment with enough knowledge and experience. Mishandling of compressed air is dangerous. A person having enough knowledge and experiences should carry out assembly, operation, and maintenance of devices equipped with pneumatic equipments.
- Do not operate machine / equipment or remove pneumatic equipment until safety is confirmed.
 - (1). Make sure that preventive measures against falling work-pieces or sudden movements of machine are completed before inspection or maintenance of these machine
 - (2) .Make sure the above preventive measures are completed. A compressed air supply and the power supply to the machine must be off, and also the compressed air in the systems must be exhausted.
 - (3).Restart the machines with care after ensuring to take all preventive measures against sudden movements.
- ③ .Do not disassemble or modify PISCO products, which affect the performance, function, and basic structure of the product.
- 4. Take safety measures such as providing a protection cover if there is a risk of causing damages or fire on machine / facilities by a fluid leakage.
- ⑤.Do not touch the release-ring of a push-in fitting when there is a working pressure.

 The lock may be released by the physical contact, and tube may fly out or slip out.
- ⑥.Frequent switchover of compressed air may generate heat, and there is a risk of causing burn injury.
- ② .Avoid any load on PISCO products, such as, a tensile strength, twisting and bending. Otherwise, there is a risk of causing damage to the products.
- ® .Do not use PISCO products for applications where threads or tubes swing / rotate. The product can be damaged in these applications.
- ⑨.Do not swing or rotate resin body of the products by force. It may damage to the products and cause a fluid leakage.
- ® Do not supply excessively dry air to products. It may cause malfunction due to a deterioration of rubber parts.
- ① .Do not wash or paint products with water or solvent. Solvent may damage a resin body, or painting may cause malfunction.
- ① The product incorporating NBR as seal rubber or gasket material has a risk of malfunction caused by ozone crack. Ozone exists in high concentrations in static elimination air, clean-room, and near the high-voltage motors, etc. As a countermeasure, material change from NBR to HNBR or FKM is necessary. Consult with Pisco for more information.
- ③ .Do not stand on a product, or put anything on it. It may cause falls, personal injury or damage to the product.

Safety Instructions

Warranty

When the product produces a trouble, which is caused by our responsibility, we will carry out either one of the following measures immediately.

- ①.Free-of-charge replacement of same product
- 2 .Free-of-charge repair of the product at our factory

Disclaimer I

- 1.PISCO does not take any responsibility for any incidental or indirect loss, such as production line stop, interruption of business, loss of benefits, personal injury, etc., caused by any failure on use or application of PISCO products.
- 2. When a cause of the trouble/malfunction applies to any of the following items, it is excluded from the coverage of the above warranty.
 - ① A case by a natural disaster, a fire except our responsibility, the act by the third person/party, the intention or fault of the customer.
 - ② A case when a product is used out of the specific range or in a method listed in the product catalog or the instruction manual.
 - ③ .A case by the remodeling of the product or by a change of structure, performance, or specifications which PISCO does not involved in.
 - 4. A case by the event that is unpredictable by the evaluations and the measures at the time on or before the initial delivery.
 - ③ A case caused by the phenomenon that is able to be evaded if your machine or equipment has functions or structures that are comprised in a common sense when this product is incorporated in your machine or equipment.
- 3.The damages caused by the defect of Pisco products shall be covered but limited to the full amount of the PISCO products paid by the customer. Additionally, the above warranty is limited simply to the product itself. The damage induced by the trouble of the product will not be compensated.





Common Safety Instructions for Products in This catalog

- 1.An odd noise may be heard when supply pressures are immediately before the peak of vacuum levels. The sounding of this odd noise means the characteristics are unstable and the sound may become even noisier. This situation can also adversely affect the sensor, resulting in a malfunction or trouble. So reset the supply pressure.
 - * Pressure range in which odd noise occurs is affected by atmospheric pressure.
- 2.Piping design and equipment selection should be made with an effective sectional area on supply pressure side of a vacuum generator being 3 times as large as the nozzle diameter as a standard. Insufficient air flow may impair the performance of the product.
- 3.Do not use a lubricator on products.
- 4.Clean or replace silencer element periodically. There is a possibility of dropping the performance or causing troubles by clogging on the element.
- 5. Keep products away from water, oil drops or dusts because they are neither drip-proof nor dust-proof. Otherwise there is a possibility of causing malfunction, damage to the products, or dropping the performance.

6.Piping

- ①.Compressed air contains a volume of drain (water, oxidized oil, tar and foreign material, etc.) Because the drain reduce product performance remarkably, dehumidify air with an aftercooler and a dryer, and improve the air quality.
- ② .Do not use a lubricator on products.
- 3) Rust in pipe and inflow of foreign substances cause the trouble, malfunction, and degradation of the product. Please install a filter (5µm or better filtration) in the compressed air supply line right in front of the product. The flushing inside the pipe before use and in certain intervals is recommended.
- (4) Remove dusts or drain before piping. They may get into the peripheral machine / facilities and cause malfunction
- (5) When inserting an ultra-soft tube into push-in fitting, make sure to place an Insert Ring into the tube edge. There is a risk of causing the escape of tube and a fluid leakage without using an Insert Ring.
- Arrange piping avoiding any load on fittings and tubes such as twist, tensile, moment load, shaking and physical impact. These may cause damages to fittings, tube deformations, bursting and the escape of tubes.
- (7) .Install protective cover when using at a place getting the direct sunlight.
- (8) Be sure to confirm each port of a vacuum generator with its appearance drawing or the marking on it before piping. Incorrect piping has a risk of damaging the product.
- Plumb a pressure sensor and a vacuum generator with pressure sensor at the end of vacuum system as much as possible. A long distance between a pressure sensor and a vacuum system end may increase plumbing resistance which may lead to a high vacuum level at the sensor even when no suctioning and a malfunction of pressure sensor. Make sure to evaluate the products in an actual system.
- (ii) A Shorter distance of plumbing with a wider bore is preferable at vacuum system side. A long plumbing with a small bore may result in slow response time at the time of releasing work-piece as well as in failure to secure adequate suction flow rate.

① In case of using non-PISCO brand tubes, make sure the tolerance of the outer tube diameter is within the limits of Table 1.


•Table 1. Tube O.D. Tolerance


mm size	Nylon tube	Polyurethane tube	
ø1.8mm	_	±0.05mm	
ø2mm	_	±0.05mm	
ø3mm	_	±0.15mm	
ø4mm	±0.1mm	±0.15mm	
ø6mm	±0.1mm	±0.15mm	
ø8mm	±0.1mm	±0.15mm	
ø10mm	±0.1mm	±0.15mm	
ø12mm	±0.1mm	±0.15mm	
ø16mm	±0.1mm	±0.15mm	

inch size	Nylon tube	Polyurethane tube
ø1/8	±0.1mm	±0.15mm
ø5/32	±0.1mm	±0.15mm
ø3/16	±0.1mm	±0.15mm
ø1/4	±0.1mm	±0.15mm
ø5/16	±0.1mm	±0.15mm
ø3/8	±0.1mm	±0.15mm
ø1/2	±0.1mm	±0.15mm
ø5/8	±0.1mm	±0.15mm

7-1.Tube insertion (Push-in fitting)

- ① .Make sure that the cut end surface of the tube is at a right angle without a scratch on the tube surface or deformations.
- ②.When inserting a tube, the tube needs to be inserted fully into the push-in fitting until the tubing edge touches the tube end of the fitting as shown in the figure below. Otherwise, there is a risk of leakage.





Tube is not fully inserted up to tube end.

- After inserting the tube, make sure it is inserted properly and not to be disconnected by pulling it moderately.
 - *When inserting tubes, Lock-claws may be hardly visible in the hole, observed from the front face of the release-ring. But it does not mean the tube will surely escape. Major causes of the tube escape are the followings; ① Shear drop of the lock-claws edge ② The problem of tube diameter (usually small)Therefore, follow the above instructions from ① to ③, even lock-claws is hardly visible.

7-2. Tube insertion (Compression fitting)

- ①.Make sure that the cut end surface of the tube is at a right angle without deformations or a scratch on its inner and outer surface.
- ② Pass the tube through the nut and insert the barb into the tube up to the barb end. Then tighten the hexagonal-column of the nut with a proper tool.
- ③ .Refer to Table 2 which shows the tightening torque.
 - ※ Hold the tube when tightening the nut, since the tube may rotate along with the nut.



- ④ .Make sure that the nut touches the metallic body. If not, loosen the nut, disconnect the tube and start over again from the process ①
- (5) Make sure that there is no leakage after tightening the nut.
- After inserting the tube, make sure it is inserted properly and not to be disconnected by pulling it moderately.
 - Table 2. Nut tightening torque

Tube O.D.	Tightening torque
ø10	Max. 4N·m
ø12	Max. 5N·m
ø16	Max. 14N·m

8-1. Tube disconnection (Push-in fitting)

- ①.Make sure there is no air pressure inside of the tube, before disconnecting it.
- ② Push the release-ring of the push-in fitting evenly and deep enough to pull out the tube toward oneself. By insufficient pushing of the release-ring, the tube may not be pulled out or damaged by scratch, and tube shavings may remain inside of the fitting, which may cause the leakage later.

8-2. Tube disconnection (Compression fitting)

- 1). Make sure there is no air pressure inside of the tube, before disconnecting it.
- ②.Use a proper tool to loosen the nut. Then disconnect the tube.

9.Installation of a fitting

- ①.When installing a fitting, use proper tools to tighten a hexagonal-column or an inner hexagonal socket. When inserting a hex key into the inner hexagonal socket of the fitting, be careful so that the tool does not touch lock-claws. The deformation of lock-claws may result in a poor performance of systems or an escape of the tube.
- ② .Refer to Table 3 in the next page which shows the tightening torque, when tightening a thread. Do not exceed these limits to tighten a thread. Excessive tightening may break the thread part or deform the gasket to cause a fluid leakage. Tightening thread with tightening torque lower than these limits may cause a loosened thread or a fluid leakage. Since the sealability is affected by the processing condition of the installing part, adjust the tightening torque or correct the installing part, according to the condition.
- Adjust the tube direction while tightening thread within these limits, since some PISCO products are not rotatable after the installation.

■ Table 3. Tightening torque / Sealock color / Gasket materials

Thread type	Thread size	Tightening torque	Sealock color	Gasket material	
	M3×0.5	0.7N·m		SUS304+NBR	
	M5×0.8	1 ~ 1.5N·m		SPCC+NBR	
	M6×1	2 ~ 2.7N·m			
Metric thread	M3×0.5	0.7N·m	n/a	POM	
	M5×0.8	1 ~ 1.5N·m			
	M6×0.75	0.8 ~ 1N·m			
	M8×0.75	1 ~ 2N·m			
	R1/8	4.5 ~ 6.5N·m		_	
Tanar nina throad	R1/4	7 ~ 9N·m	White		
Taper pipe thread	R3/8	12.5 ~ 14.5N·m	vviille		
	R1/2	20 ~ 22N·m			
Unified thread	No.10-32UNF	1 ~ 1.5N·m	n/a	SUS304+NBR, SPCC+NBR	
	1/16-27NPT	4.5 ~ 6.5N·m		_	
National Pipe	1/8-27NPT	4.5 ~ 6.5N·m			
Thread Taper (American	1/4-18NPT	7 ~ 9N·m	White		
standard)	3/8-18NPT	12.5 ~ 14.5N·m			
otaliaai a)	1/2-14NPT	20 ~ 22N·m			
	G1/4	12 ~ 14N·m		Aluminum + PBT	
G thread	G3/8	22 ~ 24N·m	n/a		
	G1/2	28 ~ 30N·m			

[%] These values may differ for some products. Refer to each specification as well.

- When removing a fitting, use proper tools to loosen a hexagonal-column. When inserting a hex key into the inner hexagonal socket of the fitting, be careful so that the tool does not touch lock-claws. The deformation of lock-claws may result in a poor performance of systems or an escape of the tube.
- ⑤ .Remove the sealant stuck on the mating equipment. The remained sealant may get into the peripheral equipment and cause malfunctions.

10. Handling of PISCO products

- ① .Impact caused by dropping or the like may lead to damage to the product and a fluid leakage.
- 11.PISCO products shall be used within the Operating temp. range, including the heat of the product itself generated by adiabatic compression.