

Vacuum Pad for Paper and Plastic Bag

# Vacuum Pad Ultrathin Series

# Wide selection of pad sizes, materials and holder types

 $\mathsf{Pad size:} 4 \mathsf{sizes.} \ \mathsf{Pad material:} 6 \mathsf{types.} \ \mathsf{Holder type:} 12 \mathsf{types}$ 

Improvement in adhesion and minimizing the overlapping adhesion by the lower lip height.

#### Stroke length of a spring holder is selectable.


• Conventional long stroke holder (with cover) is integrated into VPC or VPD. Stroke : 3, 10, 15 and 20 mm

Variety of selections in pad holder for "Copper alloy free" and against "low ozone concentration".

-S3 spec. : No copper based metal parts. HNBR or FKM is adopted for seal rubber.

# A Vacuum Pad Series

#### Vacuum Pad Ultrathin Series

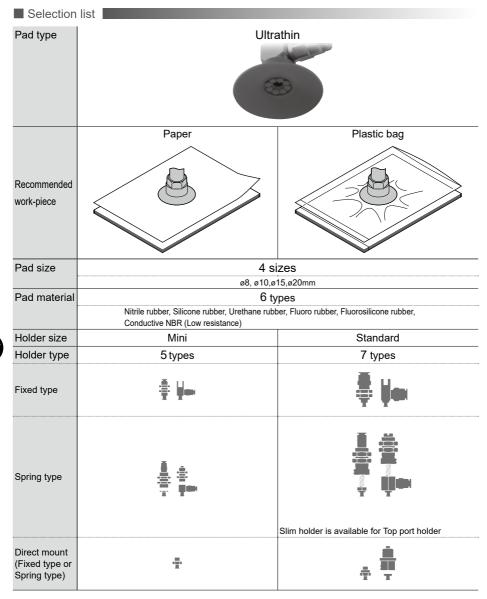


#### Suction Force

Regarding suction force of vacuum pad ultrathin rubber vacuum pad, the calculated suction force (theoretical suction force x safety factor) may not be assured, due to the characteristics of vacuum pad, vacuum level, pad material and work-piece, etc. Select the proper item based on "Vacuum Pad Selection Guide" (page 479). Carry out any necessary evaluation with an actual system before approval.



Model designation of Pad rubber only (Ex.)

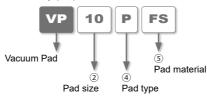

2.Pad size

Code	8	10	15	20			
Size(mm)	ø8	ø10	ø15	ø20			
Connection config. code	-T8						

#### ④.Pad type

,	
Code	Р
Туре	Ultrathin

#### ⑤.Pad material / Application


Code	Ν	S	U	F	FS	NE
Material	Nitrile rubber	Silicone rubber	Urethane rubber	Fluoro rubber	Fluorosilicone rubber	Conductive NBR (Low resistance)
Application	Cardboard	Semiconductors	Cardboard	Chemical	Taking out	Semiconductors
	Plywood	Taking out	Plywood	environment	molded parts	
	Iron plate	molded parts	Iron plate	High temp.		
	Food-related	Thin workpieces		work-pieces		
	Other general	Food-related				
	work-pieces					
Color	Black	Natural (Ivory)	Blue	Gray	Salmon	Black

% 1.The material of Conductive NBR (low resistance) is a nitrile rubber (Volume resistance : 200 $\Omega$ ·cm or less)

% 2.Pad material N and NE are not suitable for use under ozone environment.

# A Vacuum Pad Series


Vacuum Pad Ultrathin Series

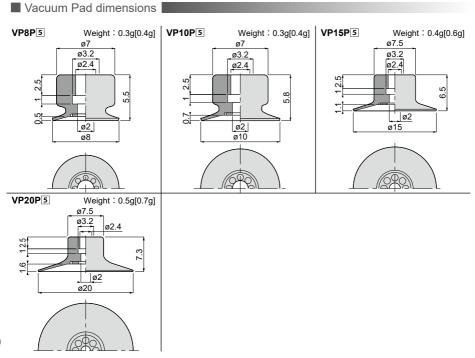

% Weight in [] is the weight of Fluoro rubber.



Drawing of Vacuum Pad and Holder Joint

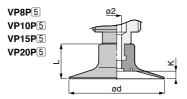

Unit:mm

Model code	Pad O.D. ød	L	Inner lip height K	Connection config. code
VP8P5	8	5.5	0.5	
VP10P5	10	5.8	0.7	то
VP15P5	15	6.5	1.1	-T8
VP20P5	20	7.3	1.6	

Dimension of Pad insertion part



# A Vacuum Pad Series

#### Vacuum Pad Ultrathin Series

Model designation of Holder + Pad (Ex.) С 10 -3 Ρ Ν -4J Vacuum pad (8) -S3 spec. 1 (7)Fall prevention valve (Option) Holder type 2 6 Port size and joint type Pad size 3 (5) Stroke Pad material (4) Pad type

1.Holder type

0	Mini	MA	0	Mini	MB	0	Mini	MC
Code	Slim	—	Code	Slim	—	òde	Slim	SC
æ	Standard	А	۳.	Standard	В	æ	Standard	С
T	Гуре	Fixed type / Top port	Туре		Fixed type / Side port	Туре		Spring type / Top port
0	Mini	MD	0	Mini	ME	0	Mini	-
Code	Slim	—	öde	Slim	—	ode	Slim	-
æ	Standard	D	Ð	Standard	E	æ	Standard	F
T	Гуре	Spring type / Side port			Fixed type / Direct mount			Spring type / Direct mount

2.Pad size

Code	8	10	15	20		
Size (mm)	ø8	ø10	ø15	ø20		
Connection config. code	-T8					

③.Stroke (No code entry for Holder code : MA, A, MB, B, E and F)

С	ode	-2	-3	-10	-15	-20
Stro	ke (mm)	2	3	10	15	20
-	VPMC	( <b>-T8</b> )				
Pad holder	VPSC		( <b>-</b> T8)			
olde	VPC		( <b>-</b> T8)	○( <b>-</b> T8)	○( <b>-</b> T8)	( <b>-</b> T8)
r code	VPMD	( <b>-</b> T8)				
æ	VPD		( <b>-</b> T8)	( <b>-</b> T8)	( <b>-</b> T8)	( <b>-</b> T8)

④.Pad type

Code	Р
Туре	Ultrathin



#### ⑤.Pad material / Application

Code	N	S	U	F	FS	NE
Material	Nitrile rubber	Silicone rubber	Urethane rubber	Fluoro rubber	Fluorosilicone rubber	Conductive NBR (Low resistance)
Application	Cardboard	Semiconductors	Cardboard	Chemical	Taking out	Semiconductors
	Plywood	Taking out	Plywood	environment	molded parts	
	Iron plate	molded parts	Iron plate	High temp.		
	Food-related	Thin workpieces		work-pieces		
	Other general	Food-related				
	work-pieces					
Color	Black	Natural (Ivory)	Blue	Gray	Salmon	Black

\* 1.The material of Conductive NBR (low resistance) is a nitrile rubber (Volume resistance : 200Ω·cm or less) \* 2.Pad material N and NE are not suitable for use under ozone environment.

6.Port size and joint type

Joint type		Pus	sh-in fitting	(mm)	Barb fitting (mm)			Female thread	
Code	-180J	-2J	-3J	-4J	-6J	-3B	-4B	-6B	-M5
Size	ø1.8	ø2	ø3	ø4	ø6	ø3×ø2	ø4×ø2.5	ø6×ø4	M5×0.8
-T8	0	0	0	0	0	0	0	0	0

%.Joint size differs depending on the holder type. Check the joint size by the holder dimensions lists in following pages.

#### ⑦.Fall prevention valve (Option)

Option	-ECV
Applicable holder	VPME, VPE

8.-S3 spec.

Code	No code	-S3
Spec.	Standard	Metal parts material : Copper alloy free material
		Sealing parts material : FKM or HNBR

\*. "-S3" option for VPMA, VPMB, VPMC and VPMD holders is available only with barb fitting.

# 🚡 Vacuum Pad Series


Vacuum Pad Ultrathin Series

Vacuum pad + Fixed type holder Dimensions

### VPMA Fixed type / Top port / Push-in fitting / Mini holder

RoHS Compliant X Copper alloy free available M CAD (2D&3D)



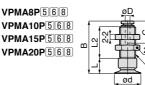

Unit:mm

Model code	Tube O.D. øD	Pad O.D. ød	Thread M	В	L1	L2	Tube end C	Hex. H	Connection config. code
VPMA8P5-180J	1.8		M6×0.75	19.6		12	8.4	8	
VPMA8P5-2J	2	8	10 ~ 0.75	19.0	5.5	12	0.4	0	
VPMA8P5-3J	3		M8×0.75	20.3		12.5	9.4	10	
VPMA10P5-180J	1.8		M6×0.75	19.9		12	8.4	8	]
VPMA10P5-2J	2	10	10 × 0.75	19.9	5.8	12	0.4	0	-T8
VPMA10P5-3J	3	1	M8×0.75	20.6		12.5	9.4	10	
VPMA15P5-180J	1.8		M6×0.75	0.075 00.0	6.5	10	8.4		-10
VPMA15P5-2J	2	15	INI6×0.75	20.6		12	8.4	8	
VPMA15P5-3J	3	]	M8×0.75	21.3	1	12.5	9.4	10	]
VPMA20P5-180J	1.8		110 0.75			10	0.4	8	1
VPMA20P5-2J	2	20	M6×0.75	21.4	7.3	12	8.4	ő	
VPMA20P5-3J	3		M8×0.75	22.1		12.5	9.4	10	

883

\*.5: Replaced with Pad rubber material code. Refer to page 882 for details.

\* .Pad material N and NE are not suitable for use under ozone environment.

% .Tightening torque of a pad holder fixing bulkhead nut is 1.5~2N·m.


•Thread size : M6×0.75 ▶ 2~3N·m. •Thread size : M8×0.75 ▶ 2.5~3.5N·m

#### VPMA Fixed type / Top port / Barb fitting / Mini holder

RoHS Compliant X Copper alloy free available M CAD (2D&3D)



VPMA10P 5 6 8 VPMA15P568 VPMA20P 5 6 8

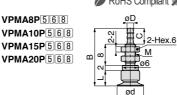

#### Unit: mm

Model code	Tube I.D. øD	Pad O.D. ød	Thread M	В	L	С	Connection config. code
VPMA8P5-3B8	2	8	M4×0.5	21.5	5.5	6	
VPMA8P5-4B8	2.5	0	M5×0.5	22.5		7	
VPMA10P5-3B8	2	10	M4×0.5	21.8	5.8	6	-T8
VPMA10P5-4B8	2.5	10	M5×0.5	22.8		7	
VPMA15P5-3B8	2	15	M4×0.5	22.5	6.5	6	-10
VPMA15P5-4B8	2.5	15	M5×0.5	23.5	0.5	7	
VPMA20P5-3B8	2	20	M4×0.5	23.3	7.3	6	
VPMA20P5-4B8	2.5	20	M5×0.5	24.3	1.5	7	

※.5: Replaced with Pad rubber material code. Refer to page 882 for details.

\* 8: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

\* Pad material N and NE are not suitable for use under ozone environment.

% .Tightening torgue of a pad holder fixing bulkhead nut is 1.5~2N·m.

•Thread size : M4×0.5 ▶ 1~1.2N·m、 •Thread size : M5×0.5 ▶ 1.5~2N·m




#### VPA Fixed type / Top port / Push-in fitting / Standard holder

RoHS Compliant X Copper alloy free available M CAD (2D&3D)



VPA8P568 VPA10P568 VPA15P568 VPA20P568

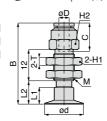

Unit : mm

Model code	Pad O.D. ød	Tube O.D. øD	Thread M	В	L1	L2	Tube end C	Hex. H1	Hex. H2	Т	Connection config. code
VPA8P5-4J8	8	4	M8×0.75	30.3	5.5	8	10.9	10	8	2	
VPA8P5-6J8	0	6	M10×1	31.1	5.5	0	11.7	12	10	3	
VPA10P5-4J8	10	4	M8×0.75	30.6	5.8	8.3	10.9	10	8	2	
VPA10P5-6J8	10	6	M10×1	31.4	5.6	0.5	11.7	12	10	3	-T8
VPA15P5-4J8	15	4	M8×0.75	31.3	6.5	9	10.9	10	8	2	-10
VPA15P5-6J8	15	6	M10×1	32.1	0.0	9	11.7	12	10	3	
VPA20P5-4J8	20	4	M8×0.75	32.1	7.3 9.8	70 00	10.9	10	8	2	
VPA20P5-6J8	20	6	M10×1	32.9		11.7	12	10	3		

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

\* 8: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

\* Pad material N and NE are not suitable for use under ozone environment.


% .Tightening torque of a pad holder fixing bulkhead nut is 2.5~3.5N·m.

VPA

### Fixed type / Top port / Barb fitting / Standard holder

RoHS Compliant X Copper alloy free available of CAD (2D&3D)



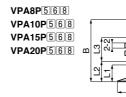



Model code	Pad O.D. ød	Tube I.D. øD	Thread M	В	L1	L2	L3	Hex. H	Connection config. code
VPA8P5-4B8	8	2.5	M5×0.5	23	5.5	7	9	8	
VPA8P5-6B8	0	4	M8×0.75	24.5	5.5	1	10.5	10	
VPA10P5-4B8	10	2.5	M5×0.5	23.3	5.8	7.3	9	8	
VPA10P5-6B8	10	4	M8×0.75	24.8	5.0	7.5	10.5	10	-T8
VPA15P5-4B8	15	2.5	M5×0.5	24	6.5	8	9	8	-10
VPA15P5-6B8	15	4	M8×0.75	25.5	0.5	8	10.5	10	
VPA20P5-4B8	20	2.5	M5×0.5	24.8	7.3	8.8	9	8	
VPA20P5-6B8	20	4	M8×0.75	26.3	1.5	8.8	10.5	10	

ød

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

\* 8: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

\* .Pad material N and NE are not suitable for use under ozone environment.


%. Tightening torque of a pad holder fixing bulkhead nut is 1.5~2N·m.

#### VPMB Fixed type / Side port / Push-in fitting / Mini holder

RoHS Compliant 🕱 Copper alloy free available 🚿 CAD (2D&3D)



VPMB8P568 VPMB10P568 VPMB15P568

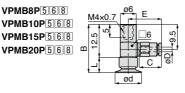

Unit: mm

Model code	Tube O.D.	Pad O.D.	В	L	E	Tube end	Connection
	øD		D			С	config. code
VPMB8P5-180J	1.8					8.4	
VPMB8P5-2J	2	8	18	5.5	12.5	0.4	
VPMB8P5-3J	3	o	10	5.5		9.4	
VPMB8P5-4J8	4				13.5	10.9	
VPMB10P5-180J	1.8			5.8		8.4	
VPMB10P5-2J	2	10	18.3		12.5		-T8
VPMB10P5-3J	3	10	10.5			9.4	
VPMB10P5-4J8	4				13.5	10.9	
VPMB15P5-180J	1.8		19			8.4	-10
VPMB15P5-2J	2	15		6.5	12.5	0.4	-
VPMB15P5-3J	3	15	19	0.5		9.4	
VPMB15P5-4J8	4				13.5	10.9	
VPMB20P5-180J	1.8					8.4	
VPMB20P5-2J	2	20	10.8	7.0	12.5	8.4	-
VPMB20P5-3J	3	20	19.8	7.3		9.4	
VPMB20P5-4J8	4				13.5	10.9	

%. 5: Replaced with Pad rubber material code. Refer to page 882 for details.

※.8: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with 
in the table above.

\* .Pad material N and NE are not suitable for use under ozone environment.




#### VPMB Fixed type / Side port / Barb fitting / Mini holder

RoHS Compliant X Copper alloy free available M CAD (2D&3D)



VPMB8P568 VPMB10P568 VPMB15P568 VPMB20P568

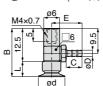

Unit : mm

Model code	Tube I.D. øD	Pad O.D. ød	В	L	E	С	Connection config. code
VPMB8P5-3B8	2				11.4	6	
VPMB8P5-4B8	2.5	8	18	5.5	12.4	7	
VPMB8P5-6B8	4				12.4	· ·	
VPMB10P5-3B8	2				11.4	6	
VPMB10P5-4B8	2.5	10	18.3	5.8	12.4	7	
VPMB10P5-6B8	4				12.4	,	-T8
VPMB15P5-3B8	2				11.4	6	-10
VPMB15P5-4B8	2.5	15	19	6.5	12.4	7	
VPMB15P5-6B8	4				12.4	1	
VPMB20P5-3B8	2				11.4	6	
VPMB20P5-4B8	2.5	20	19.8	7.3	12.4	7	
VPMB20P5-6B8	4				12.4	1	

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

\* .8: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

\* Pad material N and NE are not suitable for use under ozone environment.

#### VPMB Fixed type / Side port / Female thread / Mini holder

RoHS Compliant X Copper alloy free available of CAD (2D&3D)



VPMB8P5-M38 VPMB10P5-M38 VPMB15P5-M38 VPMB20P5-M38



Unit : mm

Model code	Pad O.D. ød	В	L	Connection config. code
VPMB8P5-M38	8	18	5.5	
VPMB10P5-M38	10	18.3	5.8	-T8
VPMB15P5-M38	15	19	6.5	-10
VPMB20P5-M38	20	19.8	7.3	

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

. B: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).


\* .Pad material N and NE are not suitable for use under ozone environment.

### VPB Fixed type / Side port / Push-in fitting / Standard holder

RoHS Compliant X Copper alloy free available M CAD (2D&3D)



VPB8P568 M4×0.7 VPB10P568 VPB15P568 VPB20P568 8 ш

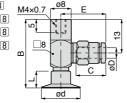

Unit: mm

	Model code	Pad O.D. ød	Tube O.D. øD	В	L	E	Tube end C	Connection config. code
	VPB8P5-180J		1.8			12.7	8.4	
_	VPB8P5-2J		2			12.7	0.4	
_	VPB8P5-3J	8	3	25.5	5.5	16.5	10.9	
_	VPB8P5-4J8		4				10.5	
-	VPB8P5-6J8		6			18.4	11.7	
1	VPB10P5-180J		1.8			12.7	8.4	
1	VPB10P5-2J		2		5.8	12.7	0.4	
1	VPB10P5-3J	10	3	25.8		16.5	10.9	
1	VPB10P5-4J8		4			10.5	10.9	тв
1	VPB10P5-6J8		6			18.4	11.7	
	VPB15P5-180J		1.8			12.7	8.4	-10
<u>'</u>	VPB15P5-2J		2			12.7	0.4	
1	VPB15P5-3J	15	3	26.5	6.5	16.5	10.9	
1	VPB15P5-4J8		4			10.5	10.9	
	VPB15P5-6J8		6			18.4	11.7	
1	VPB20P5-180J		1.8			12.7	8.4	
1	VPB20P5-2J		2	27.3		12.7	0.4	
1	VPB20P5-3J	20	3		7.3	16.5	10.9	
	VPB20P5-4J8		4			10.5	10.9	
1	VPB20P5-6J8		6			18.4	11.7	

\*.5: Replaced with Pad rubber material code. Refer to page 882 for details.

\*. B: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with 8 in the table above.

\* .Pad material N and NE are not suitable for use under ozone environment.




#### VPB Fixed type / Side port / Barb fitting / Standard holder

RoHS Compliant X Copper alloy free available M CAD (2D&3D)



VPB8P568 VPB10P568 VPB15P568 VPB20P568 ш

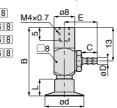

Unit: mm

Model code	Pad O.D. ød	Tube I.D. øD	В	L	E	С	Connection config. code
VPB8P5-3B8		2			12.4	6	
VPB8P5-4B8	8	2.5	25.5	5.5	13.9	7	
VPB8P5-6B8		4			13.9	7	
VPB10P5-3B8		2			12.4	6	
VPB10P5-4B8	10	2.5	25.8	5.8	13.9	7	
VPB10P5-6B8		4			13.9	1	-T8
VPB15P5-3B8		2			12.4	6	-10
VPB15P5-4B8	15	2.5	26.5	6.5	13.9	7	
VPB15P5-6B8		4			13.9	1	
VPB20P5-3B8		2			12.4	6	
VPB20P5-4B8	20	2.5	27.3	7.3	13.9	7	
VPB20P5-6B8		4			13.9	7	

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

※. [8]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).


\* .Pad material N and NE are not suitable for use under ozone environment.

#### VPB Fixed type / Side port / Female thread / Standard holder

RoHS Compliant X Copper alloy free available # CAD (2D&3D)



VPB10P5-M58 VPB15P5-M58 VPB20P5-M58

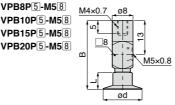

Unit: mm

Model code	Pad O.D. ød	В	L	Connection config. code
VPB8P5-M58	8	25.5	5.5	
VPB10P5-M58	10	25.8	5.8	-T8
VPB15P5-M58	15	26.5	6.5	-10
VPB20P5-M58	20	27.3	7.3	

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.


※. [8]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

\* .Pad material N and NE are not suitable for use under ozone environment.

#### VPME Fixed type / Direct mount / Metric thread / Mini holder

RoHS Compliant X Copper alloy free available of CAD (2D&3D)



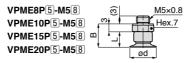

Unit:mm

Model code	Pad O.D. ød			Connection config. code
VPME8P5-M58	8	8.5	5.5	
VPME10P5-M58	10	8.8	5.8	-T8
VPME15P5-M58	15	9.5	6.5	-10
VPME20P5-M58	20	10.3	7.3	

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

\* 8: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).


% .Pad material N and NE are not suitable for use under ozone environment.

% .Tightening torque of a pad holder fixing bulkhead nut is 1~1.5N·m.

#### VPE Fixed type / Direct mount / Metric thread / Standard holder

RoHS Compliant X Copper alloy free available M CAD (2D&3D)



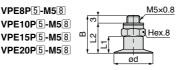

Unit	٠	
Unit	٠	mm

Model code	Pad O.D. ød	В	L1	L2	Connection config. code
VPE8P5-M58	8	13.5	5.5	10.5	
VPE10P5-M58	10	13.8	5.8	10.8	-T8
VPE15P5-M58	15	14.5	6.5	11.5	-10
VPE20P5-M58	20	15.3	7.3	12.3	

%. 5: Replaced with Pad rubber material code. Refer to page 882 for details.

\* . B: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

\* .Pad material N and NE are not suitable for use under ozone environment.

% .Tightening torque of a pad holder fixing bulkhead nut is 1~1.5N·m.



Stroke (mm)

2


Vacuum pad + Spring type holder Dimensions

VPMC Spring type / Top port / Push-in fitting / Mini holder

RoHS Compliant 🕱 Copper alloy free available 🚿 CAD (2D&3D)





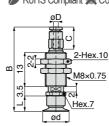

Unit : mm

Model code	Pad O.D. ød	Tube O.D. øD	В	L	Tube end C	Spring force (N)	Connection config. code
VPMC8-2P5-180J		1.8	31.7		8.4		
VPMC8-2P5-2J	8	2	51.7	5.5	0.4	0.5~0.6	
VPMC8-2P5-3J		3	32.7		9.4		
VPMC10-2P5-180J		1.8	32		8.4		
VPMC10-2P5-2J	10	2	52	5.8	0.4	0.5~0.6	
VPMC10-2P5-3J		3	33		9.4	]	-T8
VPMC15-2P5-180J		1.8	32.7		0.4		-10
VPMC15-2P5-2J	15	2	32.7	6.5	8.4	0.5~0.6	
VPMC15-2P5-3J		3	33.7		9.4		
VPMC20-2P5-180J		1.8	33.5		8.4		
VPMC20-2P5-2J	20	2	33.5	7.3	0.4	0.5~0.6	
VPMC20-2P5-3J		3	34.5		9.4		

%. 5: Replaced with Pad rubber material code. Refer to page 882 for details.

% .Pad material N and NE are not suitable for use under ozone environment.


% .Tightening torque of a pad holder fixing bulkhead nut is 2.5~3.5N  $\cdot m.$ 

### VPMC Spring type / Top port / Barb fitting / Mini holder

RoHS Compliant 💥 Copper alloy free available 🚿 CAD (2D&3D)



VPMC8-2P568 VPMC10-2P568 VPMC15-2P568 VPMC20-2P568

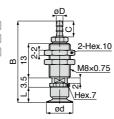



Unit : mm

Model code	Pad O.D. ød	Tube I.D. øD	В	L	С	Spring force (N)	Connection config. code
VPMC8-2P5-3B8		2	30.6		6		
VPMC8-2P5-4B8	8	2.5	31.6	5.5	7	0.5~0.6	
VPMC8-2P5-6B8		4	51.0		1		
VPMC10-2P5-3B8		2	30.9		6		
VPMC10-2P5-4B8	10	2.5	31.9	5.8	7	0.5~0.6	
VPMC10-2P5-6B8		4	31.9		1		-T8
VPMC15-2P5-3B8		2	31.6		6		-10
VPMC15-2P5-4B8	15	2.5	32.6	6.5	7	0.5~0.6	
VPMC15-2P5-6B8		4	32.0		1		
VPMC20-2P5-3B8		2	32.4		6		
VPMC20-2P5-4B8	20	2.5	33.4	7.3	7	0.5~0.6	
VPMC20-2P5-6B8		4	33.4		/		

%. 5: Replaced with Pad rubber material code. Refer to page 882 for details.

\* . B: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

% .Pad material N and NE are not suitable for use under ozone environment.

% .Tightening torque of a pad holder fixing bulkhead nut is 2.5~3.5N·m.




#### VPSC Spring type / Top port / Push-in fitting / Slim holder

RoHS Compliant 💥 Copper alloy free available 🛷 CAD (2D&3D)



VPSC8-3P568 VPSC10-3P568 VPSC15-3P568 VPSC20-3P568

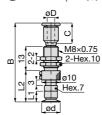

Unit: mm

Stroke (mm)

3

Model code	Pad O.D.	Tube O.D.	В		L2	Tube end	Spring force	Connection
	ød	øD				С	(N)	config. code
VPSC8-3P5-180J		1.8	39.2			8.4		
VPSC8-3P5-2J	8	2	39.2	5.5	16.5	0.4	0.9~1.9	
VPSC8-3P5-3J	0	3	40.2	5.5	10.5	9.4	0.9.01.9	
VPSC8-3P5-4J8		4	42.2	1		10.9		
VPSC10-3P5-180J		1.8	39.5			0.4		
VPSC10-3P5-2J	1	2	39.5	5.8	16.8	8.4	0.9~1.9	
VPSC10-3P5-3J	10	3	40.5	5.0	10.0	9.4	0.9701.9	
VPSC10-3P5-4J8	1	4	42.5	1		10.9	1	-T8
VPSC15-3P5-180J		1.8	40.0			0.4		-10
VPSC15-3P5-2J	15	2	40.2	6.5	17.5	8.4	0.9~1.9	
VPSC15-3P5-3J	1 15	3	41.2	0.0	17.5	9.4	0.9701.9	
VPSC15-3P5-4J8	1	4	43.2	1		10.9	1	
VPSC20-3P5-180J		1.8	41			8.4		
VPSC20-3P5-2J	20	2	41	7.0	10.2	0.4	0.9~1.9	
VPSC20-3P5-3J	20	3	42	7.3	18.3	9.4	0.9701.9	
VPSC20-3P5-4J8		4	44			10.9		

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

※ ⑧: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with ⑧ in the table above.

\* .Pad material N and NE are not suitable for use under ozone environment.

%. Tightening torque of a pad holder fixing bulkhead nut is 2.5~3.5N·m.

# VPSC Spring type / Top port / Barb fitting / Slim holder

RoHS Compliant X Copper alloy free available M CAD (2D&3D)



VPSC8-3P568 VPSC10-3P568 VPSC15-3P568 VPSC20-3P568



Stroke (mm) 3

Unit: mm

Model code	Tube I.D. øD	Pad O.D. ød	В	L1	L2	С	Spring force (N)	Connection config. code
VPSC8-3P5-3B8	2		38.1			6		
VPSC8-3P5-4B8	2.5	8	39.1	5.5	16.5	7	0.9~1.9	
VPSC8-3P5-6B8	4		39.1			ľ		
VPSC10-3P5-3B8	2		38.4			6		
VPSC10-3P5-4B8	2.5	10	39.4	5.8	16.8	7	0.9~1.9	
VPSC10-3P5-6B8	4		39.4			1		-T8
VPSC15-3P5-3B8	2		39.1		17.5	6	0.9~1.9	-10
VPSC15-3P5-4B8	2.5	15	40.1	6.5		7		
VPSC15-3P5-6B8	4		40.1			1		
VPSC20-3P5-3B8	2		39.9			6		
VPSC20-3P5-4B8	2.5	20	40.9	7.3	18.3	7	0.9~1.9	
VPSC20-3P5-6B8	4		40.9			/		

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

\* 8: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

% .Pad material N and NE are not suitable for use under ozone environment.

%. Tightening torque of a pad holder fixing bulkhead nut is 2.5~3.5N·m.

#### VPSC Spring type / Top port / Female thread / Slim holder

RoHS Compliant X Copper alloy free available M CAD (2D&3D)



VPSC8-3P5-M38 VPSC10-3P5-M38 VPSC10-3P5-M38 VPSC10-3P5-M38



Stroke (mm)

Unit : mm

Model code	Pad O.D. ød	В	L1	L2	Spring force (N)	Connection config. code
VPSC8-3P5-M38	8	29.5	5.5	16.5	0.9~1.9	
VPSC10-3P5-M38	10	29.8	5.8	16.8	0.9~1.9	-T8
VPSC15-3P5-M38	15	30.5	6.5	17.5	0.9~1.9	-10
VPSC20-3P5-M38	20	31.3	7.3	18.3	0.9~1.9	

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

. [8]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

\* .Pad material N and NE are not suitable for use under ozone environment.

% .Tightening torque of a pad holder fixing bulkhead nut is 2.5~3.5N·m.






#### VPC Spring type / Top port / Push-in fitting / Standard holder

VPC83P568

RoHS Compliant X Copper alloy free available 🚿 CAD (2D&3D)



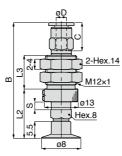



Unit:mm

Mod	el code	Pad O.D.	Tube O.D.	В	L1	L2	L3	Tube end	Stroke	Spring force	Connection
IVIOU			øD				LJ	С			config. code
VPC8-3	P5-180J		1.8	39.9				8.4			
VPC8-3	P5-2J	]	2	39.9				0.4			
VPC8-3	P5-3J	]	3	43.7	1	18	13	10.9	3	1.0~1.9	
VPC8-3	P5-4J8		4	43.7				10.9			
VPC8-3	P5-6J8	]	6	45.6				11.7			
VPC8-1	0P5-180J	]	1.8	51.4				8.4			
VPC8-1	0P5-2J	]	2	51.4				0.4			
VPC8-1	0P5-3J	]	3	55.2		25	17.5	10.9	10	0.8~2.7	
VPC8-1	0P5-4J	]	4	55.2				10.9			
VPC8-1	0P5-6J		6	57.1				11.7			-т8
VPC8-1	5P5-180J		1.8	62.4				8.4			-10
VPC8-1	5P5-2J	]	2	02.4				0.4			
VPC8-1	5P5-3J	]	3	66.2		30	23.5	10.9	15	0.7~3.0	
VPC8-1	5P5-4J		4	00.2				10.9			
VPC8-1	5P5-6J		6	68.1				11.7			
VPC8-2	0P5-180J		1.8	72.4				8.4			
VPC8-2	0P5-2J	]	2	72.4				0.4			
VPC8-2	0P5-3J	]	3	76.2		35	28.5	10.9	20	0.9~3.4	
VPC8-2	0P5-4J	]	4	10.2				10.9			
VPC8-2	0P5-6J		6	78.1				11.7			

\*.5: Replaced with Pad rubber material code. Refer to page 882 for details.

8.8 Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with 8 in the table above.

\* .Pad material N and NE are not suitable for use under ozone environment.

%. Tightening torque of a pad holder fixing bulkhead nut is 1.8~2.4N·m.

RoHS Compliant 🕱 Copper alloy free available 🛷 CAD (2D&3D)



VPC103P568 VPC203P568 vPC203P568 upc203P568 upc203P568



Unit : mm

Model code	Pad O.D. ød	Tube O.D. øD		L1	L2	L3	Tube end C	Stroke S	Spring force (N)	Connection config. code
VPC10-3P5-180J		1.8	40.2				8.4			
VPC10-3P5-2J	1	2	40.2				0.4			
VPC10-3P5-3J	]	3	44	1	18.3	13	10.9	3	1.0~1.9	
VPC10-3P5-4J8	1	4	44				10.9			
VPC10-3P5-6J8	]	6	45.9	]			11.7			
VPC10-10P5-180J		1.8	51.7				8.4			
VPC10-10P5-2J		2	51.7				0.4			
VPC10-10P5-3J		3	55.5		25.3	17.5	10.9	10	0.8~2.7	
VPC10-10P5-4J		4	55.5				10.9			
VPC10-10P5-6J	10	6	57.4	5.8			11.7			-T8
VPC10-15P5-180J	10	1.8	62.7	5.0			8.4			-10
VPC10-15P5-2J		2	02.7				0.4			
VPC10-15P5-3J		3	66.5		30.3	23.5	10.9	15	0.7~3.0	
VPC10-15P5-4J		4	00.5				10.9			
VPC10-15P5-6J		6	68.4				11.7			
VPC10-20P5-180J		1.8	72.7				8.4			
VPC10-20P5-2J		2	12.1				0.4			
VPC10-20P5-3J		3	76.5		35.3	28.5	10.9	20	0.9~3.4	
VPC10-20P5-4J	]	4	70.5				10.9			
VPC10-20P5-6J		6	78.4				11.7			

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

8. B: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with B in the table above.

\*.Pad material N and NE are not suitable for use under ozone environment.

%. Tightening torque of a pad holder fixing bulkhead nut is 1.8~2.4N·m.



Unit:mm

										Unit . mm
Model code	Pad O.D. ød	Tube O.D. øD			L2	L3	Tube end C		Spring force (N)	Connection config. code
VPC15-3P5-180J		1.8	40.9				8.4			
VPC15-3P5-2J	]	2	40.9				0.4			
VPC15-3P5-3J		3	44.7		19	13	10.9	3	1.0~1.9	
VPC15-3P5-4J8	]	4	44.7				10.9			
VPC15-3P5-6J8	]	6	46.6				11.7			
VPC15-10P5-180J	]	1.8	52.4	]			8.4			
VPC15-10P5-2J		2	52.4				0.4			
VPC15-10P5-3J	]	3	56.2	]	26	17.5	10.9	10	0.8~2.7	
VPC15-10P5-4J	]	4	50.2				10.9			
VPC15-10P5-6J	15	6	58.1	6.5			11.7			
VPC15-15P5-180J	15	1.8	63.4	0.5			8.4			
VPC15-15P5-2J		2	00.4				0.4			
VPC15-15P5-3J		3	67.2		31	23.5	10.9	15	0.7~3.0	
VPC15-15P5-4J		4	07.2				10.0			
VPC15-15P5-6J		6	69.1				11.7			
VPC15-20P5-180J		1.8	73.4				8.4			
VPC15-20P5-2J		2		_						
VPC15-20P5-3J		3	77.2		36	28.5	10.9	20	0.9~3.4	
VPC15-20P5-4J		4		1						
VPC15-20P5-6J		6	79.1				11.7			-T8
VPC20-3P5-180J	-	1.8	41.7		19.8	13	8.4		1.0~1.9	
VPC20-3P5-2J	-	2						3		
VPC20-3P5-3J	-	3	45.5				10.9			
VPC20-3P5-4J8	-	4		-						
VPC20-3P5-6J8	-	6	47.4	-			11.7			
VPC20-10P5-180J	-	1.8	53.2				8.4			
VPC20-10P5-2J	-	2		-	00.0	47.5		10	0.0.07	
VPC20-10P5-3J	-	3	57		26.8	17.5	10.9	10	0.8~2.7	
VPC20-10P5-4J VPC20-10P5-6J		4	58.9	-			11.7			
VPC20-10PD-03 VPC20-15P5-180J	20	1.8	56.9	7.3			11.7			
VPC20-15P5-2J	-	2	64.2				8.4			
VPC20-15P5-3J	-	3		-	31.8	23.5		15	0.7~3.0	
VPC20-15P 5-4J		4	68		01.0	20.0	10.9	10	0.0	
VPC20-15P5-6J	-	6	69.9	-			11.7			
VPC20-20P5-180J		1.8		1						
VPC20-20P5-2J		2	74.2				8.4			
VPC20-20P5-3J	1	3		1	36.8	28.5		20	0.9~3.4	
VPC20-20P5-4J		4	78			3 28.5	10.9			
VPC20-20P5-6J		6	79.9	1			11.7			
		-								L

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

※ . B: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with B in the table above.

\*. Pad material N and NE are not suitable for use under ozone environment.

. Tightening torque of a pad holder fixing bulkhead nut is 1.8~2.4N⋅m.

#### VPC Spring type / Top port / Barb fitting / Standard holder

RoHS Compliant X Copper alloy free available H CAD (2D&3D)



VPC83P568 øD VPC103P568 C VPC153P568 M12×1 VPC203P568 с 4-4 2-Hex.14 ш ø13 S Ч Hex.8 ød



Unit : mm	۱
-----------	---

										01111 1 11111	
Model code	Pad O.D. ød	Tube I.D. øD	В	L1	L2	L3	Tube end C	Stroke S	Spring force (N)	Connection config. code	
VPC8-3P5-3B8		2	39.6			ĺ	6				
VPC8-3P5-4B8		2.5		1	18	13	_	3	1.0~1.9		
VPC8-3P5-6B8	1	4	41.1				7				
VPC8-10P5-3B		2	51.1	1			6				
VPC8-10P5-4B	1	2.5	52.6	1	25	17.5	7	10	0.8~2.7		
VPC8-10P5-6B	8	4	52.0	5.5							
VPC8-15P5-3B	) °	2	62.1	] 5.5			6			]	
VPC8-15P5-4B		2.5	63.6	]	30	23.5	7	15	0.7~3.0		
VPC8-15P5-6B		4	03.0				1				
VPC8-20P5-3B		2	72.1				6				
VPC8-20P5-4B		2.5	73.6		35	28.5	7	20	0.9~3.4		
VPC8-20P5-6B		4									
VPC10-3P5-3B8		2	39.9				6				
VPC10-3P5-4B8		2.5	41.4		18.3	13	7	3	1.0~1.9		
VPC10-3P5-6B8	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	4						-			
VPC10-10P5-3B		51.4	-			6					
VPC10-10P5-4B		52.9		25.3	17.5	7	10	0.8~2.7			
VPC10-10P5-6B				5.8						-T8	
VPC10-15P5-3B		10		62.4	-			6			
VPC10-15P5-4B			30.3	30.3 23.5	7	15	0.7~3.0				
VPC10-15P5-6B		4		-							
VPC10-20P5-3B		2	72.4		05.0		6				
VPC10-20P 5-4B		2.5	73.9		35.3	28.5	7	20	0.9~3.4		
VPC10-20P5-6B VPC15-3P5-3B8		4	40.6				6				
VPC15-3P5-3B		2.5	40.0	-	19	13	0	3	1.0~1.9		
VPC15-3P5-6B8		4	42.1		19	13	7	3	1.0. 01.9		
VPC15-3P 5-3B		2	52.1	-			6				
VPC15-10P5-4B		2.5	02.1		26	17.5		10	0.8~2.7		
VPC15-10P 5-6B		4	53.6		20	17.0	7	10	0.0 2.1		
VPC15-15P5-3B	15	2	63.1	6.5			6				
VPC15-15P5-4B		2.5	00.1	1	31	23.5		15	0.7~3.0		
VPC15-15P 5-6B		4	64.6				7				
VPC15-20P5-3B		2	73.1	1			6				
VPC15-20P5-4B		2.5		1	36	28.5		20	0.9~3.4		
VPC15-20P5-6B		4	74.6				7				



	Init	•	mm
· U	1111	٠	

Model code	Pad O.D. ød	Tube I.D. øD	В	L1	L2	L3	Tube end C	Stroke S	Spring force (N)	Connection config. code
VPC20-3P5-3B8		2	41.4				6			
VPC20-3P5-4B8		2.5	42.9		19.8	13	7	3	1.0~1.9	
VPC20-3P5-6B8		4	42.9							
VPC20-10P5-3B	]	2	52.9				6			
VPC20-10P5-4B	]	2.5	54.4		26.8	17.5	7	10	0.8~2.7	
VPC20-10P5-6B	20	4	54.4	7.3			/			-T8
VPC20-15P5-3B	20	2	63.9	1.3			6			-10
VPC20-15P5-4B	1	2.5	65.4		31.8	23.5	7	15	0.7~3.0	
VPC20-15P5-6B	1	4	05.4				/			
VPC20-20P5-3B	1	2	73.9				6			
VPC20-20P5-4B	1	2.5	75.4		36.8	28.5	7	20	0.9~3.4	
VPC20-20P5-6B	1	4	/ 5.4				/			

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

※ . B: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with B in the table above.

\*.Pad material N and NE are not suitable for use under ozone environment.


\*. Tightening torque of a pad holder fixing bulkhead nut is 1.8~2.4N m.

#### VPC Spring type / Top port / Female thread / Standard holder

RoHS Compliant 🕱 Copper alloy free available 🛷 CAD (2D&3D)



VPC83P5-M58 VPC103P5-M58 VPC153P5-M58 VPC203P5-M58

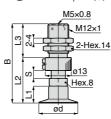



Unit	:	mm	

Model code	Pad O.D. ød	В	L1	L2	L3	Stroke S	Spring force (N)	Connection config. code
VPC8-3P5-M58		31		18	13	3	1.0~1.9	5
VPC8-10P5-M5		42.5		25	17.5	10	0.8~2.7	
VPC8-15P5-M5	8	53.5	5.5	30	23.5	15	0.7~3.0	
VPC8-20P5-M5		63.5		35	28.5	20	0.9~3.4	
VPC10-3P5-M58		31.3		18.3	13	3	1.0~1.9	
VPC10-10P5-M5	10	42.8	50	25.3	17.5	10	0.8~2.7	
VPC10-15P5-M5	10	53.8	5.8	30.3	23.5	15	0.7~3.0	
VPC10-20P5-M5		63.8	1	35.3	28.5	20	0.9~3.4	-T8
VPC15-3P5-M58		32		19	13	3	1.0~1.9	-10
VPC15-10P5-M5	15	43.5	6.5	26	17.5	10	0.8~2.7	
VPC15-15P5-M5	15	54.5	0.0	31	23.5	15	0.7~3.0	
VPC15-20P5-M5		64.5		36	28.5	20	0.9~3.4	
VPC20-3P5-M58		32.8		19.8	13	3	1.0~1.9	
VPC20-10P5-M5	20	44.3	7.3	26.8	17.5	10	0.8~2.7	
VPC20-15P5-M5	20	55.3	1.5	31.8	23.5	15	0.7~3.0	
VPC20-20P5-M5		65.3		36.8	28.5	20	0.9~3.4	

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

※. (B): Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with (B) in the table above.

% .Pad material N and NE are not suitable for use under ozone environment.

%. Tightening torgue of a pad holder fixing bulkhead nut is 1.8~2.4N·m.




#### VPMD Spring type / Side port / Push-in fitting / Mini holder

RoHS Compliant 💥 Copper alloy free available 🛷 CAD (2D&3D)



VPMD8-2P568 VPMD10-2P568 VPMD15-2P568 VPMD20-2P568

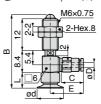



Unit : mm

Madal anda	Pad O.D.	Tube O.D.	В	L	E	Tube end	Spring force	Connection
Model code		øD	D			С	(N)	
VPMD8-2P5-180J		1.8			12.6	8.4		
VPMD8-2P5-2J	8	2	27.5	5.5	12.0	0.4	0.5~0.6	
VPMD8-2P5-3J	0	3	21.5	5.5	13.6	9.4	0.5**0.0	
VPMD8-2P5-4J8		4			15.6	10.9		
VPMD10-2P5-180J		1.8			12.6	8.4		
VPMD10-2P5-2J	10	2	27.8	5.8	12.0	0.4	0.5~0.6	
VPMD10-2P5-3J	10	3	27.0	5.0	13.6	9.4	0.5 - 0.0	
VPMD10-2P5-4J8		4			15.6	10.9		-T8
VPMD15-2P5-180J		1.8			12.6	8.4		-10
VPMD15-2P5-2J	15	2	28.5	6.5	12.0	0.4	0.5~0.6	
VPMD15-2P5-3J	15	3	20.0	0.5	13.6	9.4	0.5.00.0	
VPMD15-2P5-4J8		4			15.6	10.9		
VPMD20-2P5-180J		1.8			12.6	8.4		
VPMD20-2P5-2J	20	2	29.3	7.3	12.0	0.4	0.5~0.6	
VPMD20-2P5-3J	20	3	29.3	1.5	13.6	9.4	0.3 0.0	
VPMD20-2P5-4J8		4			15.6	10.9		

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

\* .8: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with 8 in the table above.

% .Pad material N and NE are not suitable for use under ozone environment.

% .Tightening torque of a pad holder fixing bulkhead nut is 2~3N·m.

# VPMD Spring type / Side port / Barb fitting / Mini holder

RoHS Compliant X Copper alloy free available of CAD (2D&3D)



VPMD8-2P568 VPMD10-2P568 VPMD15-2P568 VPMD20-2P568



Stroke (mm) 2

Unit: mm

Model code	Pad O.D. ød	Tube I.D. øD	В	L	E	С	Spring force (N)	Connection config. code
VPMD8-2P5-3B8		2			11.5	6		
VPMD8-2P5-4B8	8	2.5	27.5	5.5	12.5	7	0.5~0.6	
VPMD8-2P5-6B8		4			12.0	1		
VPMD10-2P5-3B8		2			11.5	6		
VPMD10-2P5-4B8	10	2.5	27.8	5.8	12.5	7	0.5~0.6	
VPMD10-2P5-6B8		4	1		12.5	1		-T8
VPMD15-2P5-3B8		2			11.5	6		-10
VPMD15-2P5-4B8	15	2.5	28.5	6.5	12.5	7	0.5~0.6	
VPMD15-2P5-6B8		4			12.5	1		
VPMD20-2P5-3B8		2			11.5	6		
VPMD20-2P5-4B8	20	2.5	29.3	7.3	12.5	7	0.5~0.6	
VPMD20-2P5-6B8		4			12.5	/		

% .5: Replaced with Pad rubber material code. Refer to page 882 for details.

\* 8: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

% .Pad material N and NE are not suitable for use under ozone environment.


% .Tightening torque of a pad holder fixing bulkhead nut is 2~3N·m.

# VPMD Spring type / Side port / Female thread / Mini holder

RoHS Compliant X Copper alloy free available M CAD (2D&3D)



VPMD8-2P5-M38 VPMD10-2P5-M38 VPMD15-2P5-M38 VPMD20-2P5-M38

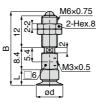

Stroke (mm) 2

Unit : mm

Model code	Pad O.D. ød	В	L	Spring force (N)	Connection config. code
VPMD8-2P5-M38	8	27.5	5.5	0.5~0.6	
VPMD10-2P5-M38	10	27.8	5.8	0.5~0.6	-T8
VPMD15-2P5-M38	15	28.5	6.5	0.5~0.6	-10
VPMD20-2P5-M38	20	29.3	7.3	0.5~0.6	

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

\* 8: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

\* .Pad material N and NE are not suitable for use under ozone environment.

% .Tightening torque of a pad holder fixing bulkhead nut is 2~3N·m.






VPD Spring type / Side port / Push-in fitting / Standard holder

VPD83P568

RoHS Compliant X Copper alloy free available 🚿 CAD (2D&3D)



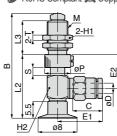



Unit:mm

															0111	
Model code	Pad O.D. Ød	Tube O.D. Ø D	Thread M	В	L1	L2	L3	øP	E1	E2	Tube end C	Hex. H1	Hex. H2	т	Stroke S	Spring force (N)
VPD8-3P5-180J		1.8							12.7		8.4					
VPD8-3P5-2J	1	2	1						12.7		8.4					
VPD8-3P5-3J	]	3	M8×0.75	39.5		27	13	10	16.5	13	10.9	10	8	2	3	1.0~1.9
VPD8-3P5-4J8	]	4	]						10.5		10.9					
VPD8-3P5-6J8	]	6							18.4		11.7					
VPD8-10P5-180J	]	1.8							14.7		8.4					
VPD8-10P5-2J		2							14.7		0.4					
VPD8-10P5-3J		3		54.6		34	17.5		18.5	21	10.9				10	0.8~2.7
VPD8-10P5-4J		4							10.0		10.3					
VPD8-10P5-6J	_	6			_				19.9		11.7					
VPD8-15P5-180J		1.8							14.7		8.4					
VPD8-15P5-2J		2							14.7		0.4					
VPD8-15P5-3J		3	M12×1	65.6		39	23.5	13	18.5	26	10.9	14	12	4	15	0.7~3.0
VPD8-15P5-4J		4							10.0		10.0					
VPD8-15P5-6J		6							19.9		11.7					
VPD8-20P5-180J		1.8							14.7		8.4					
VPD8-20P5-2J		2							14.7		0.4					
VPD8-20P5-3J		3		75.6		44	28.5		18.5	31	10.9				20	0.9~3.4
VPD8-20P5-4J		4														
VPD8-20P5-6J		6							19.9		11.7					

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.


※ .[8]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with I in the table above.

% .Pad material N and NE are not suitable for use under ozone environment.

% .Tightening torque of a pad holder fixing bulkhead nut is 1.8~2.4N·m.

#### RoHS Compliant 🕱 Copper alloy free available 🛷 CAD (2D&3D)



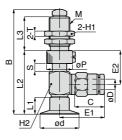



Unit : mm

Model code	Pad O.D.	Tube O.D.	Thread	В	L1	L2	L3	øP	E1	E2	Tube end	Hex.	Hex.	т	Stroke	Spring force
	ød	øD	М								С	H1	H2		S	(N)
VPD10-3P5-180J		1.8							12.7		8.4					
VPD10-3P5-2J		2							12.7		0.4					
VPD10-3P5-3J		3	M8×0.75	39.8		27.3	13	10	16.5	13	10.9	10	8	2	3	1.0~1.9
VPD10-3P5-4J8		4							10.5		10.5					
VPD10-3P5-6J8		6	]						18.4		11.7					
VPD10-10P5-180J		1.8							447		0.4					
VPD10-10P5-2J		2	1						14.7		8.4					
VPD10-10P5-3J		3	1	54.9		34.3	17.5			21					10	0.8~2.7
VPD10-10P5-4J		4	1						18.5		10.9					
VPD10-10P5-6J		6							19.9		11.7					
VPD10-15P5-180J	10	1.8			5.8											
VPD10-15P5-2J		2							14.7		8.4					
VPD10-15P5-3J		3	M12×1	65.9		39.3	23.5	13		26		14	12	4	15	0.7~3.0
VPD10-15P5-4J		4							18.5		10.9					
VPD10-15P5-6J		6							19.9		11.7					
VPD10-20P5-180J		1.8														
VPD10-20P 5-2J		2							14.7		8.4					
VPD10-20P 5-3J		3		75.9		44.3	28.5			31					20	0.9~3.4
VPD10-20P5-4J		4							18.5		10.9					
VPD10-20P5-6J		6							19.9		11.7					

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

VPD103P568

VPD153P568

VPD203P568

. B: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).

\* .Pad material N and NE are not suitable for use under ozone environment.

※.Tightening torque of a pad holder fixing bulkhead nut is 1.8~2.4N⋅m.



Unit:mm

															Uni	t:mm
Model code	Pad O.D. ød	Tube O.D. ø D	Thread M	В	L1	L2	L3		E1	E2	Tube end C	Hex. H1	Hex. H2	т	Stroke S	Spring force (N)
VPD15-3P5-180J		1.8							12.7		8.4					
VPD15-3P5-2J		2	-													
VPD15-3P5-3J		3	M8×0.75	40.5		28	13	10	16.5	13	10.9	10	8 🗌	2	3	1.0~1.9
VPD15-3P5-4J8		4	-													
VPD15-3P5-6J8		6							18.4		11.7					
VPD15-10P5-180J		1.8 2	-						14.7		8.4					
VPD15-10P5-2J		2	-	55.6		35	17.5			21					10	0.8~2.7
VPD15-10P5-3J VPD15-10P5-4J		4	-	0.00		35	17.5		18.5	21	10.9					0.01~2.1
VPD15-10P5-6J		6	1						19.9		11.7					
VPD15-10PD-03 VPD15-15P5-180J	15	1.8	-		6.5				19.9		11.7					<u> </u>
VPD15-15P 5-2J		2	1						14.7		8.4					
VPD15-15P5-3J		3	M12×1	66.6		40	23.5	13		26	<u> </u>	14	12	4	15	0.7~3.0
VPD15-15P5-4J		4	11112-1	00.0			20.0	10	18.5	20	10.9	14	12	-	10	0.0
VPD15-15P5-6J		6							19.9		11.7					
VPD15-20P5-180J		1.8														<u> </u>
VPD15-20P5-2J		2							14.7		8.4					
VPD15-20P5-3J		3		76.6		45	28.5		10.5	31	10.0				20	0.9~3.4
VPD15-20P5-4J		4	1						18.5		10.9					
VPD15-20P5-6J		6							19.9		11.7					
VPD20-3P5-180J		1.8							12.7		8.4					
VPD20-3P5-2J		2	]						12.7		0.4					
VPD20-3P5-3J		3	M8×0.75	41.3		28.8	13	10	16.5	13	10.9	10	8	2	3	1.0~1.9
VPD20-3P5-4J8		4							10.0		10.3					
VPD20-3P5-6J8		6							18.4		11.7					
VPD20-10P5-180J		1.8							14.7		8.4					
VPD20-10P5-2J		2														
VPD20-10P5-3J		3	-	56.4		35.8	17.5		18.5	21	10.9				10	0.8~2.7
VPD20-10P5-4J		4	-													
VPD20-10P5-6J	20	6	-		7.3				19.9		11.7					
VPD20-15P5-180J		1.8	-						14.7		8.4					
VPD20-15P5-2J		2		07.4		40.0	00.5	10					10		15	
VPD20-15P5-3J		3	M12×1	67.4		40.8	23.5	13	18.5	26	10.9	14	12	4	15	0.7~3.0
VPD20-15P5-4J		4	-						19.9		11.7					
VPD20-15P5-6J VPD20-20P5-180J		6 1.8	-						19.9		11.7					
VPD20-20P5-180J VPD20-20P5-2J		1.8	-						14.7		8.4					
VPD20-20P5-2J VPD20-20P5-3J		2	-	77.4		45.8	28.5			31					20	0.9~3.4
VPD20-20P5-3J VPD20-20P5-4J		4	-	11.4		40.0	20.5		18.5	51	10.9				20	0.8 - 0.4
VPD20-20P 5-6J		6	1						19.9		11.7					
VI DZ0-Z0F 2-0J		0							19.9		1.1.7					

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

※ [8]: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with [8] in the table above.

\*.Pad material N and NE are not suitable for use under ozone environment.


%. Tightening torque of a pad holder fixing bulkhead nut is 1.8~2.4N·m.

# VPD Spring type / Side port / Barb fitting / Standard holder

RoHS Compliant 🐹 Copper alloy free available 🚿 CAD (2D&3D)



VPD83P568 VPD103P568 VPD153P568 VPD203P568

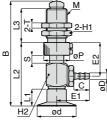



						<u>'''</u> /	L	<b></b>							Unit	t:mm
Model code	Pad O.D. ød	Tube I.D. Ø D	Thread M	В	L1	L2	L3	øP	E1	E2	С	Hex. H1	Hex. H2	Т	Stroke S	Spring force (N)
VPD8-3P5-3B8		2							12.4		6					
VPD8-3P5-4B8	1	2.5	M8×0.75	39.5		27	13	10	40.0	13	-7	10	8	2	3	1.0~1.9
VPD8-3P5-6B8	1	4	1						13.9		7					
VPD8-10P5-3B		2			1				14.4		6					
VPD8-10P5-4B		2.5	1	54.6		34	17.5		15.9	21	7				10	0.8~2.7
VPD8-10P5-6B	8	4	1		5.5				15.9		/					
VPD8-15P5-3B	°	2	1		5.5				14.4		6					
VPD8-15P5-4B		2.5	M12×1	65.6		39	23.5	13	15.9	26	7	14	12	4	15	0.7~3.0
VPD8-15P5-6B		4							15.9		'					
VPD8-20P5-3B		2	]						14.4		6					
VPD8-20P5-4B		2.5	]	75.6		44	28.5		15.9	31	7				20	0.9~3.4
VPD8-20P5-6B		4							15.9		1					
VPD10-3P5-3B8		2							12.4		6					
VPD10-3P5-4B8		2.5	M8×0.75	39.8		27.3	13	10	13.9	13	7	10	8	2	3	1.0~1.9
VPD10-3P5-6B8		4							13.5		'					
VPD10-10P5-3B		2							14.4		6					
VPD10-10P5-4B		2.5		54.9		34.3	17.5		15.9	21	7				10	0.8~2.7
VPD10-10P5-6B	10	4			5.8				10.0		'					
VPD10-15P5-3B		2			0.0				14.4		6					
VPD10-15P5-4B		2.5	M12×1	65.9		39.3	23.5	13	15.9	26	7	14	12	4	15	0.7~3.0
VPD10-15P5-6B		4							10.0		,					
VPD10-20P5-3B		2							14.4		6					
VPD10-20P5-4B		2.5		75.9		44.3	28.5		15.9	31	7				20	0.9~3.4
VPD10-20P5-6B		4							.0.0							
VPD15-3P5-3B8		2							12.4		6					
VPD15-3P5-4B8		2.5	M8×0.75	40.5		28	13	10	13.9	13	7	10	8	2	3	1.0~1.9
VPD15-3P5-6B8		4														
VPD15-10P5-3B		2							14.4		6					
VPD15-10P5-4B		2.5		55.6		35	17.5		15.9	21	7				10	0.8~2.7
VPD15-10P5-6B	15	4			6.5											
VPD15-15P5-3B	-	2							14.4		6					
VPD15-15P5-4B		2.5	M12×1	66.6		40	23.5	13	15.9	26	7	14	12	4	15	0.7~3.0
VPD15-15P5-6B		4														
VPD15-20P5-3B		2	-						14.4		6					
VPD15-20P5-4B		2.5		76.6		45	28.5		15.9	31	7				20	0.9~3.4
VPD15-20P 5-6B		4	1	1	1	1	1						1	1	1	

VPD15-20P5-6B



Unit : n	nm
----------	----

Model code	Pad O.D. Ød	Tube I.D. Ø D	Thread M	В	L1	L2	L3	øP	E1	E2	С	Hex. H1	Hex. H2	Т	Stroke S	Spring force (N)
VPD20-3P5-3B8		2							12.4		6					
VPD20-3P5-4B8		2.5	M8×0.75	41.3		28.8	13	10	13.9	13	7	10	□8	2	3	1.0~1.9
VPD20-3P5-6B8		4							13.9							
VPD20-10P5-3B		2							14.4		6					
VPD20-10P5-4B		2.5	-	56.4	7.3	35.8	8 17.5		15.9	21 26	7	14	12	4	10	0.8~2.7
VPD20-10P5-6B	20	4							15.9		'					
VPD20-15P5-3B	20	2			1.3	40.8	40.8 23.5		14.4		6				15	0.7~3.0
VPD20-15P5-4B		2.5	M12×1	67.4					15.9		7					
VPD20-15P5-6B		4	-						15.9		'					
VPD20-20P5-3B		2		77.4					14.4		6	1				
VPD20-20P5-4B		2.5			45.8	5.8 28.5	28.5	15.9	31	7	1			20	0.9~3.4	
VPD20-20P5-6B		4							15.9							

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

※ . B: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with B in the table above.

\*.Pad material N and NE are not suitable for use under ozone environment.


\*. Tightening torque of a pad holder fixing bulkhead nut is 1.8~2.4N·m.

#### VPD Spring type / Side port / Female thread / Standard holder

RoHS Compliant 🕱 Copper alloy free available 🚿 CAD (2D&3D)



VPD83P5-M58 VPD103P5-M58 VPD153P5-M58 VPD203P5-M58

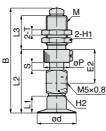



Unit: mm

Madal aada			В		L2	L3	øΡ	E						
Model code	ød	М			LZ	LJ				H1	H2		(N)	config. code
VPD8-3P5-M58		M8×0.75	39.5		27	13	10	13	3	10	8 🗌	2	1.0~1.9	
VPD8-10P5-M5	8		54.6	5.5	34	17.5		21	10				0.8~2.7	
VPD8-15P5-M5	) °	M12×1	65.6	5.5	39	23.5	13	26	15	14	12	4	0.7~3.0	
VPD8-20P5-M5	]		75.6		44	28.5		31	20				0.9~3.4	
VPD10-3P5-M58		M8×0.75	39.8		27.3	13	10	13	3	10	□8	2	1.0~1.9	
VPD10-10P5-M5	10		54.9	5.8	34.3	17.5		21	10				0.8~2.7	
VPD10-15P5-M5		M12×1	65.9	5.0	39.3	23.5	13	26	15	14	12	4	0.7~3.0	
VPD10-20P5-M5			75.9		44.3	28.5		31	20				0.9~3.4	-T8
VPD15-3P5-M58		M8×0.75	40.5		28	13	10	13	3	10	8	2	1.0~1.9	-10
VPD15-10P5-M5	15		55.6	6.5	35	17.5		21	10				0.8~2.7	
VPD15-15P5-M5	] 15	M12×1	66.6	0.5	40	23.5	13	26	15	14	12	4	0.7~3.0	
VPD15-20P5-M5			76.6		45	28.5		31	20				0.9~3.4	
VPD20-3P5-M58		M8×0.75	41.3		28.8	13	10	13	3	10	8	2	1.0~1.9	
VPD20-10P5-M5	20		56.4	7.3	35.8	17.5		21	10				0.8~2.7	
VPD20-15P5-M5	20	M12×1	67.4	1.5	40.8	23.5	13	26	15	14	12	4	0.7~3.0	
VPD20-20P5-M5			77.4		45.8	28.5		31	20				0.9~3.4	

%. 5: Replaced with Pad rubber material code. Refer to page 882 for details.

\* . B: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts). -S3 spec. is available for model codes with 8 in the table above.


% .Pad material N and NE are not suitable for use under ozone environment.

%. Tightening torque of a pad holder fixing bulkhead nut is 1.8~2.4N·m.



#### VPF Spring type / Direct mount / Metric thread / Standard holder

RoHS Compliant X Copper alloy free available of CAD (2D&3D)

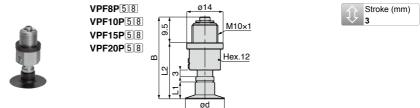

#### Unit : mm

Model code	Pad O.D. ød	В	L1	L2	Spring force (N)	Connection config. code
VPF8P58	8	30.5	5.5	21	2.3~3.9	
VPF10P58	10	30.8	5.8	21.3	2.3~3.9	-T8
VPF15P58	15	31.5	6.5	22	2.3~3.9	-10
VPF20P58	20	32.3	7.3	22.8	2.3~3.9	

%.5: Replaced with Pad rubber material code. Refer to page 882 for details.

\* . B: Replaced with "-S3" for -S3 spec. (Copper alloy free material for metal parts and FKM or HNBR for sealing parts).


\* Pad material N and NE are not suitable for use under ozone environment.

% .Tightening torque for fixing a pad holder is 4.5~6N·m.

# A Vacuum Pad Series

#### Vacuum Pad Ultrathin Series


Construction (Vacuum Pad Holder and Vacuum Pad Ultrathin Series)

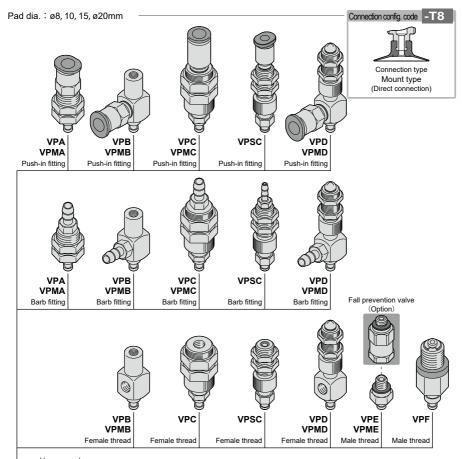



vacuum pad	
Pad model code	Pad dia.
VP8P5	ø8mm
VP10P5	ø10mm
VP15P5	ø15mm
VP20P5	ø20mm
-	

- %The Fitting model code for option "-S3" is different from that of standard products. Contact us for details.
- Model code of Vacuum Pad Holder alone is following. Contact us for price.
   Model designation (Example)

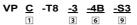

- 1 : Holder type, 3: Stroke(For spring type holder only. VPF holder is excluded.),
- 6 : Port size · type, 9:-S3 spec.

#### Vacuum Pad

# ▲ Common Safety Instructions for Vacuum Pads

Before selecting or using PISCO products, read the following instructions. Read the detailed instructions for individual series.

# A Warning

- 1. Take safety measures in advance where a dropping work-piece can cause danger.
- 2. Make sure to install a vacuum pad holder securely. Looseness may cause trouble.
- 3.Pay special attention to the work conveyance by screwed vacuum pads, accompanied by rotary movement. There is a possibility of troubles due to the looseness of screws from the rotary movement.
- 4. There is a possibility of troubles due to the leakage of vacuum system, clogging, vacuum pad abrasion, crack, deterioration, the galling of slider part in the holder and the looseness in joints. Carry out maintenance inspection periodically.
- 5.When a work-piece is conveyed by a vacuum pad, consider the acceleration, impacts and wind pressure. Otherwise, the work-piece may drop during conveyance.

# ▲ Caution

- 1. Thoroughly read and understand the theoretical suction force in this catalog before selecting diameter, Qty and suction place of vacuum pads. Select vacuum pads with enough margin in suction force.
- 2. The product incorporating NBR as seal rubber material has a risk of malfunction caused by ozone crack. Ozone exists in high concentrations in static elimination air, clean-room, and near the high-voltage motors, etc. As a countermeasure, material change from NBR to HNBR or FKM is necessary. Consult with Pisco for more information.
- 3. Select the material of vacuum pad in accordance with use environment and ease of use, referring to "Selecting Method".
- 4.Select the suitable pad shape (type) in accordance with a work-piece and its shape, referring to "Characteristics of Pad Material".
- 5.Select spring-holder type when work-pieces have different heights or are weak against an external force. Select the suitable holder type, referring to spring force and spring length in the catalog.
- 6.Since spring-holder type has a sliding action, minimize the transverse load. Otherwise, the life time of the holder can be reduced or malfunction of the holder can occur.
- 7.In replacing vacuum pads, check the structure of holders and pads in the catalog and tighten the hexagonalcolumn of the holder with a proper tool, referring to the following tightening torque.

- 5 5 1		
Vacuum pad holder	Standard	Mini
Pad screw size (mm)	Tightening t	orque (N·m)
M4×0.7	0.5 ~ 1.0	0.9 ~ 1.1
M6×1	2~	2.7
M10×1.5	5~7	-
M20×2	9 ~ 10	-

#### Table tightening torgue

8.In replacing the adapters of Soft / Soft Bellows Series, check the structure of holders, pad and adapters and tighten the hexagonal-column of the holder with a proper tool, referring to the following tightening torque.

#### • Table. tightening torque

Pad screw size (mm)	Tightening torque (N⋅m)
M4×0.7	0.7 ~ 0.8
M6×1	1.5 ~ 2.0



-	· · ·	•			• ·	
Vacuum pad holder		Standard			Mini	
Vacuum pad holder type	VPA	VPC, VPD, VPF, VPHC, VPHD, VPHDW	VPE	VPMA	VPMC, VPMD	VPME
Bulkhead nut size (mm)			Tightening t	orque (N·m)		
M3×0.5	—	—	0.7	—	_	0.7
M4×0.5	—	—	—	1 ~ 1.2		
M4×0.7	1 ~ 1.2	—	—	—	_	—
M5×0.5	1.5 ~ 2	—	—	1.5 ~ 2	_	—
M5×0.8	—	_	1 ~ 1.5	—	_	1 ~ 1.5
M6×0.75	2~3	—	—	2 ~	- 3	—
M8×0.75	2.5 ~ 3.5	1.8 ~ 2.4	—	2.5 -	- 3.5	_
M8×1	—	1.8 ~ 2.4	—	—	—	—
M10×1	5~7	4.5 ~ 6	—	5~7	4~6	_
M12×1	12 ~ 14	8~10	—	—	_	—
M14×1	18 ~ 21	4.5 ~ 6	_	—	_	_
M16×1	18~21(※)	2~3	_	—	—	
M20×1	19 ~ 21	_	_	—	_	—
M22×1	19~21(※)	16 ~ 20	_	—	—	
M24×2	40 ~ 50	_	—	—	—	
M30×2	—	42 ~ 54	—	_	_	—

# 9.In installing vacuum pad holders of general and small type with bulkhead, check the structure and tighten the hexagonal-column of the holder with a proper tool, referring to the following tightening torque.

\*Values for Vacuum pad holder for Packaging bag series.

10.In replacing vacuum pad rubbers of Standard Series ø80, ø100mm, ø150mm, ø200mm and Bellows Series ø80mm, ø100mm, check the structure of holders and pads and tighten the hexagonal-column of the holder with a proper tool, referring to the following tightening torque.


• Table. tightening torque

Pad screw size (mm)	Tightening torque (N·m)
M4×0.7	05.07
M5×0.8	0.5 ~ 0.7

11. Check the structure of vacuum pad in the catalog before replacing a filter element.

12.Refer to "Common Safety Instructions for Fittings" for handing fitting joint parts.

- 13.In installing spring-holder type, do not hold the shaft A with a spanner. In replacing vacuum pad, hold the hexagonal-column of the shaft with a spanner. If the keyway B is deformed, there is a possibility of malfunction.
- 14.Excessive tightening of a fixing nut may deform the bulkhead part and result in malfunction of the keyway.
- 15.As the nature of rubber, powdery component like additives may come out on the surface of a vacuum pad as time elapses.

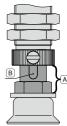

### Vacuum Pad

# Vacuum Pad Selection Guide

Selection Guide 1 > Select the diameter of vacuum pad from the formula ① and chart of the theoretical suction force ②


The theoretical suction force is determined from pad area and vacuum level. Calculated value is for reference only, so carry out the evaluation under an actual operating condition. The theoretical suction force is calculated under a static condition. Obtain an enough margin, considering the weight of a work-piece and acceleration of lifting, pause and rotary movement. Enough room is needed in deciding a number of pads and arrangement position.


1) Calculation by formula

w =

- W : Suction force(N)
- C : Pad area(cm<sup>2</sup>)
- P ∶ Vacuum level -kPa
- f : Safety factor Horizontal lifting (refer to the right fig.) ▶ 1/4 Vertical lifting (refer to the right fig.) ▶ 1/8
- \*1.Refer to the following chart for Sponge Series.(Internal diameter is used for calculation)
- \*2.Refer to the following chart for Flat Series.(Pad grooves are used for calculation)
- \*3.As for Bellows, Multi-Bellows, Soft, Soft Bellows and Ultrathin Series, their theoretical suction force may exceed the strength of pad itself, depending on the vacuum level. Carry out the evaluation under an actual operating condition.
- O Chart of the theoretical suction force <Add safety factor to values from the chart> –

Standard / Bellows / Multi-bellows / Soft / Soft bellows / Skidproof / Ultrathin / Mark-free (\*)

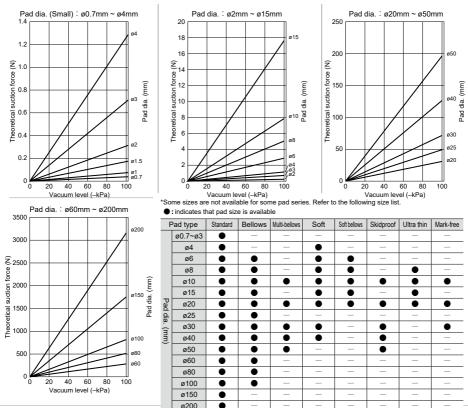


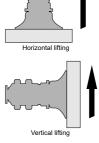



Vacuum Pao




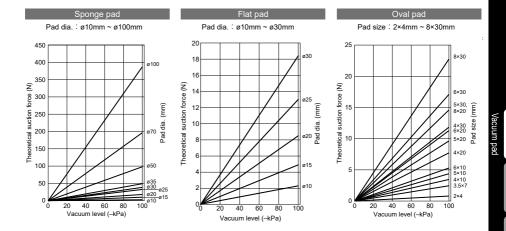

## Vacuum Pad

### Selection Guide 2 > Select a vacuum pad type according to a work-piece.

Please select suitable pads for your application from the following.

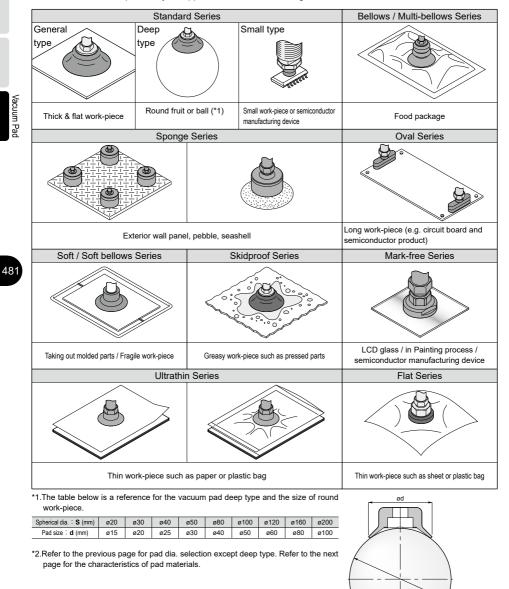

es



Vacuum pad

482

Selection Guide 2 
Select a vacuum pad material from an application...

<u>FIE</u>	ase sele	ect the suita	ple ma	tenai ir	om me	lable.									
Iter	n	Pad material	Nitrile rubber	NBR Suited for the food sanitation act. (Japan)	HNBR	Silicone rubber	Conductive Silicone rubber	Urethane rubber	Fluoro rubber	Fluorosilicone rubber	EPDM	Conductive Butadiene rubber (Low resistance type)	Conductive NBR (low resistance)	Chloroprene rubber (For Sponge type)	Silicone rubber (For Sponge Type)
		Material code	N, NH (*1)	G	HN	s	SE	U	F	FS	EP	E	NE	-	S
			Card	board	Cardboard	Semicor	nductors	Cardboard	Chemical	Taking out	Application	General	Semi-	Uneven	Uneven
			Plyv	vood	Plywood	Takin	ng out	Plywood	environment	molded	that	pars of	conductors	work-piece	work-piece
			Metal	l plate	Metal plate	molde	d parts	Metal plate	High temp.	parts	requires	semicon-			Food-
			Food-r	related	Food-related	Thin wo	rk-piece		work-		light- resistant or	ductors			related
			Other of	general	Other general	Food-r	related		pieces		ozoneproof				
Ap	plication			ork	work						In use				
					In use under						under the				
					a low ozone						moisture				
					concentration						containing				
					environment						atmosphere				
Pa	d color		Black	Gray	Black	Translucent	Black	Blue	Grav	Salmon	Black	Black	Black	Black	Salmon
Ċ		Standard	50°~80°	60°~70°	50°~70°	50°	60°	55°~70°	60°~70°	-	50°~70°	70°	60°~70°	_	-
		Bellows	50°	-	50°	50°	60°	55°	60°	-	50°	-	60°	-	-
		Multi-bellows	50°	50°	50°	50°	-	55°	50°	-	50°	-	60°	-	-
	Surface	Oval	40°~50°	-	50°	40°~50°	50°~60°	55° (*2)	50° (*2)	-	50°	70°	70°	-	-
	hardness	Soft	40°	-	-	40°	60°	-	-	40°	-	-	50°	-	-
	(Shore A)	Soft bellows	40°	-	50°	40°	-	55°	-	-	50°	-	60°	-	-
Ph		Skidproof	50°	-	-	50°	-	55°	60°	-	-	-	60°	-	-
ysic		Ultrathin	40°	-	-	40°	-	55°	50°	40°	-	-	60°	-	-
Physical Properties		Flat	60°	-	-	40°	40°	50°	50°	-	-	-	60°	-	-
rop	Highest ope			0°C	140°C	-	0°C	60°C	230°C	180°C	150°C	100°C	110°C	80°C	180°C
erti	Lowest oper			0°C	-30°C		0°C	-20°C	-10°C	-50°C	-40°C	-50°C	-30°C	-45°C	-40°C
es	Weathera			<u> </u>	0	0		0	0	0	O	0	$\triangle$	0	0
	Ozone-pro			×	0	0		O	O	O	0	×	×	0	0
	Acid-resis			<u>^</u>	$\triangle$	0		×	O	0	O	$\triangle$	$\triangle$	$\triangle$	0
	Alkaline-re		(		0	-	0	×	×	O	O	0	0	O	0
	Oil	(Gasoline oil)		0	O		<u>^</u>	O	0	$\triangle$	×	×	O	×	$\triangle$
		(Benzene/toluene)		<u> </u>	×		<u> </u>	$\triangle$	0	$\triangle$	×	×	$\triangle$	$\triangle$	$\triangle$
	Volume re	sistance	-	-	-	-	Max. 10⁵Ω·cm	-	-	-	-	Max. 200Ω-cm	Max. 2000-cm	-	-

### Please select the suitable material from the table.

Legend C 🗇 Eest

 $\bigcirc$  : Suitable

riangle : Good

×∶NG

\*1.Material code "NH" is only available for Skidproof Series.

\*2.It does not apply to pad size: 4×30mm.

Note 1). The above "Physical Properties" shows the data of general synthetic rubbers.

Note 2). The highest / lowest operating temp. is for momentary usage. Carry out durability evaluation in case of continuous usage under the highest / lowest operating temp.

# Vacuum Pad Series

### Please select the suitable vacuum pad resin material from the table.

		•••••	e canabie racaani paa i			
			Pad material	PEEK	POM	Conductive PEEK
Iter	~	Material	Mark free series	К	М	KE
nei	11		Resin attachment for Bellows	-QK	014	OKE
		code	series	-QN	-QM	-QKE
				Manufacturing machine for	General production line	Manufacturing machine for
Ap	plication			liquid crystal / semiconductor	Food-related machine	liquid crystal / semiconductor
					Packaging machine	Electronic components
Pa	d color	Natural (ivory) White Black				Black
	Highest op	eratin	g temp.	250°C	95°C	250°C
P	Lowest ope	erating	g temp.	-50°C	-60°C	-50°C
Physical	Weatherab	ility	·	0	×	0
	Acid-resist	ance		0	×	0
Prop	Alkaline-re	sistan	се	0	$\triangle$	0
Properties	Self-lubricit	ty	·	0	O	0
ies	Abrasion-re	esista	nce	0	0	0
	Volume res	sistand	ce	-	-	10⁵~10⁰Ω·cm

Vacuum Pao

Legend C 💿 : Best

⊖ : Suitable

riangle : Good

X ∶NG


Note 1). The above "Physical Properties" shows the data of pad resin material only. The holder of Mark-free Series is not included.

Note 2). The above "Physical Properties" shows the data of resin attachment only. The pad rubber is not included.


Note 3). The above "Physical Properties" shows a general properties of resin materials and not a guaranteed value. Carry out the necessary evaluation under an actual operating condition.

Note 4). The highest / lowest operating temp. is for momentary usage. Carry out durability evaluation in case of continuous usage under the highest / lowest operating temp.

Note 5).Volume resistance is a representative value from the material manufacture, and not a guaranteed value.

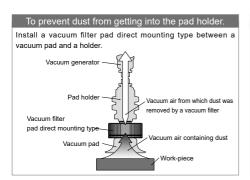

### To prevent dust from getting into the pad holder.

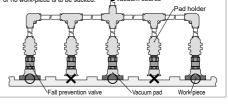


483



# Reference Guide for Vacuum Pad


#### Impact on pad

Avoid an impact or a large force on a vacuum pad, when it is pressed against a work-piece. It may cause deformation, crack or abrasion at an early stage of use. Adjust the pad position so that the lip of pad touches lightly on a workpiece. Especially a small type of vacuum pad should be positioned precisely.

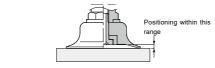


#### Large and wide flat plate work-piece

When lifting large size of glass board or circuit board, work-piece may bend by the lifting acceleration or the self-weight. Select a proper size of pad and positioning, considering an enough margin of suction force.

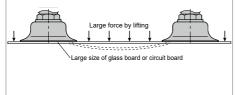

### Soft work-piece

When soft work-pieces such as plastic bags, papers or thin boards are sucked, work-pieces can be deformed or shrunk by vacuum suction (Figure-1). Select smaller vacuum pads and reduce the vacuum pressure. Smaller vacuum pads are suitable for plastic bags and papers. When plastic / paper bags are opened by using vacuum pads, shift the center of two vacuum pads slightly in order to open them easily as Figure-2 shows.

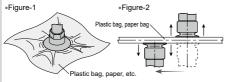


#### Inclined work-piece

Select Free Holder for an inclined work-piece.


### Porous or perforated work-piece

Since the suction of a porous work-piece causes a drop of suction force, select the proper specifications of vacuum system and secure a larger effective crosssection area of the piping. Selecting a small type of vacuum pad is one of solutions to reduce the air leakage.

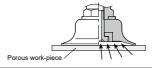


#### Lifting work-piece, sucking the both side of it

Since all vacuum pad holders are designed for horizontal lifting, consider the strength of holders and pads.

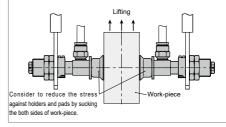


#### Work-piece with different heights

Select Long Stroke holders for work-pieces having different heights, or piled-up work-pieces. Its stroke can absorb the difference in height.

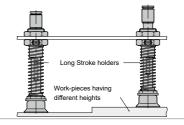

#### Conveyance with rotary movement

When vacuum pad is fixed with a screw and has a rotary movement, the pad may drop due to the loosened screw. Pay special attention when the vacuum location of work-piece is off the center of work-piece gravity.

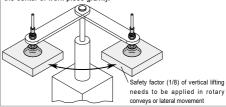

# A Vacuum Pad Series


## Vacuum Pad

### Pad dia. list by pad type and material

Pa	ad material				N	: Nitrile rubb	er			
F	Pad type	General type	Standard Deep type	Small type	Bellows	Multi- Bellows	Soft	Soft bellows	Ultrathin	Flat
	ø0.7	Ochoral type	Deep type			Dellows		DCIIOWS		
	ø1			•						
	ø1.5									
	ø2									
	ø3									
	ø4						•			
	ø6						•	•		
п	ø8	•						•		
Pad	ø10	•			•	•	•			•
dia. (mm)	ø15	•								•
n	ø20	•				•		•		•
m	ø25	•	•		•					
Ŭ	ø30	•	•			•	•			•
	ø40	•				•				
	ø50									
	ø60									
	ø80									
	ø100	•	•		•					
	ø150									
	ø200									

•: Available

Vacuum Pad

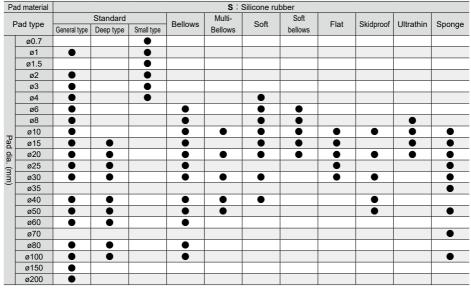





Vacuum pad

486

Pa	d material				U :	Urethane rul	ober			
	ad type		Standard		Bellows	Multi-	Soft bellows	Skidproof	Ultrathin	Flat
-	au type	General type	Deep type	Small type	Dellows	Bellows	Solt bellows	Okiapiooi	Oluaulin	Fidt
	ø0.7									
	ø1			•						
	ø1.5			•						
	ø2									
ſ	ø3	•		•						
	ø4			•						
ſ	ø6	•			•		•			
_	ø8	•					•		•	
ad	ø10	•			•	•		•	•	•
di i	ø15	•	•		•		•		•	•
<u>,</u>	ø20	•	•		•	•	•	•	•	•
Pad dia. (mm)	ø25		•		•					•
	ø30	•	•		•	•		•		•
	ø40	•	•		•	•		•		
Ī	ø50	•	•		•	•		•		
	ø60		•		•					
	ø80	•	•		•					
	ø100		•							
	ø150	•								
	ø200									


•: Available

Pa	d material				F : Fluor	o rubber				G : NBR S	Suited for the for	ood sanitation	act. (Japan)
_	ad turns		Standard		Bellows	Multi-	Chidaraaf	I literathin	Flat		Standard		Multi-
F	ad type	General type	Deep type	Small type	Dellows	Bellows	Skidproof	Ultrathin	Fiat	General type	Deep type	Small type	Bellows
	ø0.7												
[	ø1												
	ø1.5			•								•	
	ø2												
ĺ	ø3	•		•									
	ø4	•		•									
	ø6												
_	ø8												
Pad dia. (mm)	ø10	•			•	•	•		•				•
<u>a</u> .	ø15								•		•		
<u> </u>	ø20				•	•	•	•	•	•			•
mr	ø25								•				
$\sim$	ø30	•			•	•	•		•		•		•
	ø40												۲
[	ø50	•				•							۲
	ø60	•	•		•								
	ø80		•		•								
	ø100	•			•								
	ø150	•											
	ø200												

•: Available

# A Vacuum Pad Series

### Vacuum Pad

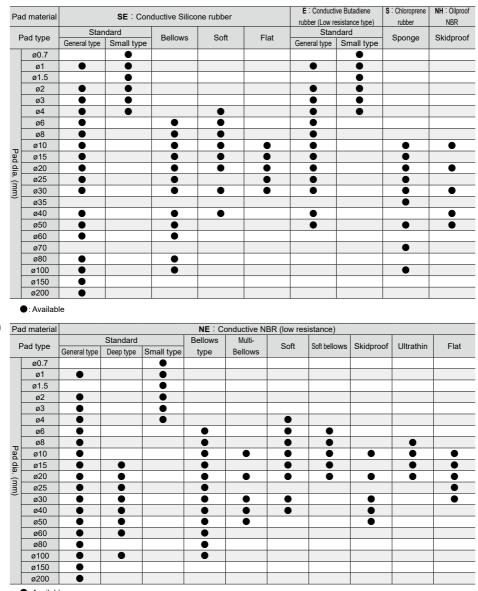

: Available



Vacuum pad

488

Pad n	naterial			HN : I	INBR			EP : EPDM						FS : Fluorosilicone rubber	
Devi	1.4	:	Standard	4	Dellering	Multi-	Soft		Standard	ł	Bellows	Multi-	Soft	0.4	1.114
Pad	type	General type	Deep type	Small type	Bellows	Bellows	bellows	General type	Deep type	Small type	type	Bellows	bellows	Soft	Ultrathin
	ø0.7			•											
	ø1	•		•				•							
	ø1.5			•						•					
	ø2	•													
	ø3	٠		۲											
	ø4	•						•		•					
	ø6	•			•		•	•			•		•		
_	ø8	•									۲				
Pad dia. (mm)	ø10	•			•	•		•			•		•		•
d	ø15	•			•						•				
	ø20	۲			٠	۲			۲		۲		•		
	ø25	•							•		•				
	ø30	•	•		•	•		•	•		•	•			
	ø40	•				•					•				
	ø50	•			•	•			•		•				
	ø60	•			•				•		•				
	ø80	•	•		•			•	•		•				
	ø100	•							•		•				
	ø150	•						•							
	ø200	•													
•	Availab	le													

Pa	d material	<b>N</b> Nitrile rubber	<b>S</b> Silicone rubber	<b>U</b> Urethane rubber	<b>F</b> Fluoro rubber	SE Conductive Silicone rubber	E Conductive Butadiene rubber (Low resistance type)	NE Conductive NBR (Low resistance type)	HN HNBR	EP EPDM
F	Pad type					Oval				
	2×4	•	•	•	•	•		•	•	•
Ì	3.5×7	•		•	•	•		•	•	•
Ĩ	4×10	•	•	•	•	•	•	•	•	•
ĺ	4×20	•	•	•	•	•	•	•	•	•
D.	4×30	•	•			•	•	•	•	•
Pad dia.	5×10	•	•	•	•	•	•	•	•	•
la	5×20	•	•	•	•	•	•	•	•	•
(mm)	5×30	•		•	•	•	•	•	•	•
E	6×10	•	•	•	•	•	•	•	•	•
ĺ	6×20	•	•	•	•	•	•	•	•	•
	6×30	•	•	•	•	•	•	•	•	•
	8×20									
	8×30	•							•	

•: Available


Pad material		K : PEEK	M : POM	KE : Conductive PEEK	Q2K : PEEK	Q2M : POM	Q2KE : Conductive PEEK	
Pad type			Mark free		Resin attachment for Bellows series			
Pa	ø10	•	•	•	•	•	•	
ă	ø15				•	•		
la	ø20	•	•	•	•	•	•	
Ξĺ	ø25				•	•	•	
<u>=</u> [	ø30	•	•	•	•	•	•	

•: Available


# A Vacuum Pad Series

### Vacuum Pad



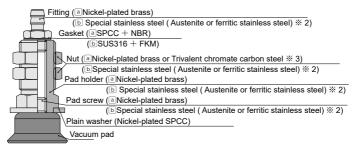

## Construction (VPC holder : Spring type / Top port)

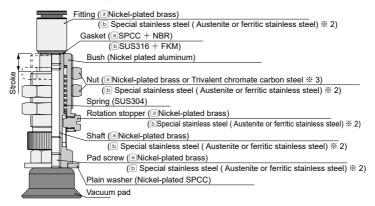

%1. a : Standard spec. b : "-S3" spec.

%2. SUS303 equivalent corrosivity

%3. Nut material differs depending on the bulkhead thread size. See below table for details.

Bulkhead thread size	Nut m	aterial
(mm)	Nickel-plated brass	Trivalent chromate carbon steel
M5×0.5	0	_
M6×0.75	0	-
M8×0.75	0	_
M10×1	0	—
M12×1	_	0
M14×1	_	0
M16×1	_	0
M20×1	_	0
M22×1	_	0
M24×2	0	—
M30×2	0	—

# A Safety Instructions

This safety instructions aims to prevent personal injury and damage to properties by requiring proper use of PISCO products.

Be certain to follow ISO 4414 and JIS B 8370.

ISO 4414 : Pneumatic fluid power...General rules and safety requirements for system and their components.

JIS B 8370 : General rules and safety requirements for systems and their components.

This safety instructions is classified into "Danger", "Warning" and "Caution" depending on the degree of danger or damages caused by improper use of PISCO products.

Danger Hazardous conditions. It can cause death or serious personal injury.
 Warning Hazardous conditions depending on usages. Improper use of PISCO products can cause death or serious personal injury.

**Caution** Hazardous conditions depending on usages. Improper use of PISCO products can cause personal injury or damages to properties.

# \land Danger |

- 1.Do not use PISCO products for the following applications.
  - ①.Equipment used for maintaining / handling human life and body.
  - 2. Equipment used for moving / transporting human.
  - ③.Equipment specifically used for safety purposes.

# 🕂 Warning

### 1.Selection of pneumatic products

- ①.A user who is a pneumatic system designer or has sufficient experience and technical expertise should select pneumatic equipments.
- ② .Due to wide variety of operating conditions and applications for PISCO products, carry out the analysis and evaluation on PISCO products. The pneumatic system designer is solely responsible for assuring that the user's requirements are met and that the application presents no health or safety hazards. All designers are required to fully understand the specifications of PISCO products and constitute all systems based on the latest catalog or information, considering any malfunctions.

### 2.Usage environment

Do not use PISCO products under the following conditions.

- 1 .Beyond the specifications or conditions stated in the catalog, or the instructions.
- Use at outdoors
- ③.Excessive vibrations and impacts.
- ④.Exposure / adhere to corrosive gas, flammable gas, chemicals, seawater, water and vapor.



### 3.Handling of product

- Handle the pneumatic equipment with enough knowledge and experience. Mishandling of compressed air is dangerous. A person having enough knowledge and experiences should carry out assembly, operation, and maintenance of devices equipped with pneumatic equipments.
- (2).Do not operate machine / equipment or remove pneumatic equipment until safety is confirmed.
  - (1).Make sure that preventive measures against falling work-pieces or sudden movements of machine are completed before inspection or maintenance of these machine.
  - (2) .Make sure the above preventive measures are completed. A compressed air supply and the power supply to the machine must be off, and also the compressed air in the systems must be exhausted.
  - (3).Restart the machines with care after ensuring to take all preventive measures against sudden movements.
- ③.Do not disassemble or modify PISCO products, which affect the performance, function, and basic structure of the product.
- ④.Take safety measures such as providing a protection cover if there is a risk of causing damages or fire on machine / facilities by a fluid leakage.
- ⑤.Do not touch the release-ring of a push-in fitting when there is a working pressure. The lock may be released by the physical contact, and tube may fly out or slip out.
- 6 .Frequent switchover of compressed air may generate heat, and there is a risk of causing burn injury.
- ⑦ .Avoid any load on PISCO products, such as, a tensile strength, twisting and bending. Otherwise, there is a risk of causing damage to the products.
- ⑧.Do not use PISCO products for applications where threads or tubes swing / rotate. The product can be damaged in these applications.
- ⑨.Do not swing or rotate resin body of the products by force. It may damage to the products and cause a fluid leakage.
- ID not supply excessively dry air to products. It may cause malfunction due to a deterioration of rubber parts.
- 1. Do not wash or paint products with water or solvent. Solvent may damage a resin body, or painting may cause malfunction.
- 12. The product incorporating NBR as seal rubber or gasket material has a risk of malfunction caused by ozone crack. Ozone exists in high concentrations in static elimination air, clean-room, and near the high-voltage motors, etc. As a countermeasure, material change from NBR to HNBR or FKM is necessary. Consult with Pisco for more information.
- ID not stand on a product, or put anything on it. It may cause falls, personal injury or damage to the product.

### Safety Instructions

### Warranty

When the product produces a trouble, which is caused by our responsibility, we will carry out either one of the following measures immediately.

①.Free-of-charge replacement of same product

②.Free-of-charge repair of the product at our factory

### Disclaimer

- 1.PISCO does not take any responsibility for any incidental or indirect loss, such as production line stop, interruption of business, loss of benefits, personal injury, etc., caused by any failure on use or application of PISCO products.
- 2.When a cause of the trouble/malfunction applies to any of the following items, it is excluded from the coverage of the above warranty.
  - ① .A case by a natural disaster, a fire except our responsibility, the act by the third person/party, the intention or fault of the customer.
  - ② A case when a product is used out of the specific range or in a method listed in the product catalog or the instruction manual.
  - ③ A case by the remodeling of the product or by a change of structure, performance, or specifications which PISCO does not involved in.
  - ④ A case by the event that is unpredictable by the evaluations and the measures at the time on or before the initial delivery.
  - (5). A case caused by the phenomenon that is able to be evaded if your machine or equipment has functions or structures that are comprised in a common sense when this product is incorporated in your machine or equipment.
- 3.The damages caused by the defect of Pisco products shall be covered but limited to the full amount of the PISCO products paid by the customer. Additionally, the above warranty is limited simply to the product itself. The damage induced by the trouble of the product will not be compensated.



# Common Safety Instructions for Products in This catalog

# \land Caution

1.An odd noise may be heard when supply pressures are immediately before the peak of vacuum levels. The sounding of this odd noise means the characteristics are unstable and the sound may become even noisier. This situation can also adversely affect the sensor, resulting in a malfunction or trouble. So reset the supply pressure.

% Pressure range in which odd noise occurs is affected by atmospheric pressure.

- 2.Piping design and equipment selection should be made with an effective sectional area on supply pressure side of a vacuum generator being 3 times as large as the nozzle diameter as a standard. Insufficient air flow may impair the performance of the product.
- 3.Do not use a lubricator on products.
- 4.Clean or replace silencer element periodically. There is a possibility of dropping the performance or causing troubles by clogging on the element.
- 5.Keep products away from water, oil drops or dusts because they are neither drip-proof nor dust-proof. Otherwise there is a possibility of causing malfunction, damage to the products, or dropping the performance.
- 6.Piping
  - Compressed air contains a volume of drain (water, oxidized oil, tar and foreign material, etc.) Because the drain reduce product performance remarkably, dehumidify air with an aftercooler and a dryer, and improve the air quality.
  - ②.Do not use a lubricator on products.
  - ③ .Rust in pipe and inflow of foreign substances cause the trouble, malfunction, and degradation of the product. Please install a filter (5µm or better filtration) in the compressed air supply line right in front of the product. The flushing inside the pipe before use and in certain intervals is recommended.
  - ④.Remove dusts or drain before piping. They may get into the peripheral machine / facilities and cause malfunction.
  - (5) When inserting an ultra-soft tube into push-in fitting, make sure to place an Insert Ring into the tube edge. There is a risk of causing the escape of tube and a fluid leakage without using an Insert Ring.
  - (6) Arrange piping avoiding any load on fittings and tubes such as twist, tensile, moment load, shaking and physical impact. These may cause damages to fittings, tube deformations, bursting and the escape of tubes.
  - ⑦.Install protective cover when using at a place getting the direct sunlight.
  - (8) .Be sure to confirm each port of a vacuum generator with its appearance drawing or the marking on it before piping. Incorrect piping has a risk of damaging the product.
  - ③ .Plumb a pressure sensor and a vacuum generator with pressure sensor at the end of vacuum system as much as possible. A long distance between a pressure sensor and a vacuum system end may increase plumbing resistance which may lead to a high vacuum level at the sensor even when no suctioning and a malfunction of pressure sensor. Make sure to evaluate the products in an actual system.
  - (10) A Shorter distance of plumbing with a wider bore is preferable at vacuum system side. A long plumbing with a small bore may result in slow response time at the time of releasing work-piece as well as in failure to secure adequate suction flow rate.


 In case of using non-PISCO brand tubes, make sure the tolerance of the outer tube diameter is within the limits of Table 1.


mm size	Nylon tube	Polyurethane tube	inch size	Nylon tube	Polyurethane tub
ø1.8mm	—	±0.05mm	ø1/8	±0.1mm	±0.15mm
ø2mm	—	±0.05mm	ø5/32	±0.1mm	±0.15mm
ø3mm	-	±0.15mm	ø3/16	±0.1mm	±0.15mm
ø4mm	±0.1mm	±0.15mm	ø1/4	±0.1mm	±0.15mm
ø6mm	±0.1mm	±0.15mm	ø5/16	±0.1mm	±0.15mm
ø8mm	±0.1mm	±0.15mm	ø3/8	±0.1mm	±0.15mm
ø10mm	±0.1mm	±0.15mm	ø1/2	±0.1mm	±0.15mm
ø12mm	±0.1mm	±0.15mm	ø5/8	±0.1mm	±0.15mm
ø16mm	±0.1mm	±0.15mm			

•Table 1. Tube O.D. Tolerance

### 7-1.Tube insertion (Push-in fitting)

- ①.Make sure that the cut end surface of the tube is at a right angle without a scratch on the tube surface or deformations.
- ②.When inserting a tube, the tube needs to be inserted fully into the push-in fitting until the tubing edge touches the tube end of the fitting as shown in the figure below. Otherwise, there is a risk of leakage.

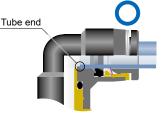

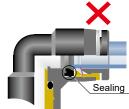

\_\_\_\_

Tube is not fully inserted up to tube end.

- ③ .After inserting the tube, make sure it is inserted properly and not to be disconnected by pulling it moderately.
  - When inserting tubes, Lock-claws may be hardly visible in the hole, observed from the front face of the release-ring. But it does not mean the tube will surely escape. Major causes of the tube escape are the followings; ① Shear drop of the lock-claws edge ② The problem of tube diameter (usually small)Therefore, follow the above instructions from ① to ③, even lock-claws is hardly visible.
- 7-2.Tube insertion (Compression fitting)
  - ①.Make sure that the cut end surface of the tube is at a right angle without deformations or a scratch on its inner and outer surface.
  - ② .Pass the tube through the nut and insert the barb into the tube up to the barb end. Then tighten the hexagonal-column of the nut with a proper tool.
  - ③.Refer to Table 2 which shows the tightening torque.
    - ※ Hold the tube when tightening the nut, since the tube may rotate along with the nut.



- ④.Make sure that the nut touches the metallic body. If not, loosen the nut, disconnect the tube and start over again from the process ①
- (5).Make sure that there is no leakage after tightening the nut.
- 6 .After inserting the tube, make sure it is inserted properly and not to be disconnected by pulling it moderately.

• Table 2. Nut tightening torque							
Tube O.D.	Tightening torque						
ø10	Max. 4N·m						
ø12	Max. 5N·m						
ø16	Max. 14N·m						

- 8-1.Tube disconnection (Push-in fitting)
  - ①.Make sure there is no air pressure inside of the tube, before disconnecting it.
  - ② Push the release-ring of the push-in fitting evenly and deep enough to pull out the tube toward oneself. By insufficient pushing of the release-ring, the tube may not be pulled out or damaged by scratch, and tube shavings may remain inside of the fitting, which may cause the leakage later.
- 8-2. Tube disconnection (Compression fitting)
  - ①.Make sure there is no air pressure inside of the tube, before disconnecting it.
  - ②.Use a proper tool to loosen the nut. Then disconnect the tube.
- 9.Installation of a fitting
  - When installing a fitting, use proper tools to tighten a hexagonal-column or an inner hexagonal socket. When inserting a hex key into the inner hexagonal socket of the fitting, be careful so that the tool does not touch lock-claws. The deformation of lockclaws may result in a poor performance of systems or an escape of the tube.
  - 2. Refer to Table 3 in the next page which shows the tightening torque, when tightening a thread. Do not exceed these limits to tighten a thread. Excessive tightening may break the thread part or deform the gasket to cause a fluid leakage. Tightening thread with tightening torque lower than these limits may cause a loosened thread or a fluid leakage. Since the sealability is affected by the processing condition of the installing part, adjust the tightening torque or correct the installing part, according to the condition.
  - ③.Adjust the tube direction while tightening thread within these limits, since some PISCO products are not rotatable after the installation.

Table 5. Tightening torque / Sealock color / Gasket materials									
Thread type	Thread size	Tightening torque	Sealock color	Gasket material					
	M3×0.5	0.7N∙m							
	M5×0.8	1 ~ 1.5N∙m		SUS304+NBR SPCC+NBR					
	M6×1	2 ~ 2.7N∙m							
Metric thread	M3×0.5	0.7N∙m	n/a						
	M5×0.8 1 ~ 1.5N·m		РОМ						
	M6×0.75	0.8 ~ 1N∙m		FOIN					
	M8×0.75	1 ~ 2N·m							
	R1/8	4.5 ~ 6.5N·m							
Tonor nine thread	R1/4	7 ~ 9N∙m	White	_					
Taper pipe thread	R3/8	12.5 ~ 14.5N·m	VVIIILE						
	R1/2	20 ~ 22N·m							
Unified thread	No.10-32UNF	1 ~ 1.5N∙m	n/a	SUS304+NBR, SPCC+NBR					
	1/16-27NPT	4.5 ~ 6.5N·m							
National Pipe	1/8-27NPT	4.5 ~ 6.5N·m							
Thread Taper (American	1/4-18NPT	7 ~ 9N∙m	White	-					
standard)	3/8-18NPT	12.5 ~ 14.5N·m							
otanuara)	1/2-14NPT	20 ~ 22N·m							
	G1/4	12 ~ 14N∙m							
G thread	G3/8	22 ~ 24N·m	n/a	Aluminum + PBT					
	G1/2	28 ~ 30N∙m							

Table 3	Tightening	torque	/ Sealock color	/ Gasket materials
	nunterina	loruue		/ Gaskel malenais

% These values may differ for some products. Refer to each specification as well.

- ④.When removing a fitting, use proper tools to loosen a hexagonal-column. When inserting a hex key into the inner hexagonal socket of the fitting, be careful so that the tool does not touch lock-claws. The deformation of lock-claws may result in a poor performance of systems or an escape of the tube.
- ⑤.Remove the sealant stuck on the mating equipment. The remained sealant may get into the peripheral equipment and cause malfunctions.

### 10.Handling of PISCO products

- ①.Impact caused by dropping or the like may lead to damage to the product and a fluid leakage.
- 11.PISCO products shall be used within the Operating temp. range, including the heat of the product itself generated by adiabatic compression.